 


SUZANNE KASLER

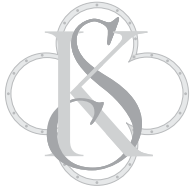

BALLARD DESIGNS



Customer Service: 800-367-2810
Online: www.ballarddesigns.com

 
 



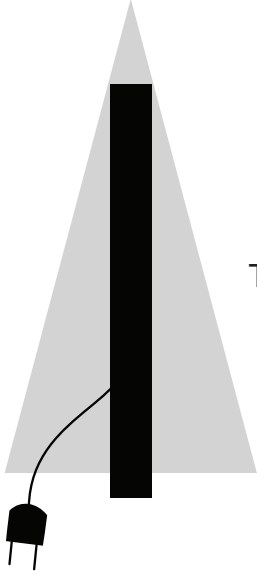 

INDOOR USE ONLY

Before every use, thoroughly inspect tree for cut, frayed, or damage wires or cords, exposed copper, loose connections or cracks in sockets.

PRODUCT NAME: SK Flocked Frasier Fir Tabletop Tree 3ft
ITEM NUMBER: HT010
ASSEMBLED DIMENSIONS : 36"H x 29" Diameter



Ltr.	Qty.	Hardware Included
A	4	 Spare Bulbs (2.5V MAX/Incandescent)
B	2	 Twinkle Bulbs (2.5V MAX/Incandescent)
C	1	 Spare Fuses (3 AMP/125V)

Ltr.	Qty.	Components Included
D	1	 Tree (D)
E	1	 Burlap Ball (E)



Cleaning and Care

DO NOT EXPOSE TO HEAT OR WATER
Store in cool, dry location protected from sunlight.
Read all instructions and warnings/Retain for future reference.

PRODUCTS ARE NOT INTENDED
FOR COMMERCIAL USE.
UPDATED: 5-3-2023

 
MADE IN CHINA

Page 1 of 3

 Assemble in location for intended use.

ASSEMBLY: Insert Tree (D) into Burlap Ball (E).

FLUFF BRANCHES: Work one section at a time, beginning with lowest branches and work upward. Begin with tips closest to center. Fan out, bending up and outward.

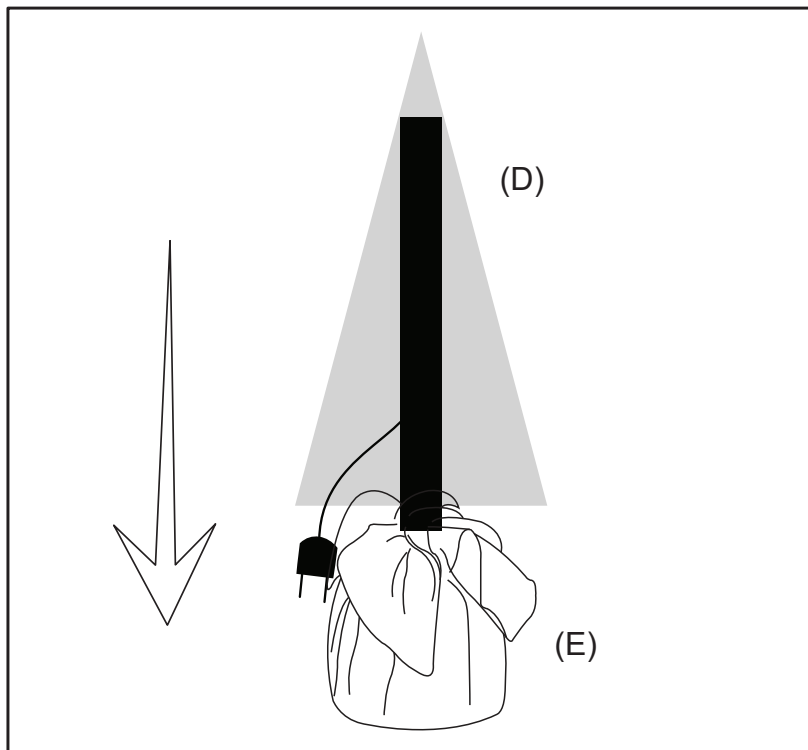

TROUBLESHOOTING

PROBLEM: Entire tree will not illuminate.

Check Outlet. Does it have power. Is it on a switch?

Check Plug. Is it fully seated into outlet?

Check Fuse: Follow instructions on PAGE 3 and replace fuse in plug on Bottom section.

Check Wire(s): Are any pulled loose from a socket? Cut or frayed? If so, unplug and do not use.

PROBLEM: Sections of tree will not illuminate.

Check Connections. Is Top section plugged into Base section?

Check Top Section Plug. Is it fully seated into Base connection?

Check Fuse: Follow instructions on PAGE 3 and replace fuse located inside plug on Top section.

 
Check Bulbs: Are any loose or missing from a socket? Replace. All bulbs must be working and fully seated into socket.

Check Wire(s): Are any pulled loose from a socket? Cut or frayed? If so, unplug and do not use.



Bulb Replacement

1. To avoid overheating, replace burned-out light bulbs promptly. Replace using **2.5V INCANDESCENT** bulbs.
2. Unplug cord from wall outlet.
3. Pull light bulb and its attached plastic base straight out of socket.
4. Replace light bulb with only **2.5V INCANDESCENT**.

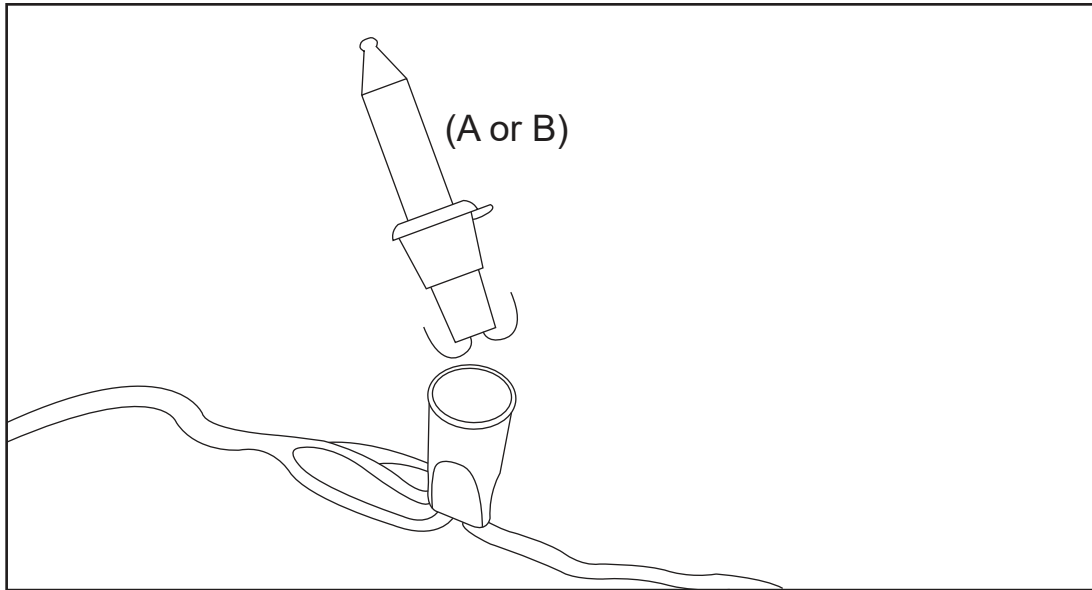

Fuse Replacement

1. Unplug cord from wall outlet.
2. Slide open fuse access cover on top of attachment plug towards plug's metal prongs.
3. Remove blown fuse carefully and put in a replacement Fuse (C).

FIRE RISK: Replace using 3AMP/125V FUSE only!

4. Cover fuse access on plug.

