BALLARD DESIGNS.




PRODUCT NAME: Staked Twinkling Frasier Fir Tree 4ft

ITEM NUMBER: HT041

ASSEMBLED DIMENSIONS: 48"H x 30" Diameter



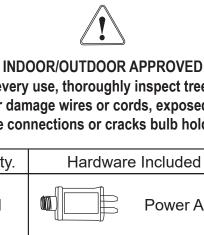

Before every use, thoroughly inspect tree for cut, frayed, or damage wires or cords, exposed copper, loose connections or cracks bulb holders.

| Ltr. | Qty. | Hardware Included | |
|------|------|-------------------|--|
| А | 1 | Power Adapter | |
| В | 1 | Control Module | |

| Ltr. | Qty. | Components Included | |
|------|------|---------------------------------|--|
| С | 1 | Top (C) (with LEDs and cord) | |
| D | 1 | Bottom (D) (with LEDs and cord) | |
| E | 1 | Stake (E) | |




Cleaning and Care

DO NOT EXPOSE TO HEAT Store in cool, dry location. Read all instructions and warnings/Retain for future reference.

PRODUCTS ARE NOT INTENDED FOR COMMERCIAL USE. UPDATED: 5-2-2023

MADE IN CHINA Page 1 of 3

Assemble in location for intended use.

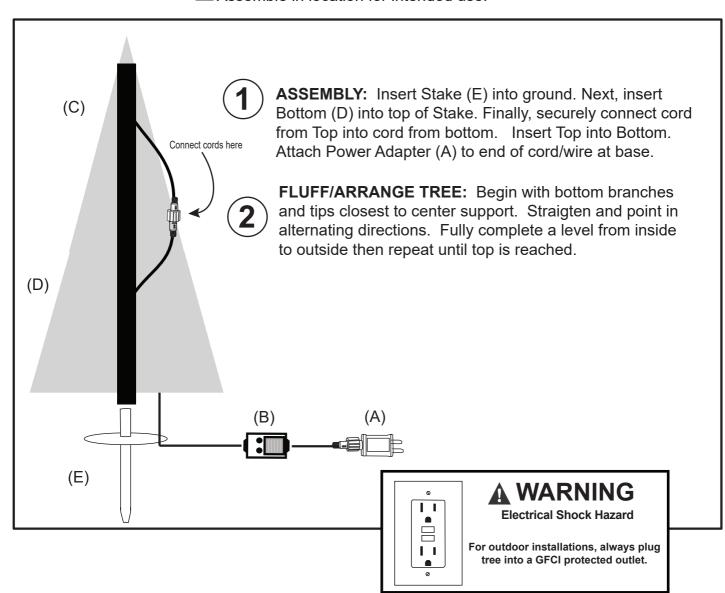

TROUBLESHOOTING

PROBLEM: Tree will not illuminate.

Check Outlet. Does it have power. Is it on a switch? GFCI and needs to be reset?


Check Plug. Is it fully seated into outlet?

Check Power Adapter: Is it fully seated and tight?

Check Wire(s): Are any pulled loose from a bulbt? Cut or frayed? If so, uplug and do not use.



CONTROL MODULE

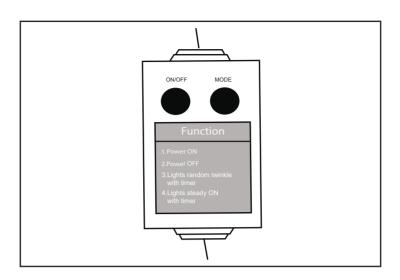

| SELECT | DESCRIPTION | OPERATION |
|--------|---|---------------------------|
| ON | Power ON | Press ON/OFF button once |
| OFF | Power OFF | Press ON/OFF button twice |
| MODE | Lights random twinkle with timer functions (6 hours ON, 18 hours OFF) | Press MODE button once |
| MODE | Lights steady ON with timer functions (6 hours ON, 18 hours OFF) | Press MODE button twice |

SPECIFICATIONS: LIGHT SOURCE: LED

ELECTRICIAL SPECIFICATIONS: 120V - 60HZ - 0.5A

UP LISTED ADAPTOR: 29V

UL LISTED: E338180

