 




PRODUCT NAME: Eldridge Rectangular Chandelier

ITEM NUMBER: LC860

ASSEMBLED DIMENSIONS: 13 1/2" - 55 1/2"H Drop x 40"W x 14"D

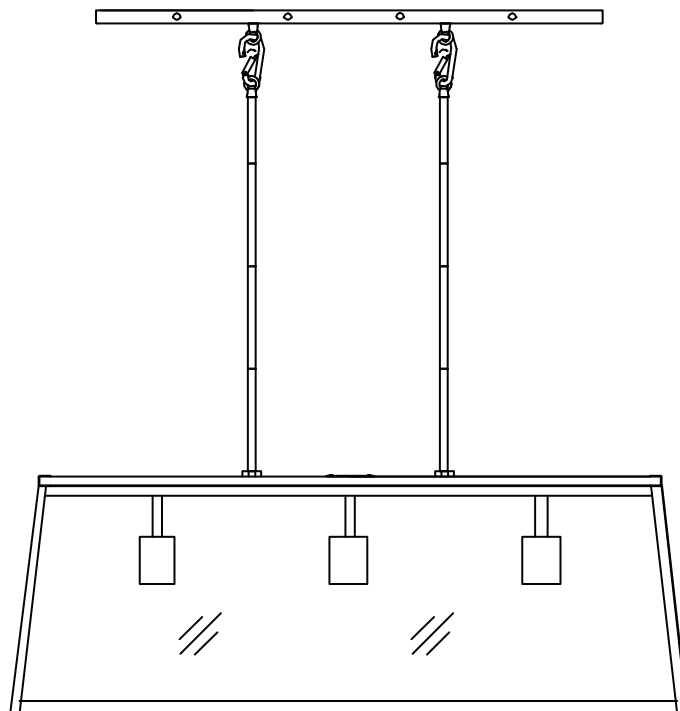

IMPORTANT SAFETY INSTRUCTIONS:

- We strongly recommend that a professional electrician install all direct wire fixtures.
- These Assembly Instructions are provided for your safety. It is important that they are read carefully and completely before assembling this Fixture.
- This product must be installed with the applicable installation code by a person familiar with the construction and operation of the product.
- This Fixture has been rated for up to 60 Watt Max Type A Bulbs (NOT Included).
- Before starting installation of this fixture or the removal of a previous Fixture, disconnect the power by turning off the circuit breaker or removing the fuse from the fuse box.

WARNING:

- Deviation from the Assembly Instructions may result in a risk of fire or electric shock.
- To reduce risk of fire, electrical shock, or personal injury, always turn off Fixture and allow it to cool prior to replacing the bulb.
- Do not touch the bulb when the Fixture is turned on. Do not look directly at the lit bulb.
- Keep flammable material away from the lit bulb.

PRODUCTS ARE NOT INTENDED
FOR COMMERCIAL USE.

UPDATED: 10-28-2021

MADE IN CHINA

Page 1 of 5



Prior to installation or removal of a previous fixture, disconnect power by turning off circuit breaker or removing fuse at electrical panel.

NOTE: Remove all parts and hardware from the box along with any plastic protective packaging and carefully lay all the parts out on a clean, flat surface.

DO NOT discard any contents until after assembly and installation is complete to avoid accidentally discarding small parts or hardware.

 
Approved Location for Use: Damp* or Dry Environment

* protected from direct weather and not subjected to water saturation.

Assembly Time: 30 Minutes

People Required: 3 or More People


Tools Required: Screwdriver, Wire Strippers,
Wire Cutters, Electrical Tape

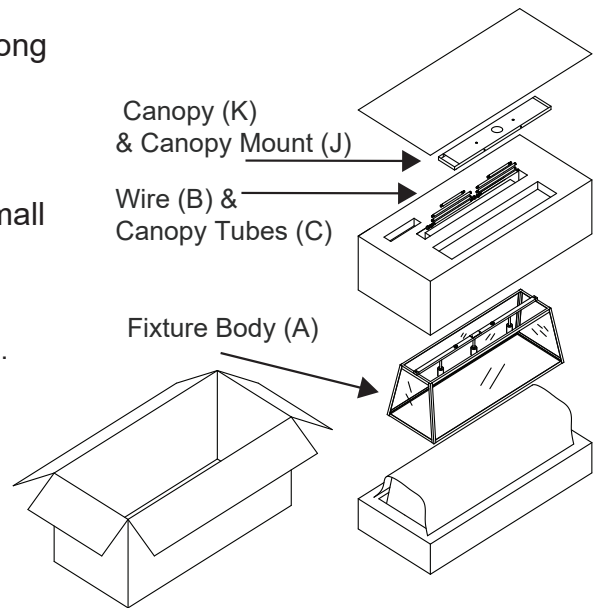


PARTS

Check to make sure you have the following:

 
INCLUDED:

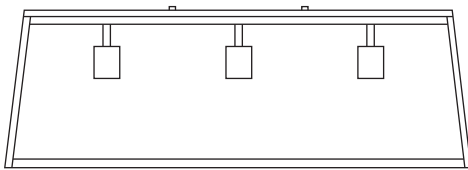

1- Fixture Body (A)

 


2- Nuts (F)

 

6- Wire Tubes (B)



 
4- Canopy Screws (G)




2- Canopy Tubes (C)



 4- Ceiling Screws (H)



2- Wave Washers (D)

 


1- Safety Wire Lock (I)



2- Lock Washers (E)

 
NOT INCLUDED:

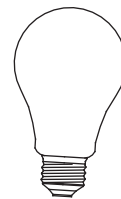

3- 60 Watt Max
Type A Bulbs



 1- Canopy Mount (J)



1- Canopy (K)



3- Wire Connectors (L)



1- Wrench (M)



Customer Service: 800-367-2810
Online: www.ballarddesigns.com

 


Prior to installation or removal of a previous fixture, disconnect power by turning off circuit breaker or removing fuse at electrical panel.

STEP 1:

After deciding how low you would like the Fixture to hang and how many Wire Tubes (B) you need to use, place the Fixture on a smooth, clean surface. Start threading the wires through the Wire Tubes and screwing them into the Fixture Body (A) and together. Attach the Canopy Tubes (C) last.


NOTE: Thread each tube separately and then attach them.

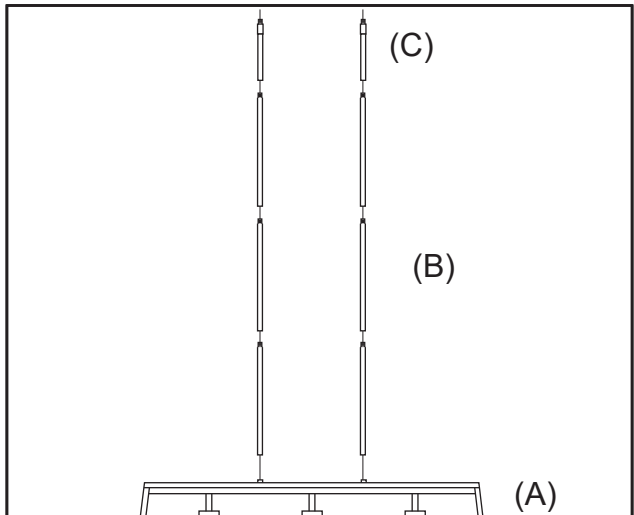

STEP 2:

Attach the Canopy Tubes (C) to the Canopy (K) using the Wave Washers (D), Lock Washers (E), and Nuts (F). Use the Wrench (M) to fully tighten the Nuts.

 
NOTE: Be sure to pull the wires fully through the Tubes.

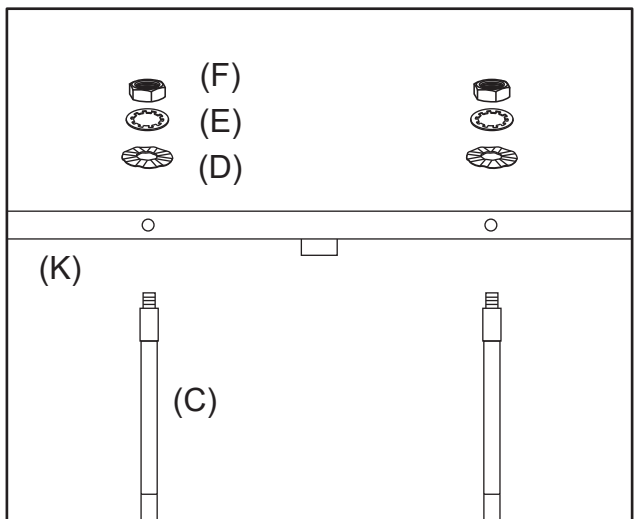

STEP 3:

With help, lift the Assembled Fixture up to the unattached Canopy Mount (J) and weave the wire through the Mount. To connect the Steel Safety Wire to the Ceiling/Outlet Box, use the Safety Wire Lock (I). Tighten each end of the Lock after threading the Steel Wire into the Lock.

 NOTE: This Wire must be securely attached to the ceiling in order to be safe and effective.

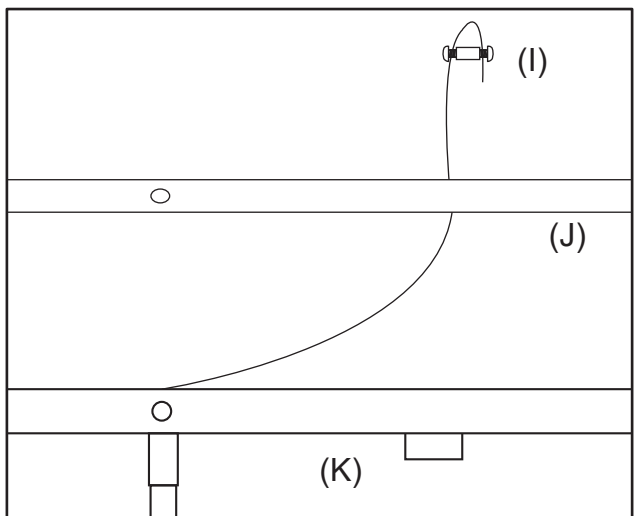


Customer Service: 800-367-2810
Online: www.ballarddesigns.com



Prior to installation or removal of a previous fixture, disconnect power by turning off circuit breaker or removing fuse at electrical panel.

STEP 4:


 
Pull the wires from the Outlet Box through the center hole in the Canopy Mount (J) before attaching the Mount. Then, screw in the Canopy Mount to the ceiling using the Ceiling Screws (H).

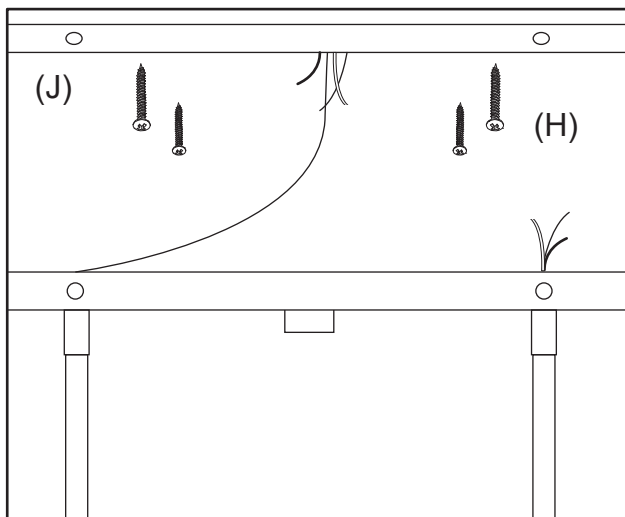

STEP 5:

Wrap the Ground Wire from the Fixture around the Ground Screw on the Cross Bar and then connect the two White Wires from the Fixture to the White Wire (neutral wire) from the Outlet Box. Connect the Black Wires from the Fixture to the Black Wire (live wire) from the Outlet Box. Cover the connections using the Wire Connectors (L).

  NOTE: Black Outlet Box Wires may be red or smooth. White Outlet Box Wires may be ribbed.

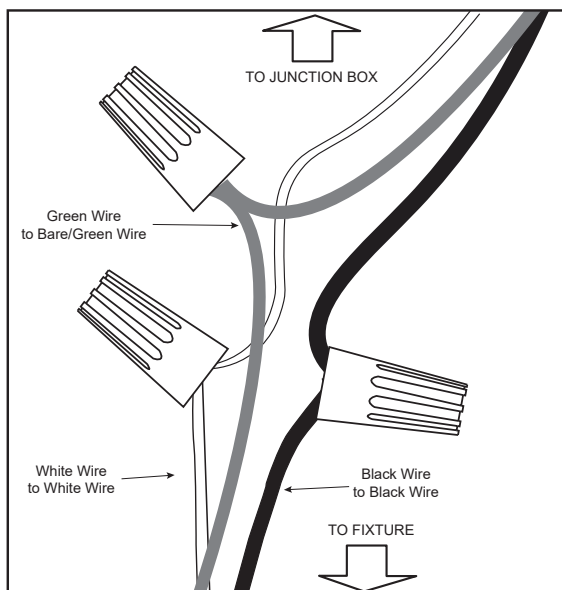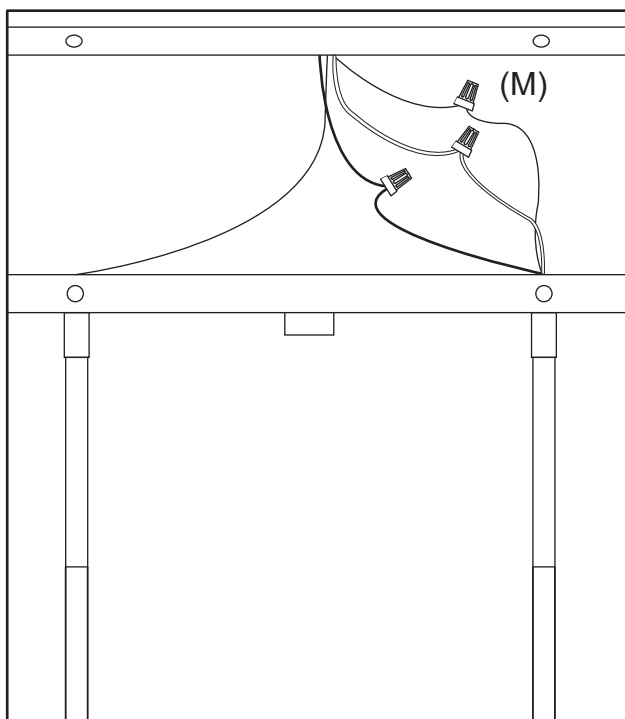


Customer Service: 800-367-2810
Online: www.ballarddesigns.com



Prior to installation or removal of a previous fixture, disconnect power by turning off circuit breaker or removing fuse at electrical panel.


STEP 6:

 After wiring the Fixture, attach the Canopy (I) to the Canopy Mount (J) using the Canopy Screws (G). Be sure the screws are fully tightened.

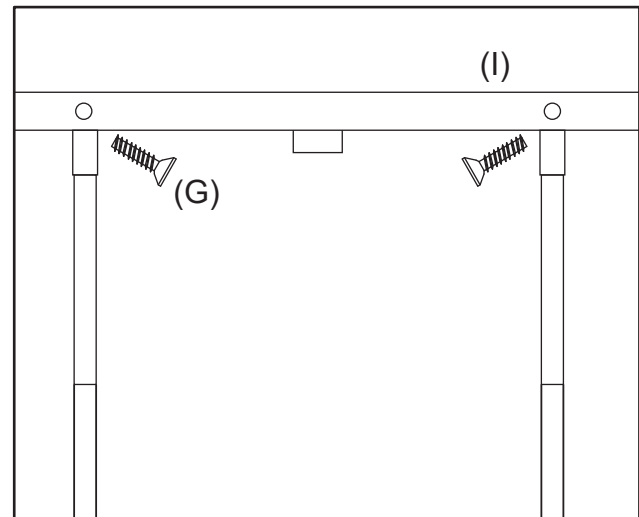


STEP 7:

 Screw in the Bulbs. This Fixture has been rated for up to 60 Watt MAX Type A Bulbs. (NOT Included).

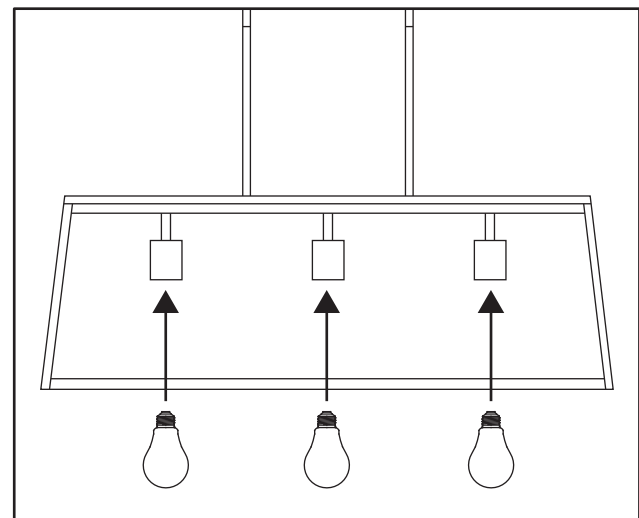

STEP 8:

 Connect breaker and turn on Light.

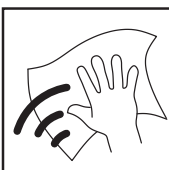

Cleaning and Care

Periodically wipe Fixture with a soft, dry cloth.
Avoid harsh or abrasive chemicals as
finish damage may result.



Customer Service: 800-367-2810
Online: www.ballarddesigns.com