 


PRODUCT NAME: Angela Ceiling Mount
ITEM NUMBER: LM210
ASSEMBLED DIMENSIONS: 12"H x 16" Diameter

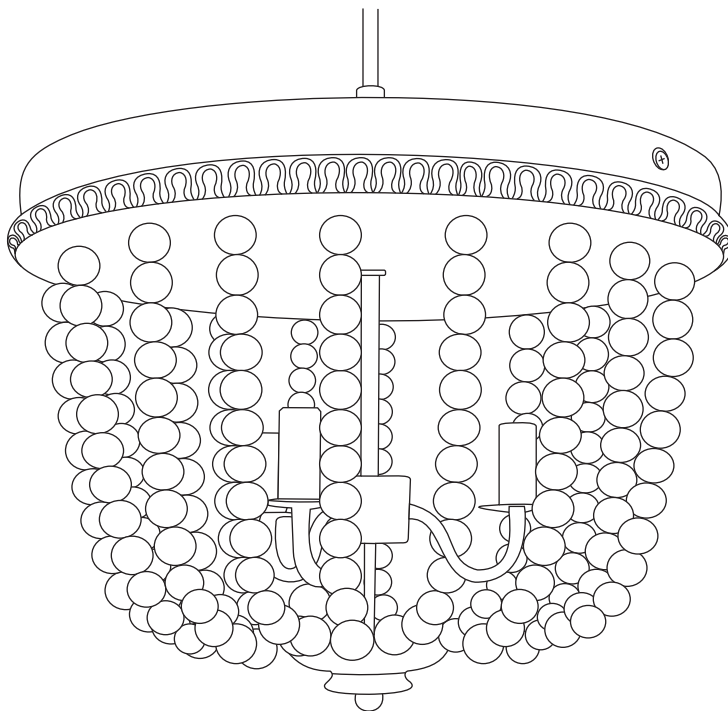

IMPORTANT SAFETY INSTRUCTIONS:

- A licensed professional electrician should install direct wire fixtures.
- For your safety, please read instructions carefully and completely before beginning assembly or installation.
- Fixture must be installed according to applicable code(s) by a person familiar with its construction and operation.
- Fixture rated up to 40 Watt MAX Type B INCANDESCENT bulb (not included). LED bulbs may be used.
- Prior to installation or removal of a previous fixture, disconnect power by turning off power at circuit breaker or removing fuse at electrical panel.

WARNING:

- Deviation from assembly instructions may cause risk of fire or electric shock.
- To reduce risk of personal injury, always turn off fixture and allow bulbs to cool prior to replacement.
- Do not touch or look directly at illuminated bulbs.
- Keep flammable material away from illuminated bulbs.

Remove all parts, hardware and protective packaging from carton and carefully arrange on a clean, level surface.

 
NOTE: To avoid accidentally discarding small parts or hardware, retain all carton contents until after assembly and installation are complete.

Recommended Location for Use: Dry Indoor Environment

Assembly Time: 25 minutes

People Required: 2


Tools Required: Screwdriver, Electrical Tape, Wire Strippers, Wire Cutters, Pliers

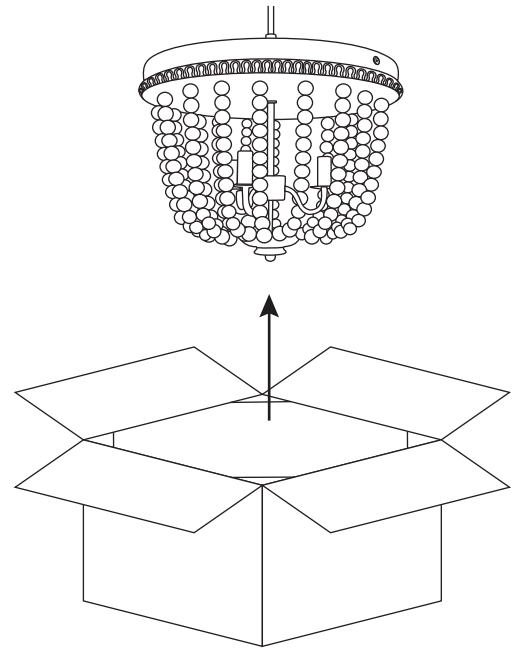

PARTS

Check to make sure you have the following:

 INCLUDED:

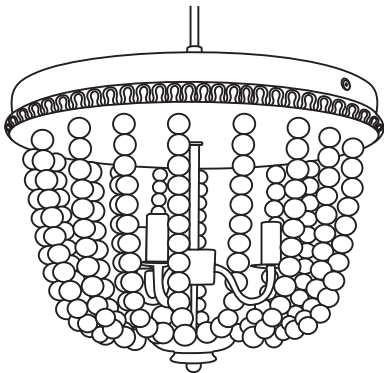


1 - Fixture Body (A)


NOT INCLUDED:



 
3 - 40 Watt MAX Incandescent
Type B Bulb
*LED may be used.




2 - Mounting Screws (C)

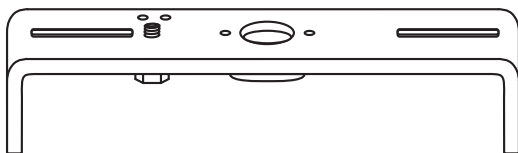 

1 - Mounting Bracket (B)

 

3 - Wire Connectors (D)

 


3 - Canopy Screws (E)

NOTE: Prior to installation or removal of a previous fixture, disconnect power by turning off circuit breaker or removing fuse at electrical panel.

STEP 1: INSTALL MOUNTING HARDWARE

 Attach Mounting Bar (B) to Junction Box using Mounting Screws (C). Carefully remove and set aside both Canopy Set Screws (E)


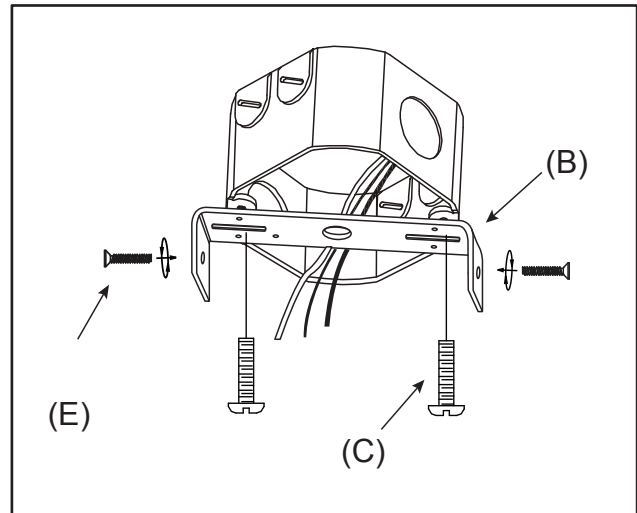


STEP 2: CONNECT ELECTRICAL

If necessary, strip wire ends of 1/2" of insulation then attach bare (or green) ground wire from Fixture to bare (or green) ground wire from Junction Box and attach using Wire Connector (D). Wrap both around Green Ground Screw on Mounting Bracket (B) and firmly tighten.

TO AVOID ELECTRICAL SHOCK, WIRE FOR CORRECT POLARITY:

  Connect BLACK (or smooth) wires to BLACK. Connect WHITE (or ribbed along the edge) wires to WHITE. Firmly secure all connections with a Wire Connector (D).

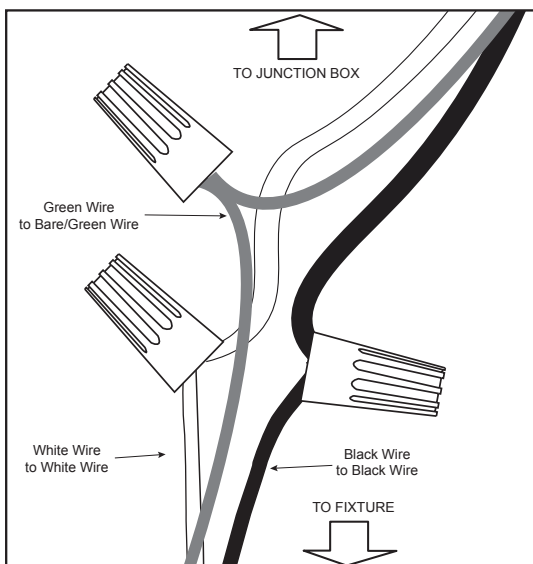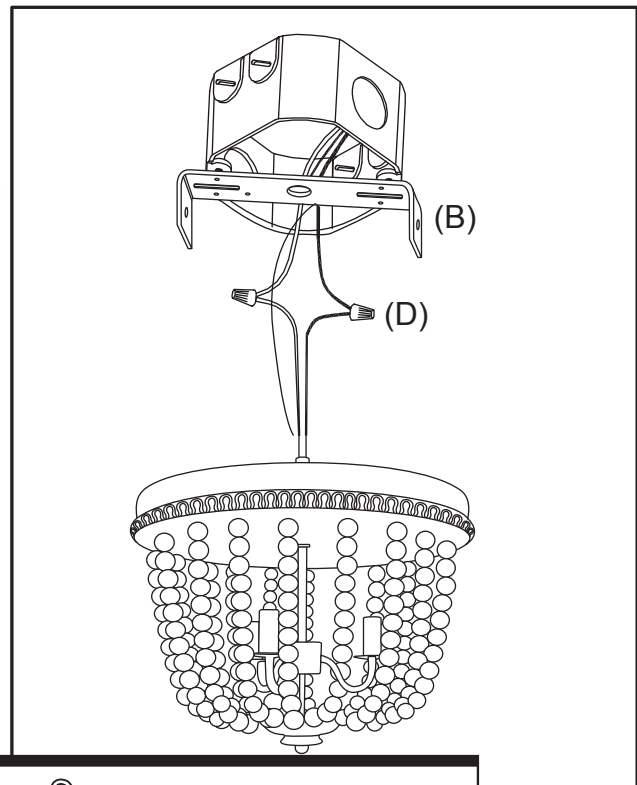



NOTE: Prior to installation or removal of a previous fixture, disconnect power by turning off circuit breaker or removing fuse at electrical panel.

STEP 3: ATTACH FIXTURE TO CEILING



Gently lift fixture toward ceiling while carefully tucking wires into Fixture. Align holes in side of Fixture Body (A) and insert then thread in Canopy Set Screws (E). Tighten until fixture is secured.

INSTALL BULB:

  Fixture socket is rated up to a 40 Watt MAX Incandescent bulb. *LED bulbs may be used and permit a choice of brighter bulb without exceeding socket rating. To mimic the color of an incandescent, choose 2700K Soft White.

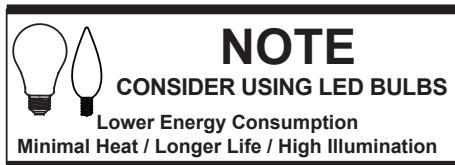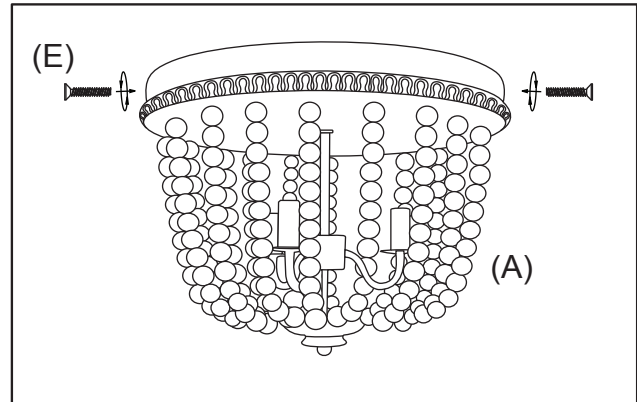

Light Output Lumens	Energy Consumption	
	LED Watts	Incandescent Watts
450	4-5	40
800	6-8	60
1,100	9-13	75
1,600	16-20	100
2,600	25-28	150

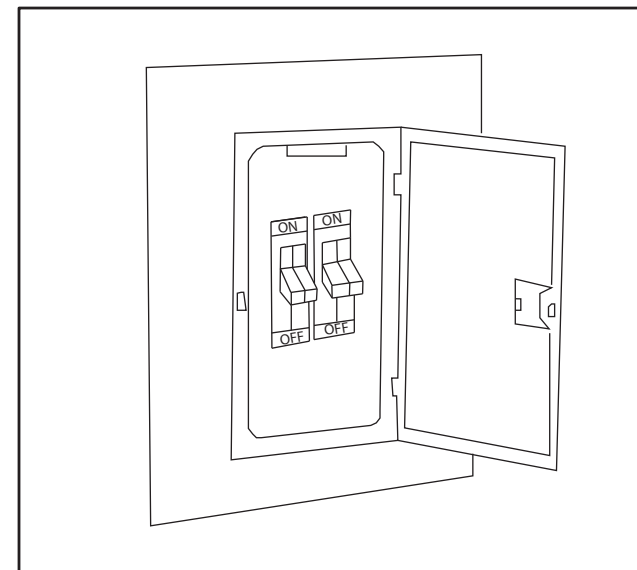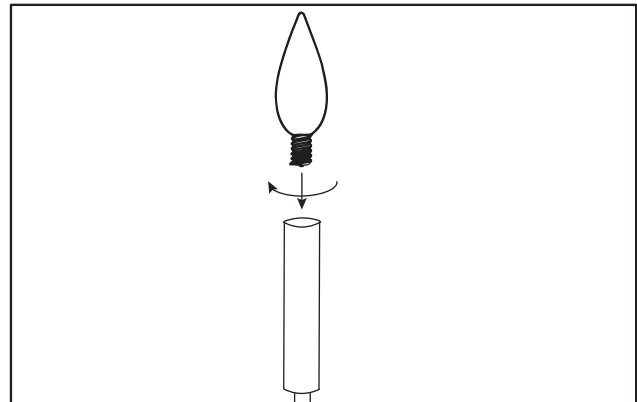  

STEP 4: RESTORE POWER

Connect Breaker or replace Fuse in electrical panel. Illuminate fixture.

Cleaning & Care:

To clean, wipe the Fixture with a soft, dry cloth.
Avoid the use of harsh or abrasive chemicals as they may damage the finish