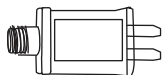PRODUCT NAME: Staked Twinkling Frasier Fir Tree 3ft
ITEM NUMBER: HT041
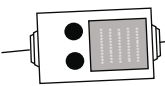ASSEMBLED DIMENSIONS : 36"H x 26" Diameter
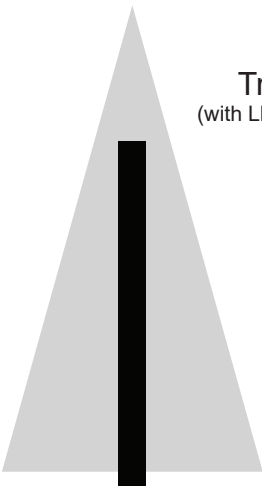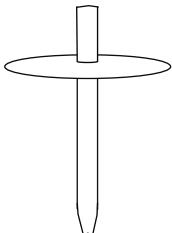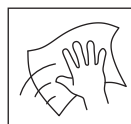
⚠️

INDOOR/OUTDOOR APPROVED
Before every use, thoroughly inspect tree for cut, frayed, or damage wires or cords, exposed copper, loose connections or cracks bulb holders.

Ltr.	Qty.	Hardware Included
A	1	Power Adapter
B	1	Control Module

Ltr.	Qty.	Components Included
C	1	Tree (C) (with LEDs and cord)
D	1	Stake (D)

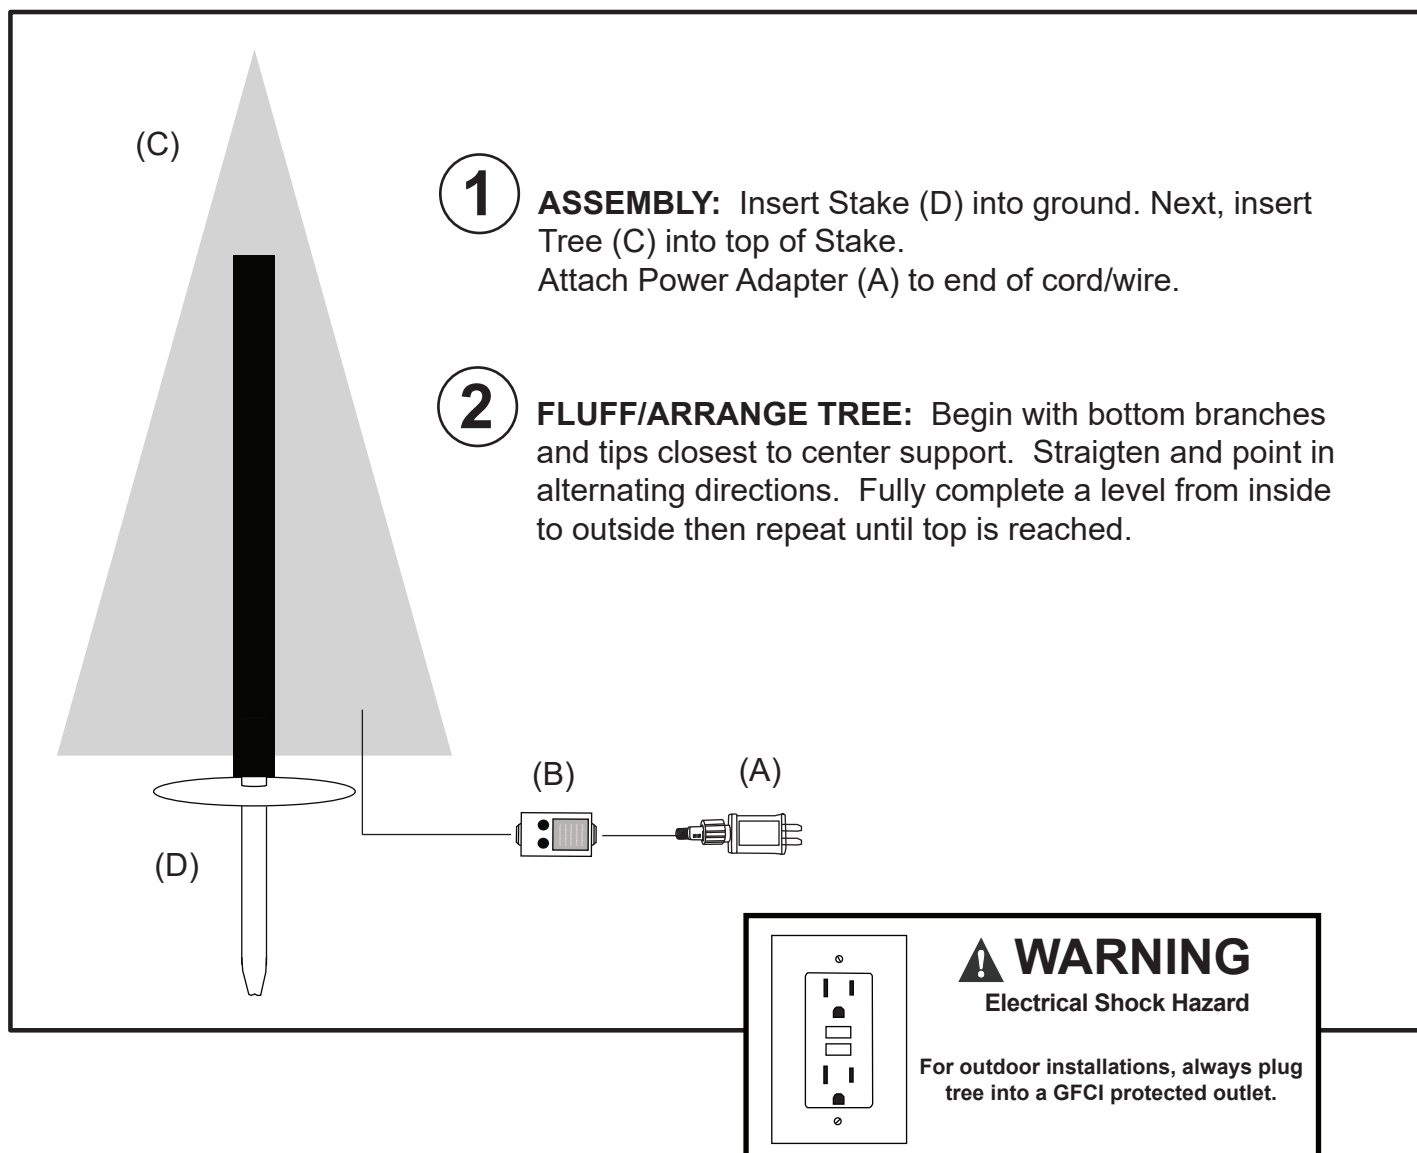| **Cleaning and Care** |
|---|
| DO NOT EXPOSE TO HEAT |
| Store in cool, dry location. |
| Read all instructions and warnings/Retain for future reference. |

PRODUCTS ARE NOT INTENDED
FOR COMMERCIAL USE.

⚠ Assemble in location for intended use.

(C)

1 **ASSEMBLY:** Insert Stake (D) into ground. Next, insert Tree (C) into top of Stake.
Attach Power Adapter (A) to end of cord/wire.

2 **FLUFF/ARRANGE TREE:** Begin with bottom branches and tips closest to center support. Straigten and point in alternating directions. Fully complete a level from inside to outside then repeat until top is reached.

(B)   (A)

(D)

⚠ **WARNING**
Electrical Shock Hazard

For outdoor installations, always plug tree into a GFCI protected outlet.

TROUBLESHOOTING

PROBLEM: Tree will not illuminate.

Check Outlet. Does it have power. Is it on a switch? GFCI and needs to be reset?
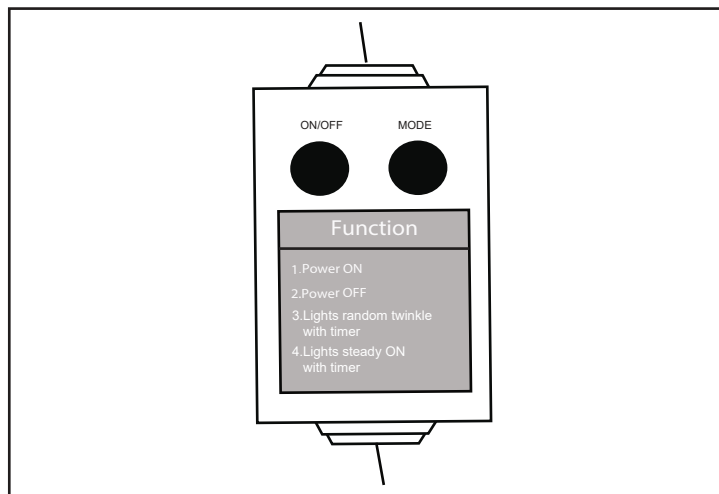Check Plug. Is it fully seated into outlet?
Check Power Adapter: Is it fully seated and tight?
Check Wire(s): Are any pulled loose from a bulbt? Cut or frayed? If so, uplug and do not use.

CONTROL MODULE

SELECT	DESCRIPTION	OPERATION
ON	Power ON	Press ON/OFF button once
OFF	Power OFF	Press ON/OFF button twice
MODE	Lights random twinkle with timer functions (6 hours ON, 18 hours OFF)	Press MODE button once
MODE	Lights steady ON with timer functions (6 hours ON, 18 hours OFF)	Press MODE button twice

SPECIFICATIONS:
LIGHT SOURCE: LED
ELECTRICIAL SPECIFICATIONS: 120V – 60HZ – 0.5A
UP LISTED ADAPTOR: 29V
UL LISTED: E338180

Customer Service: 800-367-2810
Online: www.ballarddesigns.com