


SUZANNE KASLER

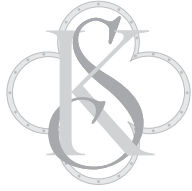

BALLARD DESIGNS




Customer Service: 800-367-2810  
Online: [www.ballarddesigns.com](http://www.ballarddesigns.com)

PRODUCT NAME: SK Regency Planter

ITEM NUMBER: AP090

ASSEMBLED DIMENSIONS : 23.35"H x 20"W x 20"D

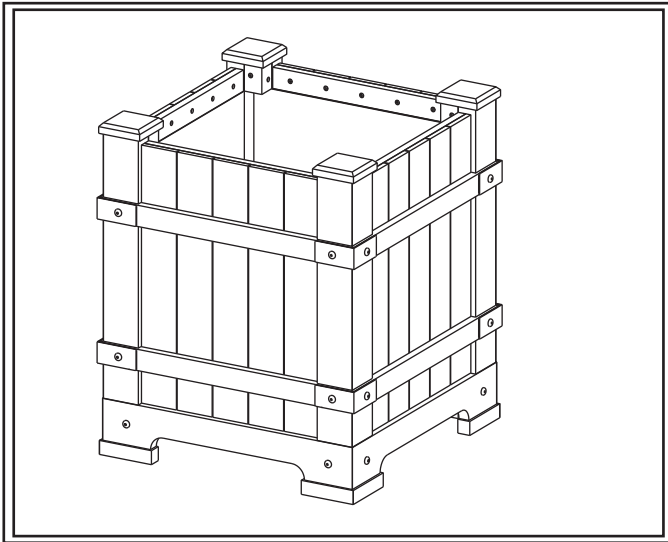

**Cleaning and Care**


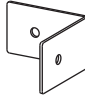
Periodically wipe down planter with a soft, dry cotton cloth. PVC liner may be rinsed with cold water and dried using a soft, cotton cloth.

**REQUIRED TOOLS:**



Phillips Screwdriver

**Approximate Assembly Time:** 15 minutes


**\*Designed for Indoor or Outdoor Use**

| Ltr. | Qty. | Hardware Included  |                      |
|------|------|--|----------------------|
| A    | 20   |   | Bolts<br>(M5 x 30mm) |
| B    | 8    |  | L-Brackets           |


| Ltr. | Qty. | Components                |  |
|------|------|---------------------------|--|
| C    | 2    | Right and Left Panels (C) |  |
| D    | 2    | Front and Back Panels (D) |  |
| E    | 1    | Base (E)                  |  |
| F    | 1    | PVC Liner (F)             |  |

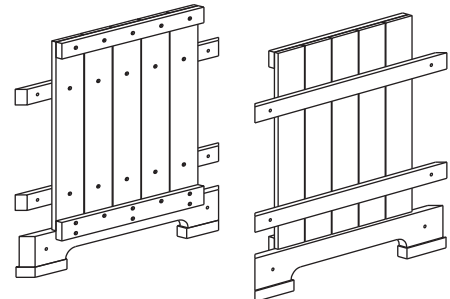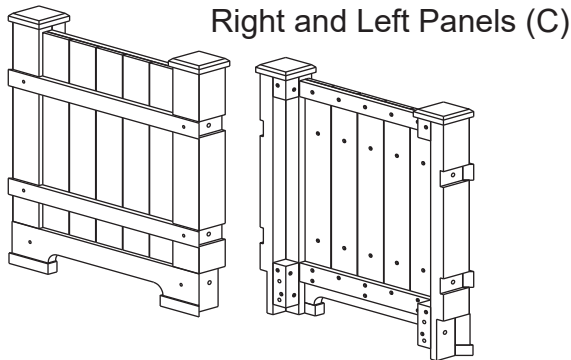

Front and Back Panels (D)



Base (E)

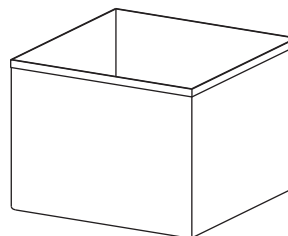

PVC Liner (F)

**\*NOTE:** If using planter OUTDOORS, use a sharp tool to cut a drainage hole into the liner. This will prevent planter from filling with water and damaging plant roots. If using for live plants INDOORS, do not cut liner and use a drip tray to protect floors from potential leakage.


PRODUCTS ARE NOT INTENDED  
FOR COMMERCIAL USE.

UPDATED: 8-31-2023


MADE VIETNAM

Page 1 of 2


**STEP 1:** Attach one Panel (D) to both Right/Left Panels (C) using L-Brackets (B) and Bolts (A) as illustrated. **NOTE:** Brackets attach to the outside corners. Insert Bolts into holes.

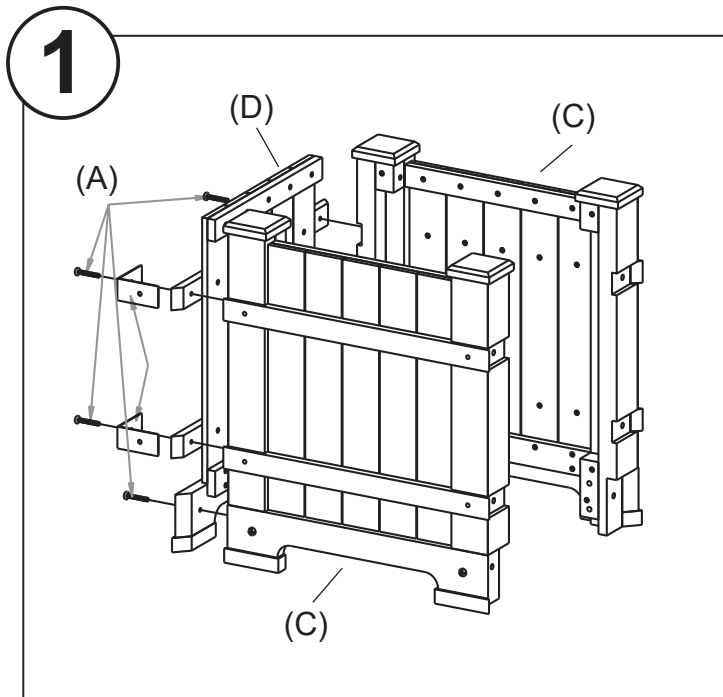

**STEP 2:** Attach remaining Panel (D) to Right/Left Panels (C) using L-Brackets (B) and Bolts (A) as illustrated. **NOTE: INSERT BOLTS ON FRONT SIDE ONLY. PANEL MUST BE LOOSE.**

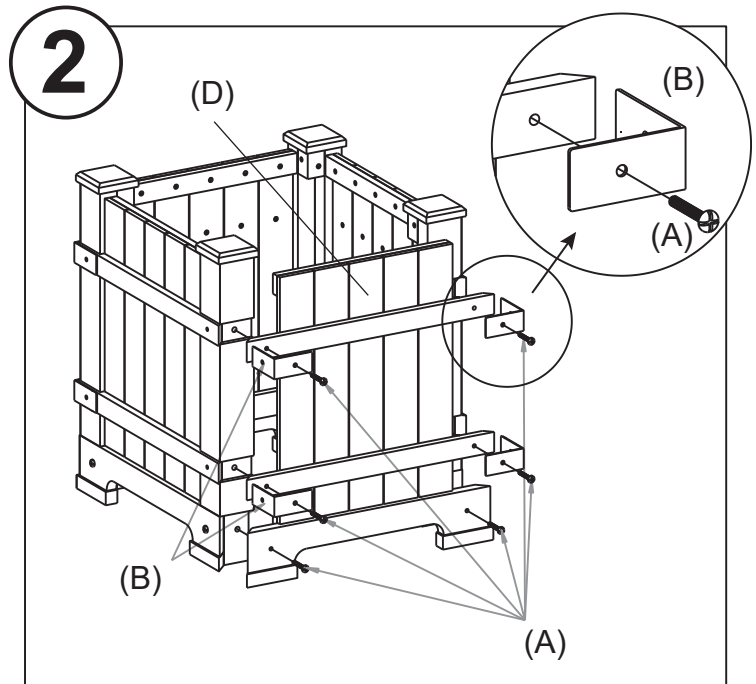

**STEP 3:** Carefully place Base (E) into Planter. The loose Front Panel will provide some leeway for securing Base into bottom. Complete by inserting and tightening remaining Bolts (A).

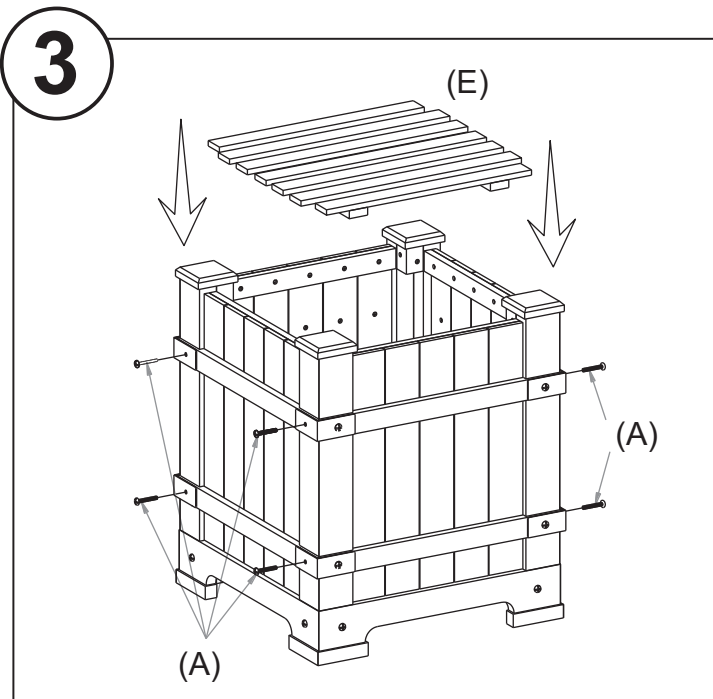

**STEP 4:** Carefully unfold, lower and fit PVC Liner (F) into assembled Planter.

**PRECAUTION:** See \*NOTE on Page 1 regarding Planter use.

