



PRODUCT NAME: Camden Headboard


ITEM NUMBER: UM232, 233, 234, 235, 236, 237

ASSEMBLED DIMENSIONS: King: 50"H x 80"W x 3 1/2"D

Queen: 50"H x 62"W x 3 1/2"D





Full: 50"H x 56"W x 3 1/2"D

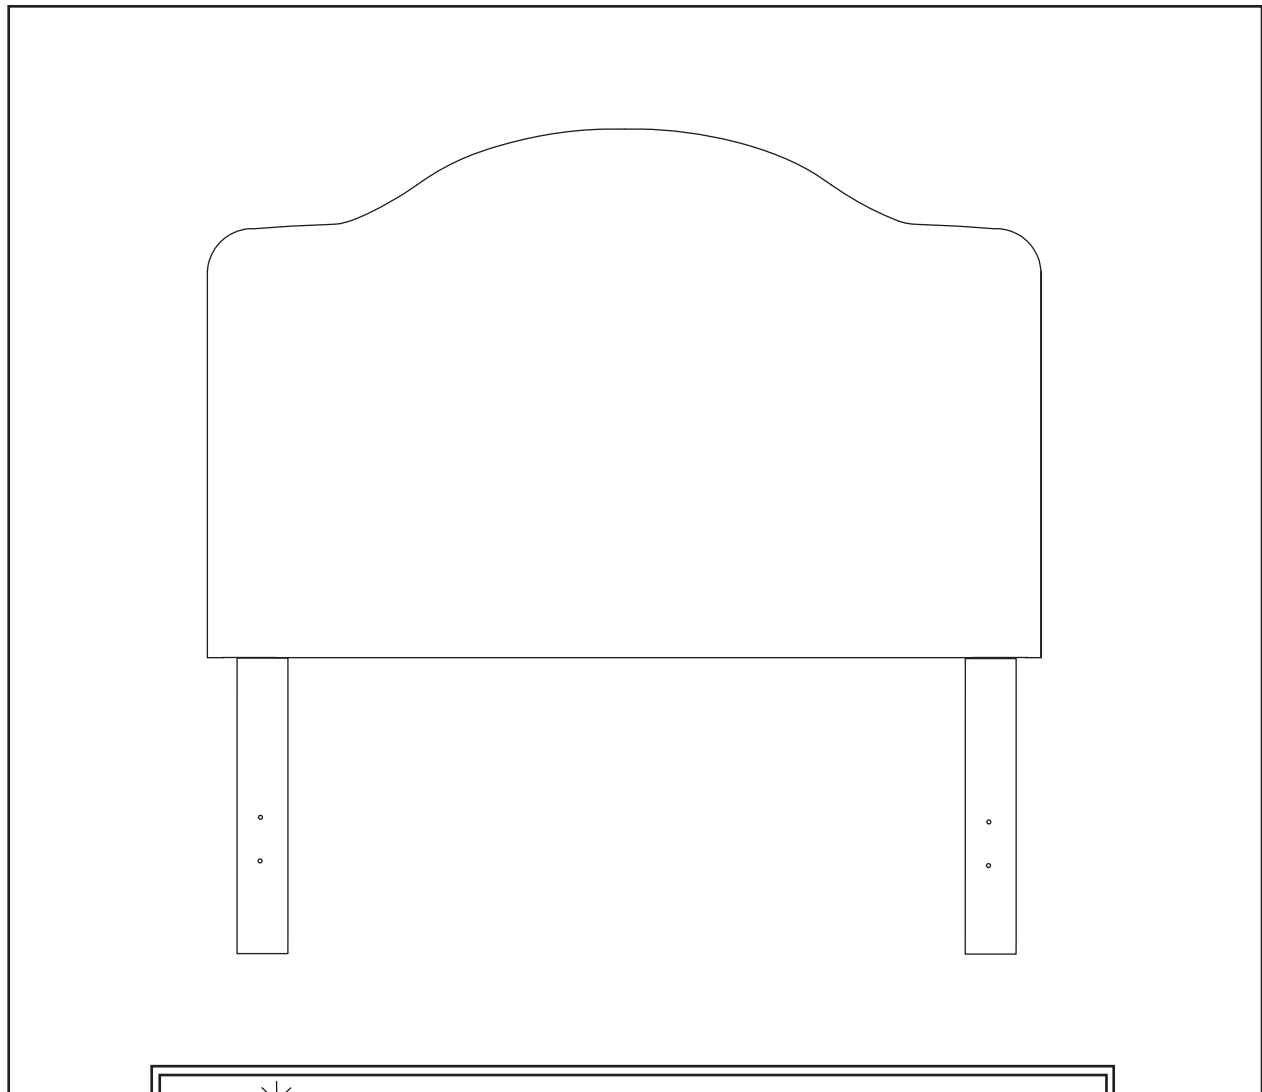Twin: 50"H x 41"W x 3 1/2"D



Prevent accidentally discarding small parts or hardware. Retain all carton contents until assembly and installation are complete.


⚠ Assemble in location for intended use.


Ltr.	Qty.	Hardware Included	
A	6		Bolts (2" x 1/4")
B	6		Lock Washers (5/16" x 5/8")
C	4		Flat Washers (5/16" x 3/4")
D	4		Nuts (1/4")


REQUIRED TOOLS:

Phillips Screwdriver,
Adjustable Wrench

ASSEMBLY TIME: 5 to 7 minutes

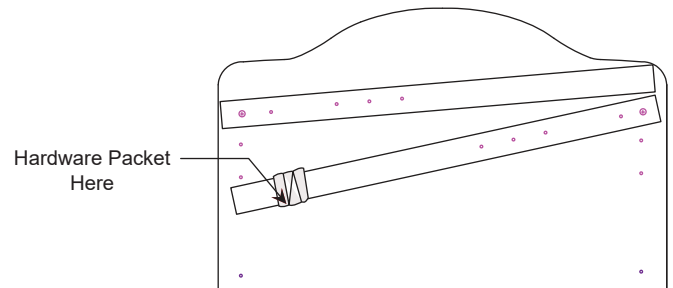

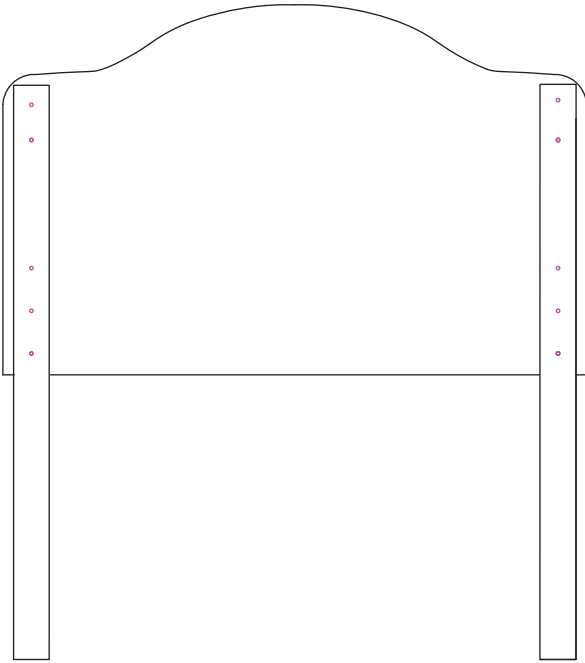Ltr.	Qty.	Components	
E	1	Headboard (E)	
F	2	Legs (F)	


	Cleaning and Care
	Spot clean as needed. Specific cleaning method varies by fabric type.




Customer Service: 800-367-2810
Online: www.ballarddesigns.com

⚠ Assemble in location for intended use.

STEP 1: Place Headboard (E) face down onto a clean, padded surface. Pull down and straighten both pre-attached Legs (F) and align pre-drilled holes with embedded T-nuts in Headboard. Both Legs may be height adjusted to accommodate your mattress height. If necessary, remove Leg then use your finger to feel for holes under fabric along center of Leg. Determine your height measurement then take a sharp object to cut a small hole over each applicable hole to permit Bolt to push through.


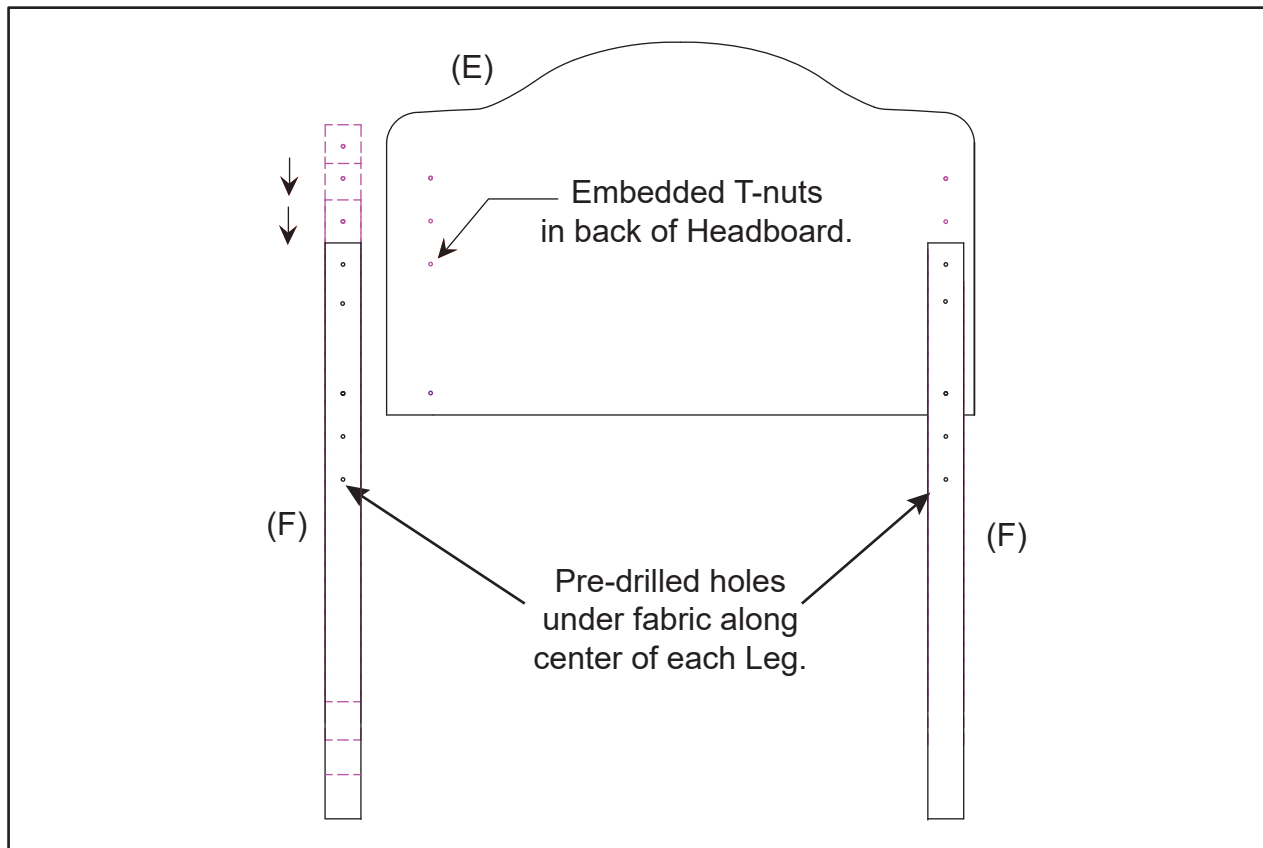


STEP 2: Secure each Leg (F) using Bolt (A) with Lock Washer (B) in the TOP or SECOND FROM TOP hole. Place a second Bolt in hole near bottom of Headboard (E) as illustrated.

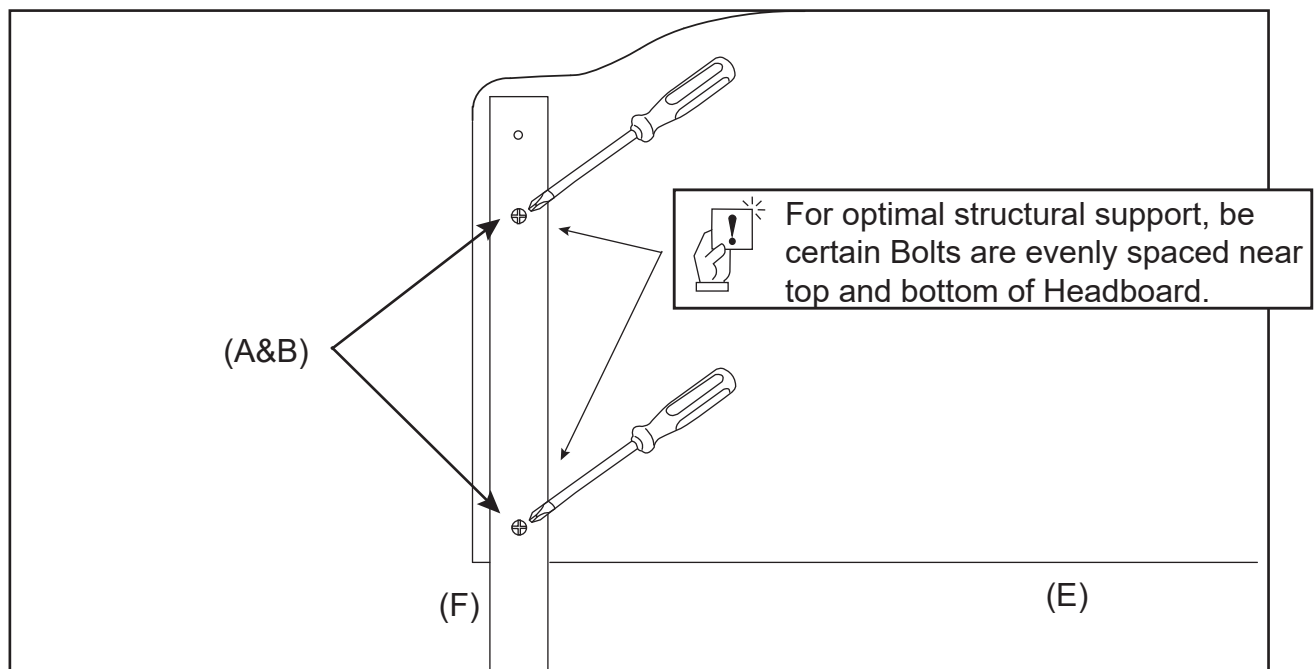

 Assemble in location for intended use.

STEP 3: Assemble Bed Frame (not included) then stand assembled Headboard upright and slide Bed Frame Brackets up to each Leg. Align slots/holes then insert Bolt (A) from back and add Flat Washer (C), Lock Washer (B) and Nut (D). Fully tighten using a Phillips Screwdriver and Adjustable Wrench.

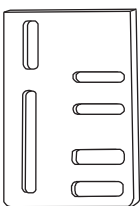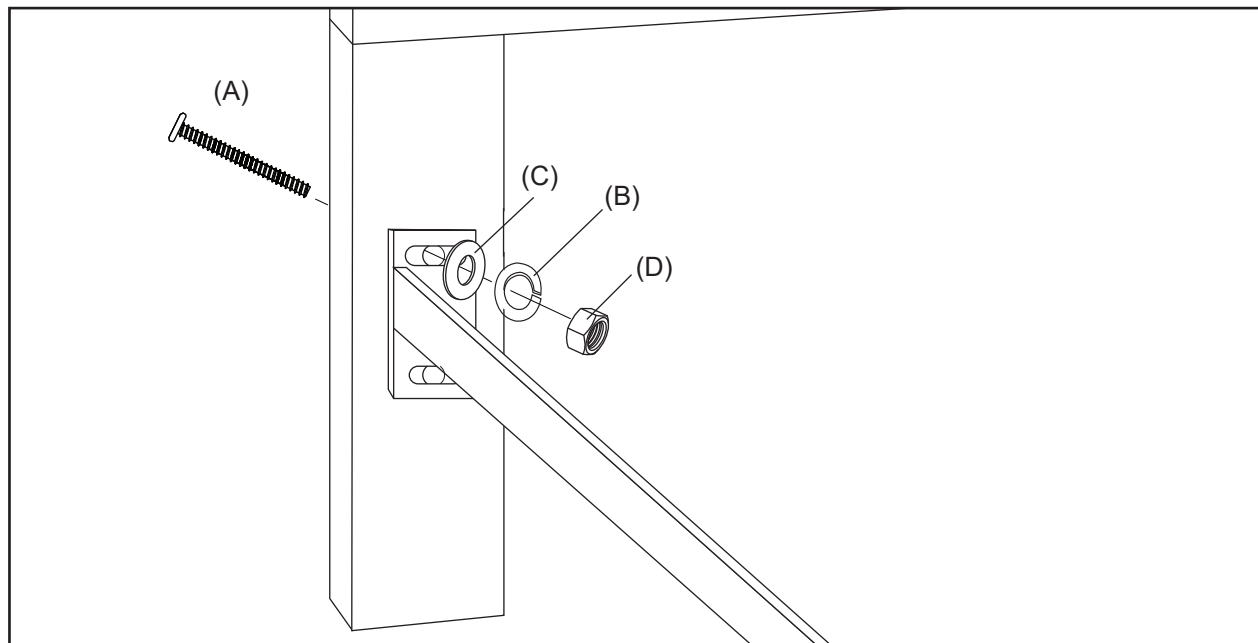

Modi Plate

Trouble Aligning Bed Frame with Headboard?

If your selected bed frame does not align with pre-drilled holes in Headboard, consider using a Modification Plate, commonly called a Modi Plate (not included). Available by searching on-line or a local retailer.



Customer Service: 800-367-2810
Online: www.ballarddesigns.com