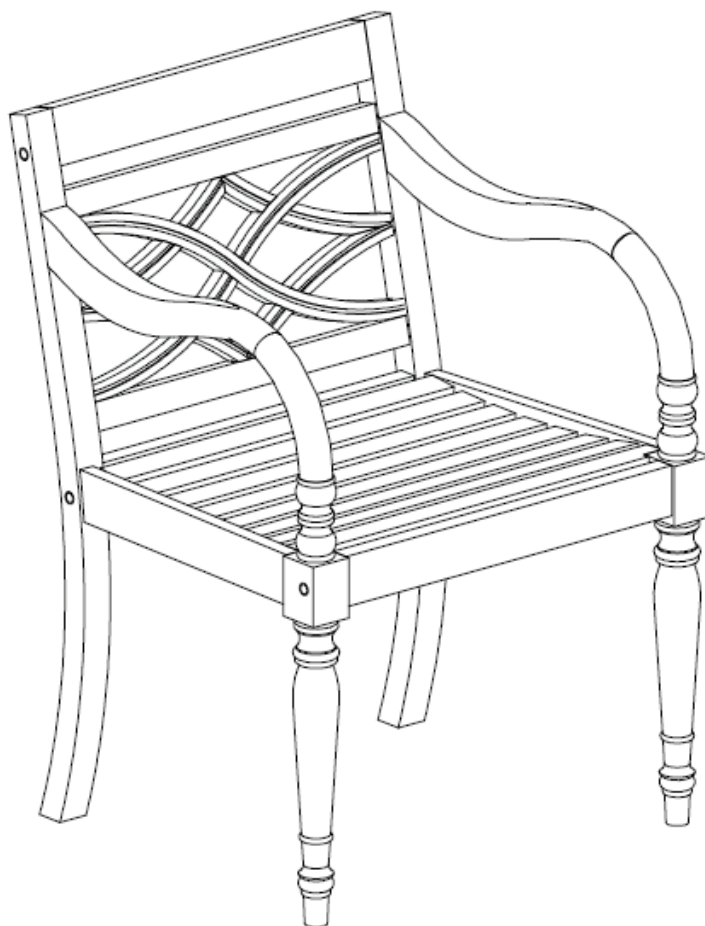




PRODUCT NAME: Ceylon Outdoor Arm Chair

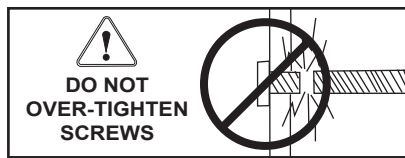
ITEM NUMBER: JC044

ASSEMBLED DIMENSIONS: 34"H x 24"W X 23"D



**Prevent accidentally discarding small parts or hardware. Retain all carton contents until assembly and installation are complete.**




**⚠ Assemble in location for intended use.**

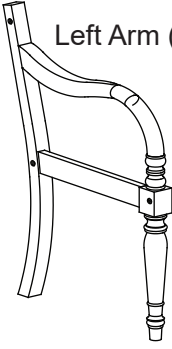
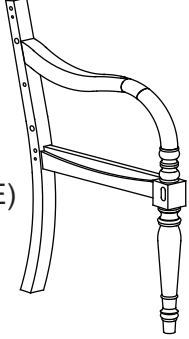
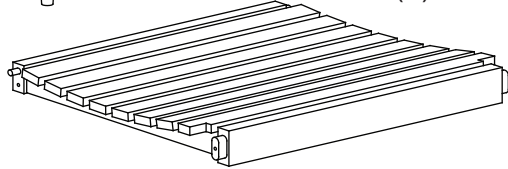
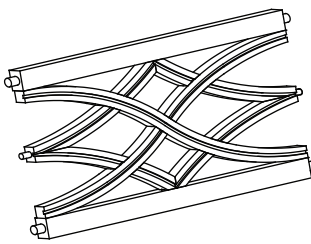

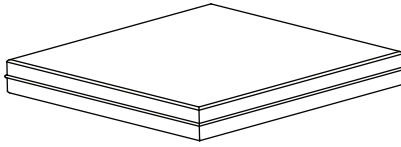


**REQUIRED TOOLS:**  
Allen Wrench (included)

-Two person assembly suggested.

Remove all parts, hardware and protective packaging from carton and carefully arrange on a clean, level, padded surface.

Ltr.	Qty.	Hardware Included	
A	6		90mm Allen Screws
B	6		Screw Plugs
C	1		Allen Wrench

Ltr.	Qty.	Components	
D	1		Left Arm (D)
E	1		Right Arm (E)
F	1		Seat (F)
G	1		Back (G)
H	1		Back Bar (H)
I	1		Seat Cushion (I)



### Cleaning and Care

Occasionally wipe or hose down to remove dirt and debris.

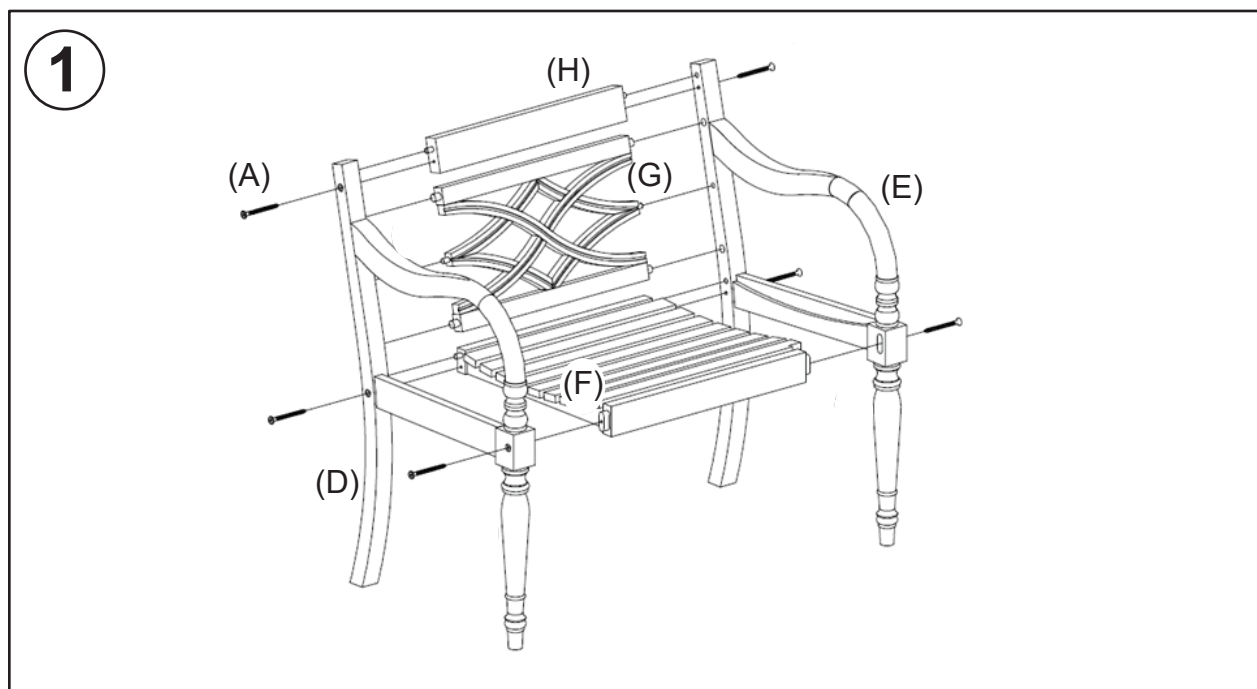
Promptly remove spills.

Do not use harsh chemicals or abrasive cleaners.



Customer Service: 800-367-2810  
Online: [www.ballarddesigns.com](http://www.ballarddesigns.com)

**STEP 1:** Attach Seat (F), Back (G) and Back Bar (H) to Left (D) and Right (E) Arms using Allen Screws (A). Be certain all Screws are in place before using Allen Wrench (C) to fully tighten each.



**STEP 2:** Cover each Screw head by inserting a Wood Plug (B) into each hole.

**STEP 3:** Place Seat Cushion (I) onto Seat (F).

