




PRODUCT NAME: Cypress Daybed with Cushion

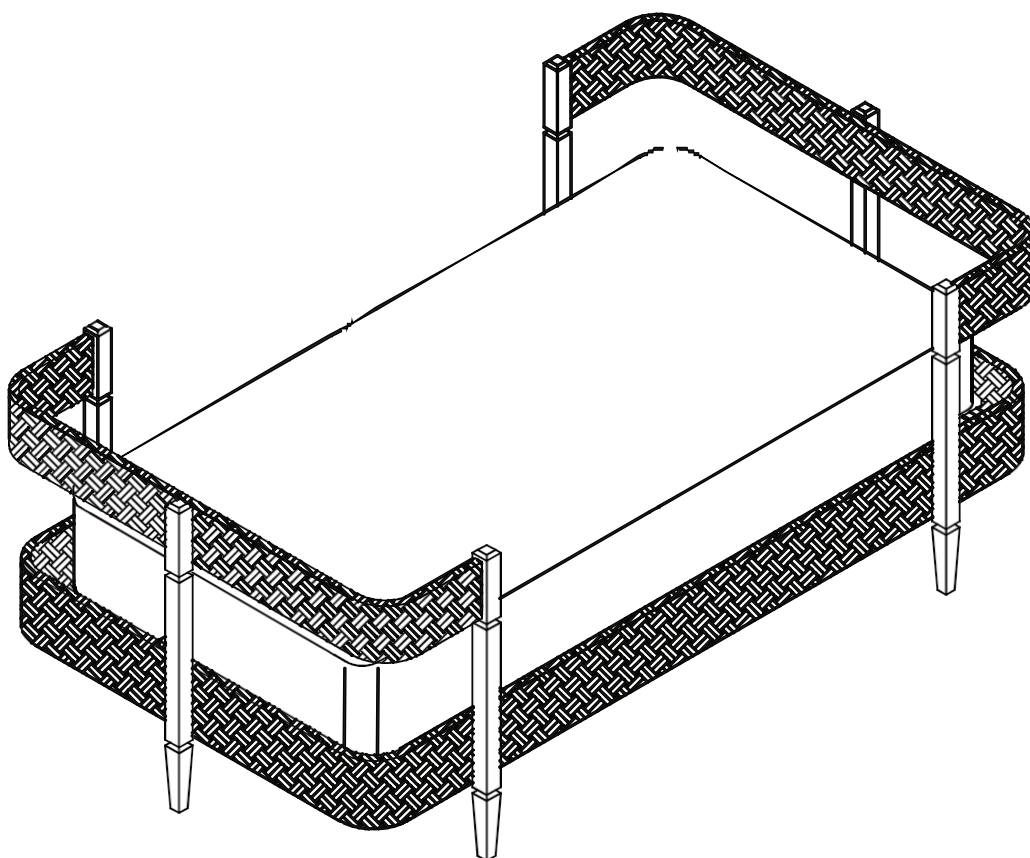



ITEM NUMBER: JC366

ASSEMBLED DIMENSIONS : 30 3/4"H x 80 1/3"W x 46"D



**Prevent accidentally discarding small parts or hardware. Retain all carton contents until assembly and installation are complete.**


**⚠ Assemble in location for intended use.**

Ltr.	Qty.	Hardware Included	
A	24		6x45mm Bolts
B	4		6x20mm Bolts
C	28		6x19x2 mm
D	2		Allen Wrench

**REQUIRED TOOLS:**  
Allen Wrench (included)


-Two person assembly suggested.

Remove all parts, hardware and protective packaging from carton and carefully arrange on a clean, level, padded surface.

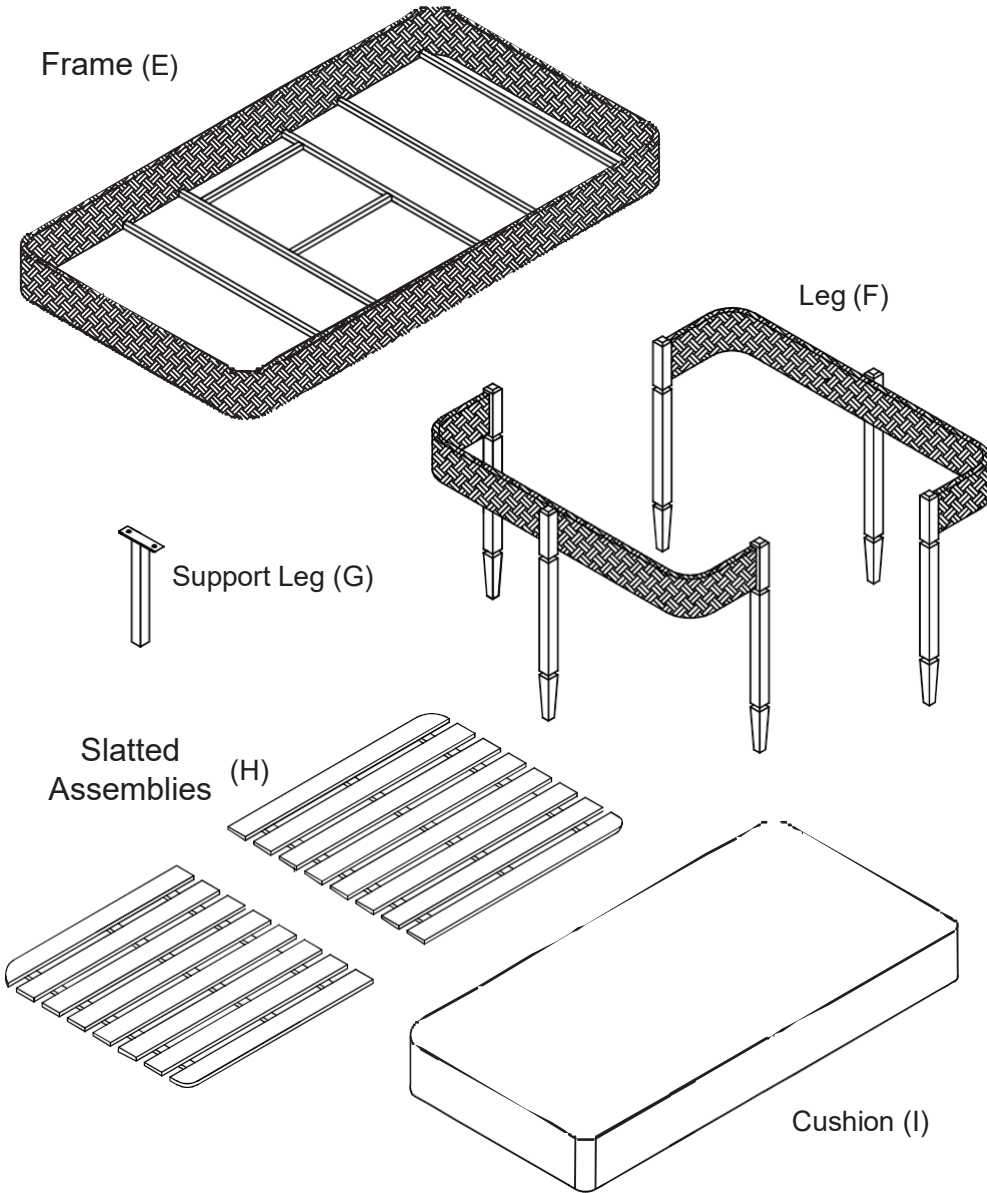
Components		
Ltr.	Qty.	
E	1	 <p>Frame (E)</p> <p>Leg (F)</p> <p>Support Leg (G)</p> <p>Slatted Assemblies (H)</p> <p>Cushion (I)</p>
F	2	
G	2	
H	2	
I	1	




STEP 1: Invert Frame (E) and attach Support Legs (G) to center using 20mm Bolt (B) and Washer (C). Tighten using Allen Wrench (D).

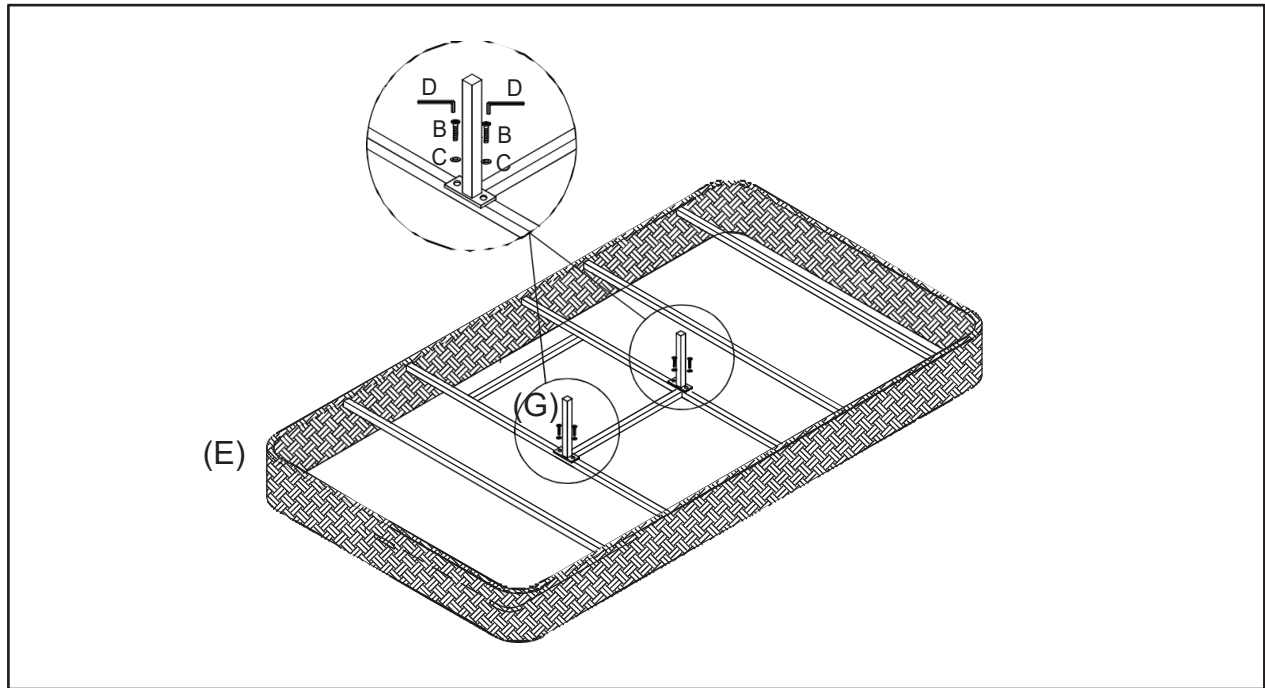

STEP 2: Flip and orient Frame (E) with Support Legs (G) down then attach Legs (F) as illustrated. Attach Legs to Frame using 45mm Bolts (A) with Washers (C). Tighten using Allen Wrench (D)

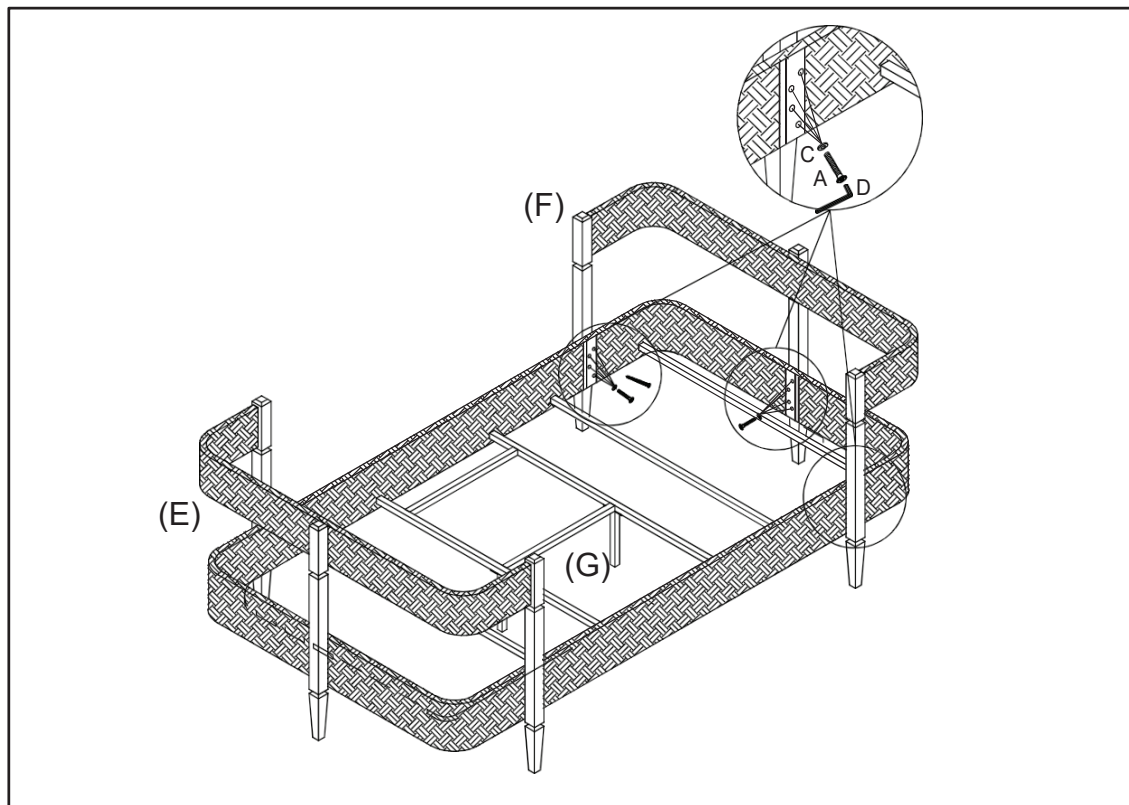

STEP 3: Place Slat Assemblies (H) into Frame (E).

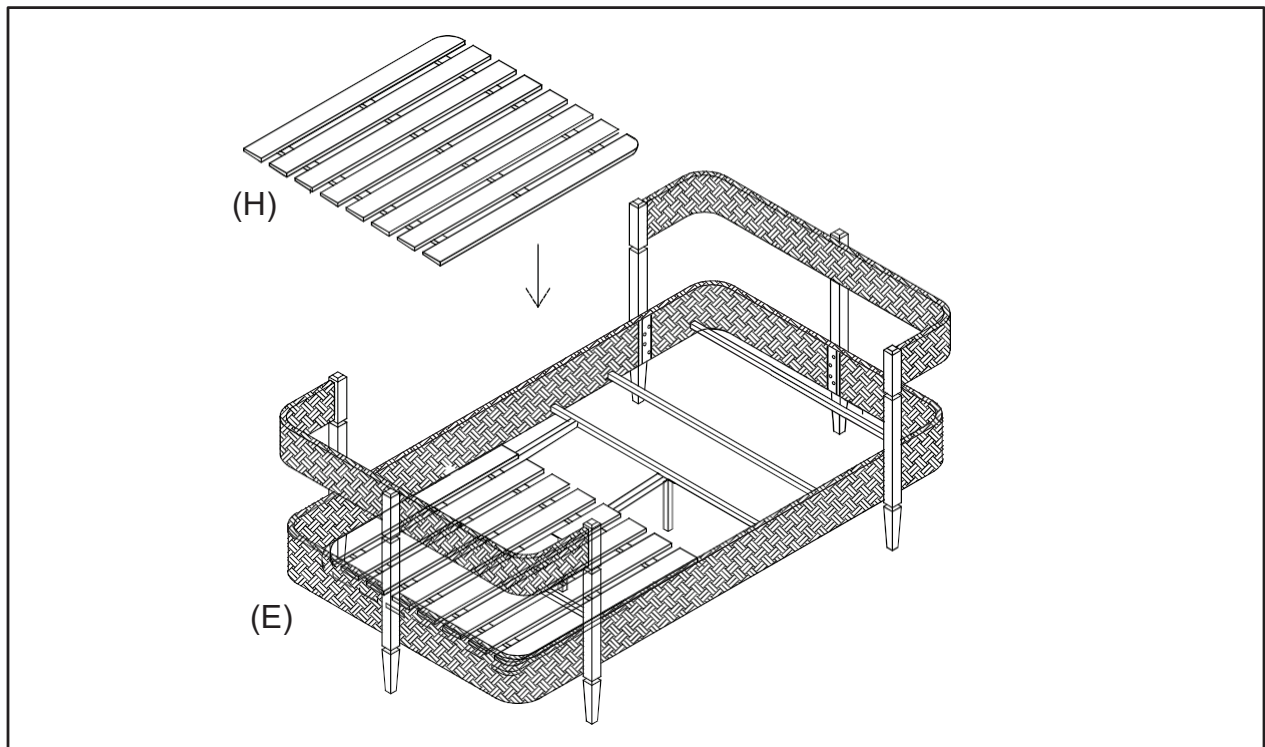

STEP 4: Complete Daybed assembly by placing Cushion (I) onto Slat Assemblies.

