


PRODUCT NAME: Delano Iron Door Cabinet

ITEM NUMBER: MA236

DIMENSIONS OF ITEM ASSEMBLED: 80 3/4"H x 48"W x 16"D





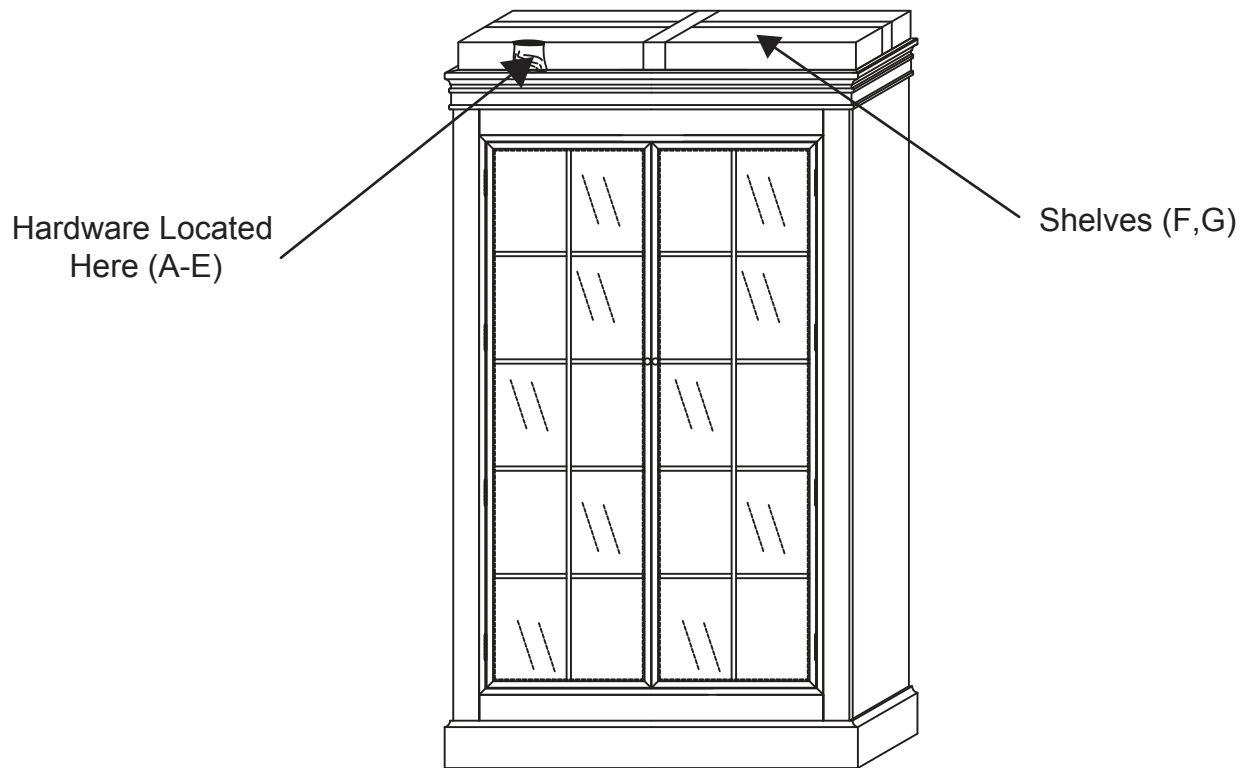


NOTE: Assemble the Cabinet in desired location for use.





TOOLS NEEDED:

- Requires a screwdriver.
- Power drill suggested.
- Assembly requires 2 or more people.

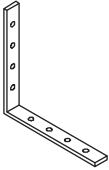
NOTE: When unpacking, lay the parts on a padded surface such as the packaging provided. Be sure to locate all hardware before throwing away any packaging.

Ltr.	Qty.	Hardware Included		Ltr.	Qty.	Hardware Included	
A	16		Long Screws	D	8		Anchors
B	12		Shelf Supports	E	4		Wood Plugs
C	2		L-Brackets	IMPORTANT: Installing the L-Bracket (C) to a Wall Stud and the Cabinet is REQUIRED before any use of the product for customer safety.			


Ltr.	Qty.	Components	
F	1		Narrow Shelf (F)
G	3		Shelves (G)

NOTE: Assemble the Cabinet in desired location for use.

STEP 1: Insert the Shelf Supports (B) into the holes of the Cabinet at the desired shelf heights. Set the Shelves (G) on the Shelf Supports. Insert the Narrow Shelf (F) into the wooden tracks inside the Cabinet.

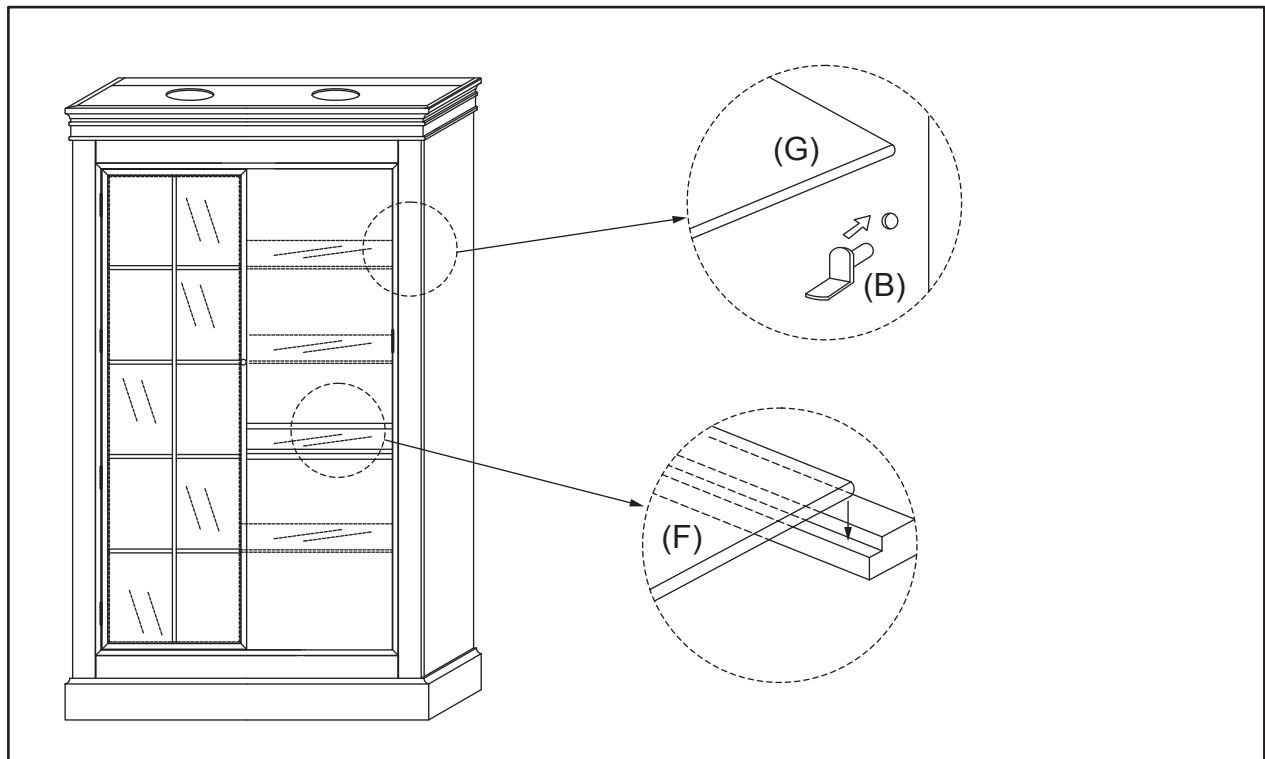


STEP 2: If the Cabinet is uneven, adjust the levelers located in the bottom corners using a Flathead screwdriver. Turn clockwise or counterclockwise until the Cabinet is level. Insert the Wood Plugs (E) into the leveler holes to cover the holes.

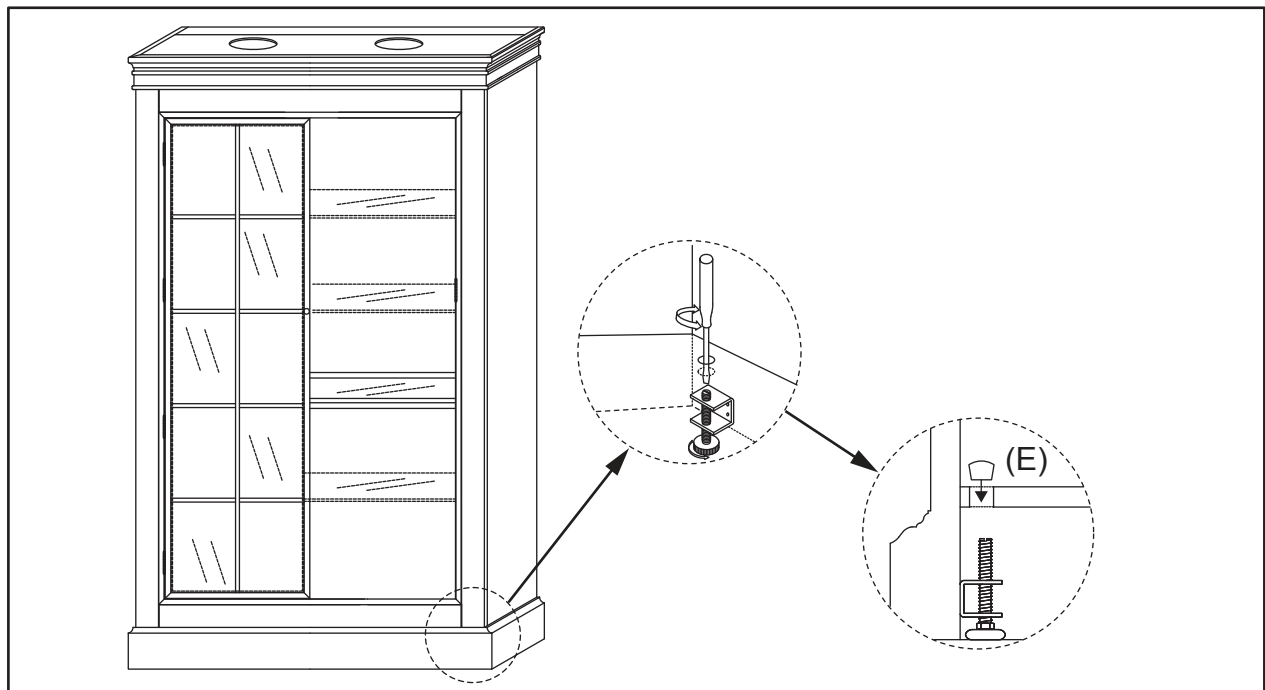


NOTE: Assemble the Cabinet in desired location for use.

STEP 3: Center the Cabinet in front of two studs and mark their location on the Wall. Push the Cabinet against the wall.

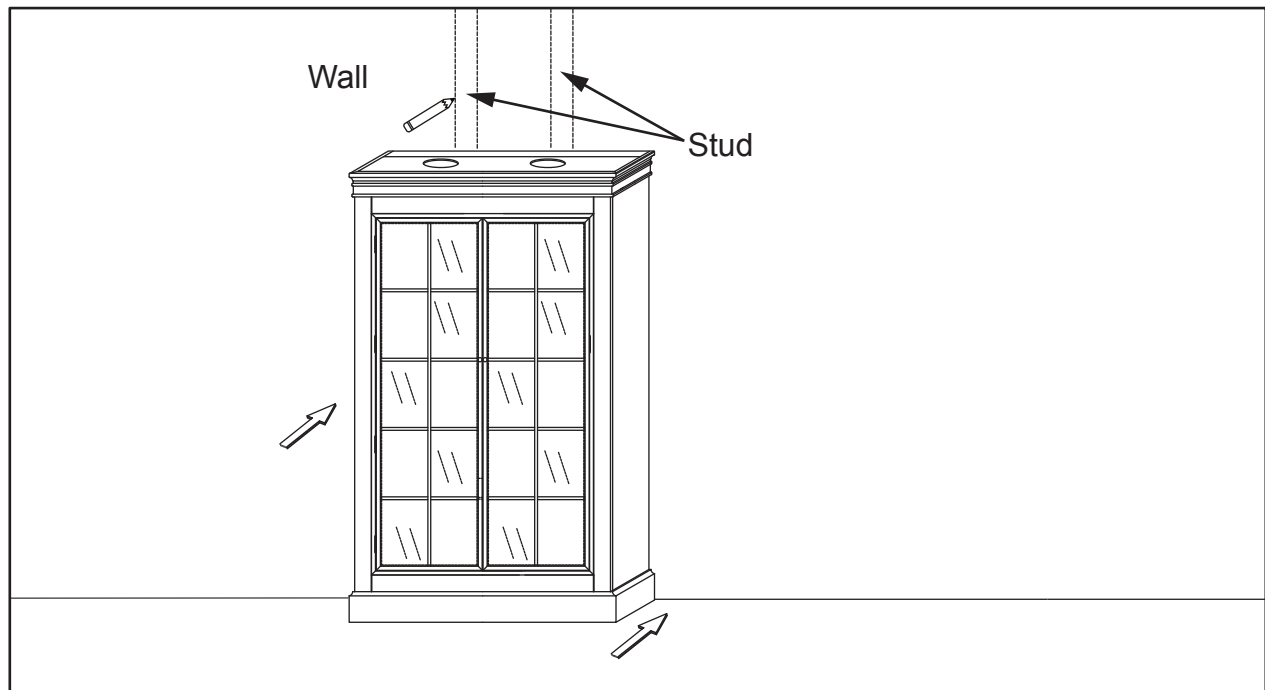


STEP 4: Slide the L-Bracket (C) over the top corner of the Cabinet and in front of the previously marked stud. Mark the wall at the top of the L-Bracket.

NOTE: It is important that the L-Bracket is positioned like the picture below in order to hide the Bracket.

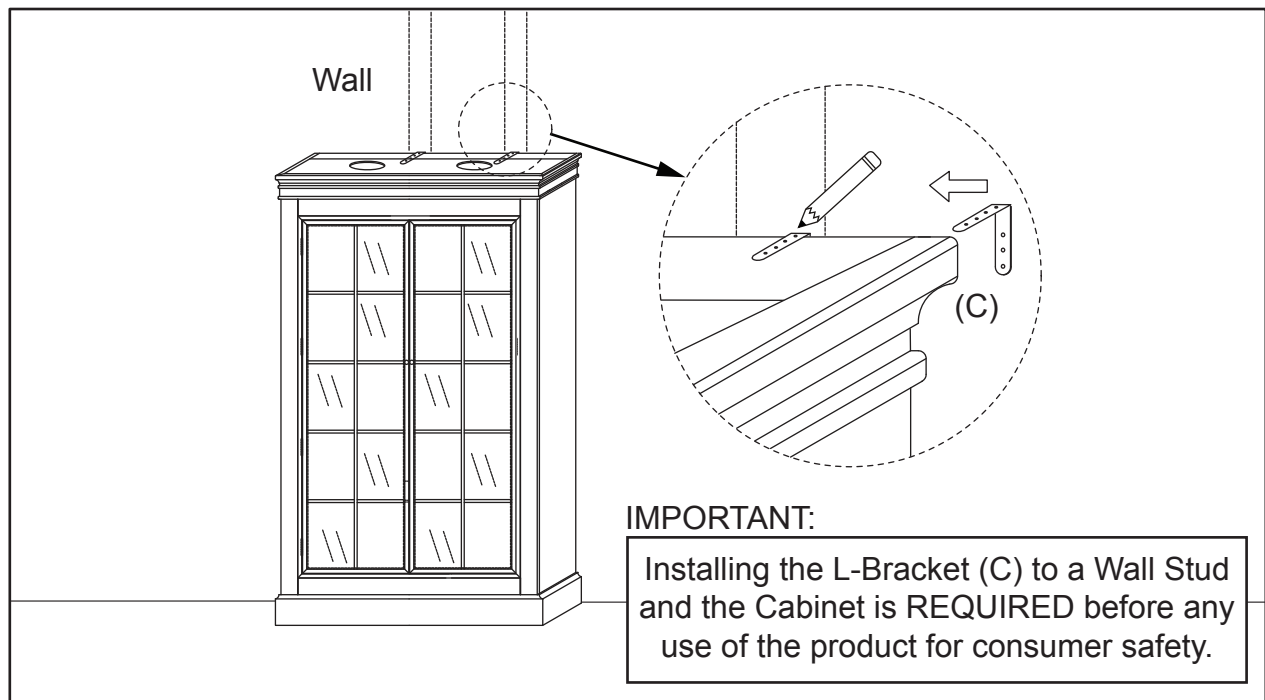

NOTE: Assemble the Cabinet in desired location for use.

STEP 5: Pull the Cabinet away from the wall and attach the L-Brackets (C) to the studs using the Long Screws (A) and a screwdriver. If there are not studs in the desired Cabinet location, lightly tap in the Anchors (D) and attach the L-Brackets with the Long Screws.

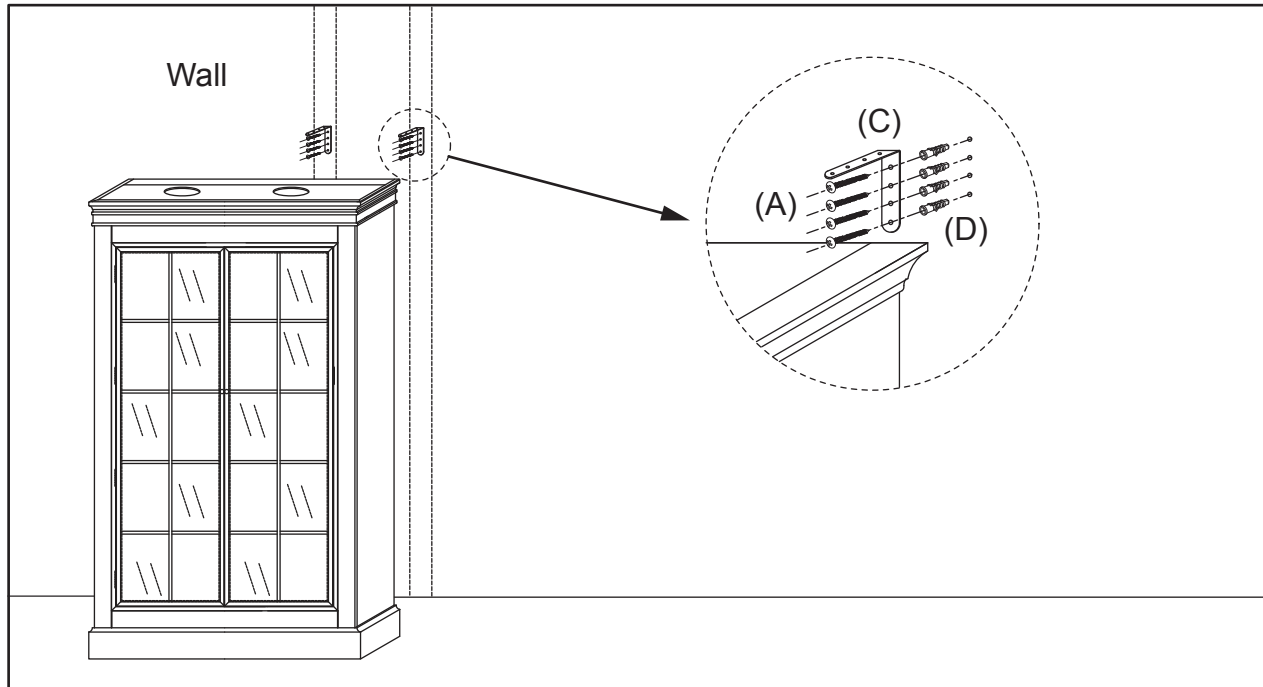

STEP 6: Slide the Cabinet underneath the previously installed L-Brackets (C) and use 2 or more of the Long Screws (A) to attach the L-Brackets to the Cabinet with a screwdriver.

NOTE: The L-Brackets may not be completely on the Cabinet's top due to the Wall's base molding. Only screw into the bracket holes that are completely on the Cabinet top.

