## BALLARD DESIGNS.


Customer Service: 800-367-2810
Online: www.ballarddesigns.com

PRODUCT NAME: Lyon Mirrored Armoire

ITEM NUMBER: MA290

ASSEMBLED DIMENSIONS: 80"H x 44"W x 22 1/4"D



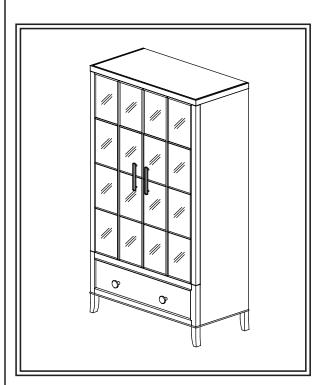

**REQUIRED TOOLS:** Phillips Screwdriver **ASSEMBLY TIME:** 5 - 10 minutes

Ltr.	Qty.	Hardware/Components Included	
А	12		Shelf Supports
В	3		Shelves
С	8	«)::::::::::::::::::::::::::::::::::::	*Short Screws
D	2		*Wall Anchoring (Anti-tip) L-Brackets See page 2
Е	8	<(3)	*Long Screws

\*Wall Anchoring/Anti-tip hardware.

SHELVES: Insert Shelf Supports (A) into pre-drilled holes along inside of unit. Set Shelves (B) level upon Supports.

Levelers installed under each corner/leg. If necessary, adjustments may be made by carefully lifting applicable corner and turning Leveler clockwise/counterclockwise.

NOTE

Set furniture into place and level before anchoring to wall.


PRODUCTS ARE NOT INTENDED FOR COMMERCIAL USE. UPDATED: 11-1-2023

MADE IN VIETNAM
Page 1 of 2


## WALL ANCHORING HARDWARE (ANTI-TIP) Steps 1 through 3

**STEP 1:** Determine installation location, then identify two wall studs\* behind unit. Push unit into place then slide each L-Bracket (D) over top of unit and center in front of each wall stud\*. Use pencil to mark wall at top of each Bracket.

IMPORTANT: Orient Brackets as illustrated to ensure they are not visible after installation.

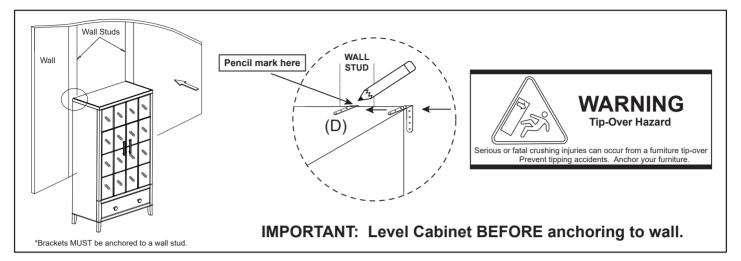

**STEP 2:** Pull unit away from wall, align L-Brackets (D) with marks on wall then anchor L-Bracket directly into wall stud using four Long Screws (E).

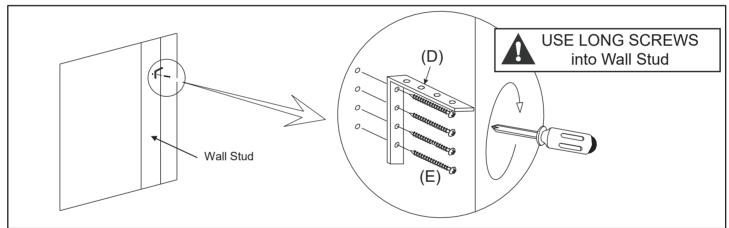

**STEP 3:** Move unit back into place and slide under both L-Brackets (D). Attach using Short Screws (C) and a Phillips Screwdriver to firmly tighten. **NOTE: Floor molding may prevent all holes from covering top, install Screws into those holes which cover top.** 

