

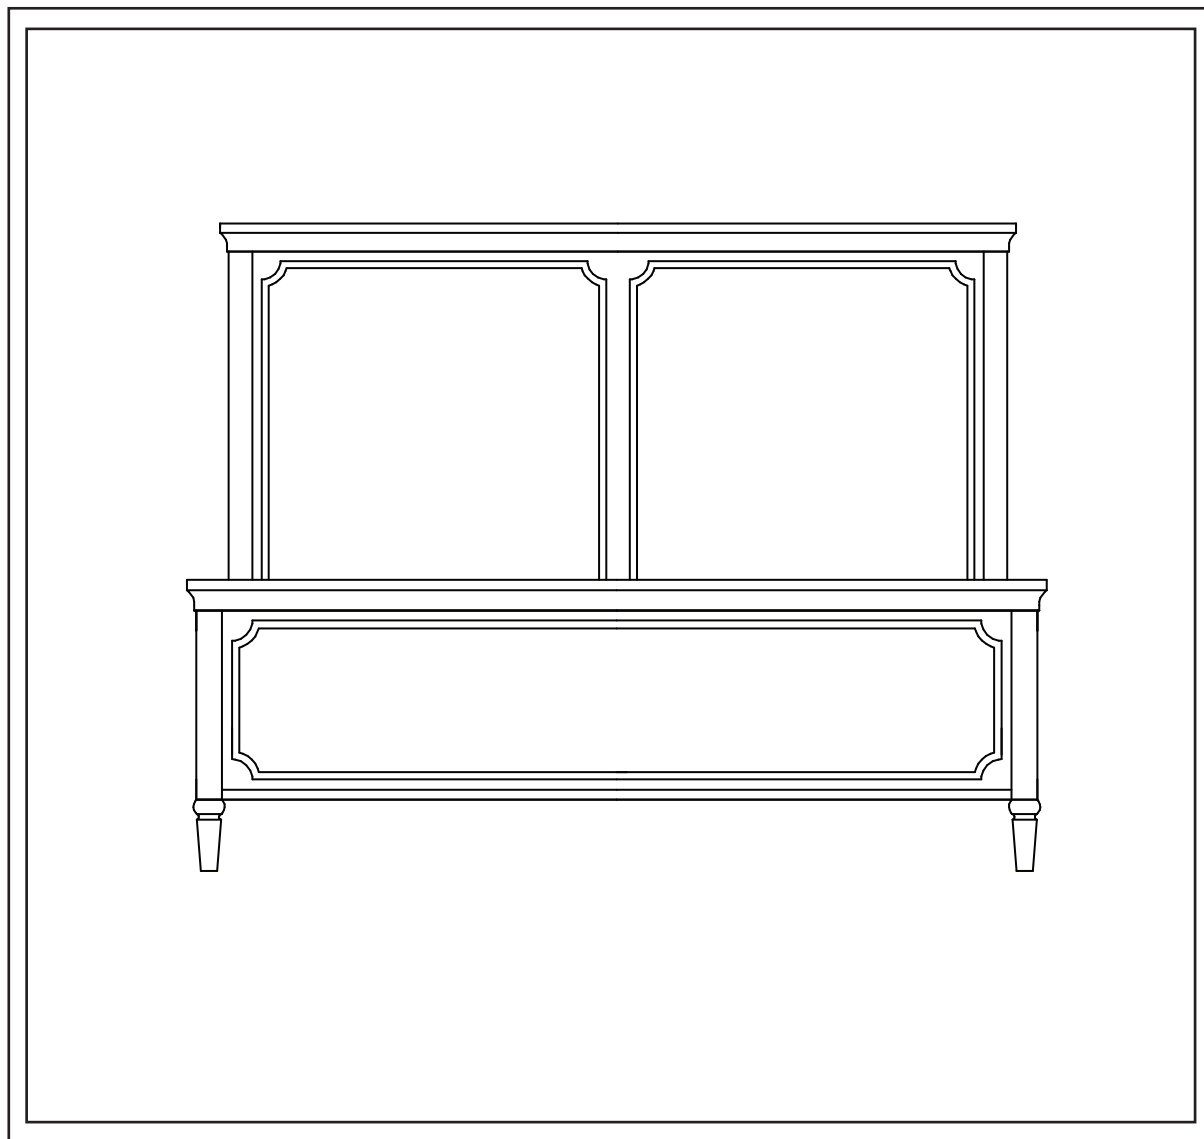
PRODUCT NAME: Isabella Bed

ITEM NUMBER: MB405






DIMENSIONS OF ITEM ASSEMBLED: King: 57"H x 84 1/2"W x 86"D

Queen: 57"H x 68 3/4"W x 86"D

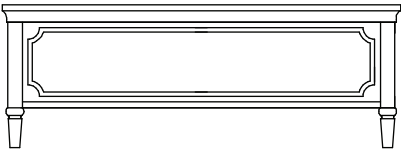
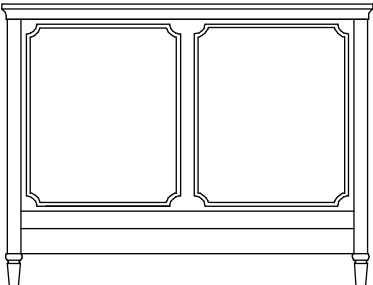
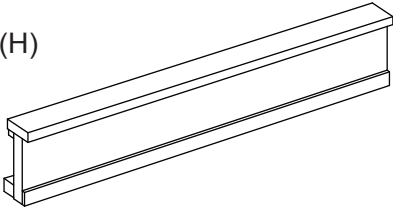
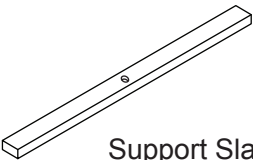

Full: 57"H x 62 1/2"W x 82"D



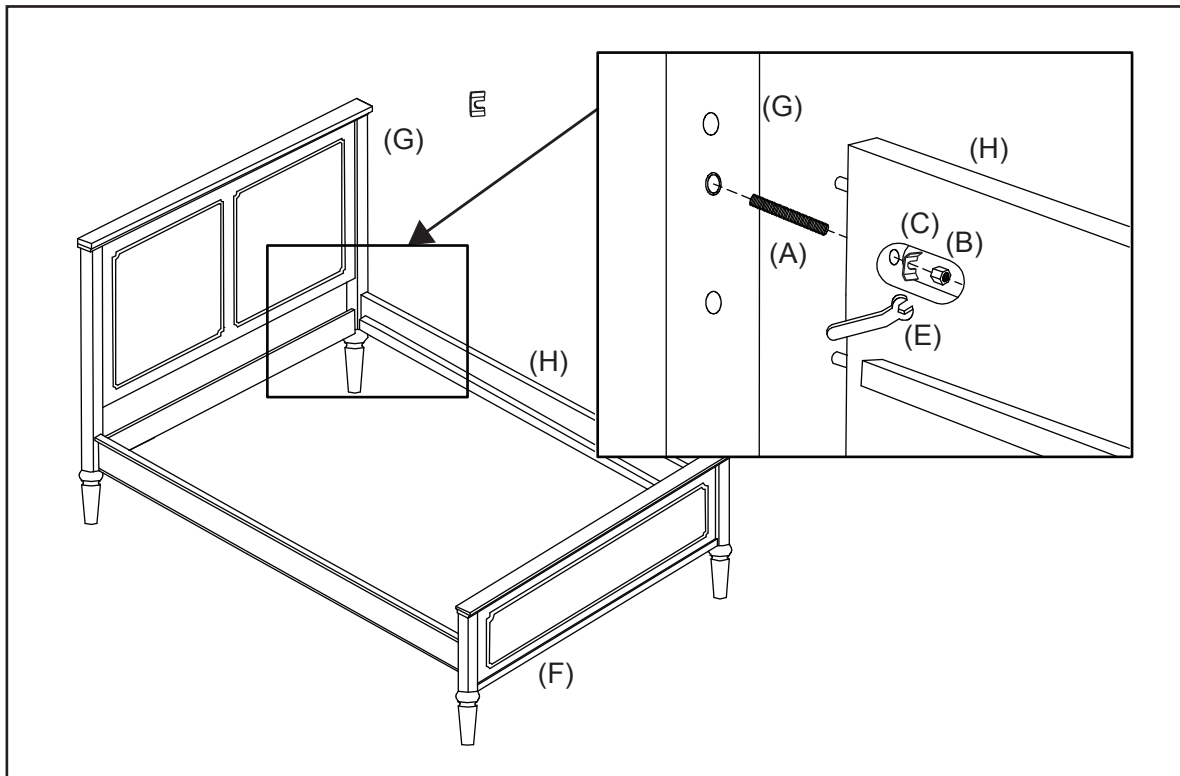
NOTE: We recommend setting this Bed up in it's final destination.

Ltr.	Qty.	Hardware Included	
A	4		Bolts
B	4		Nuts
C	4		Washers
D	10		Screws
E	1		Wrench

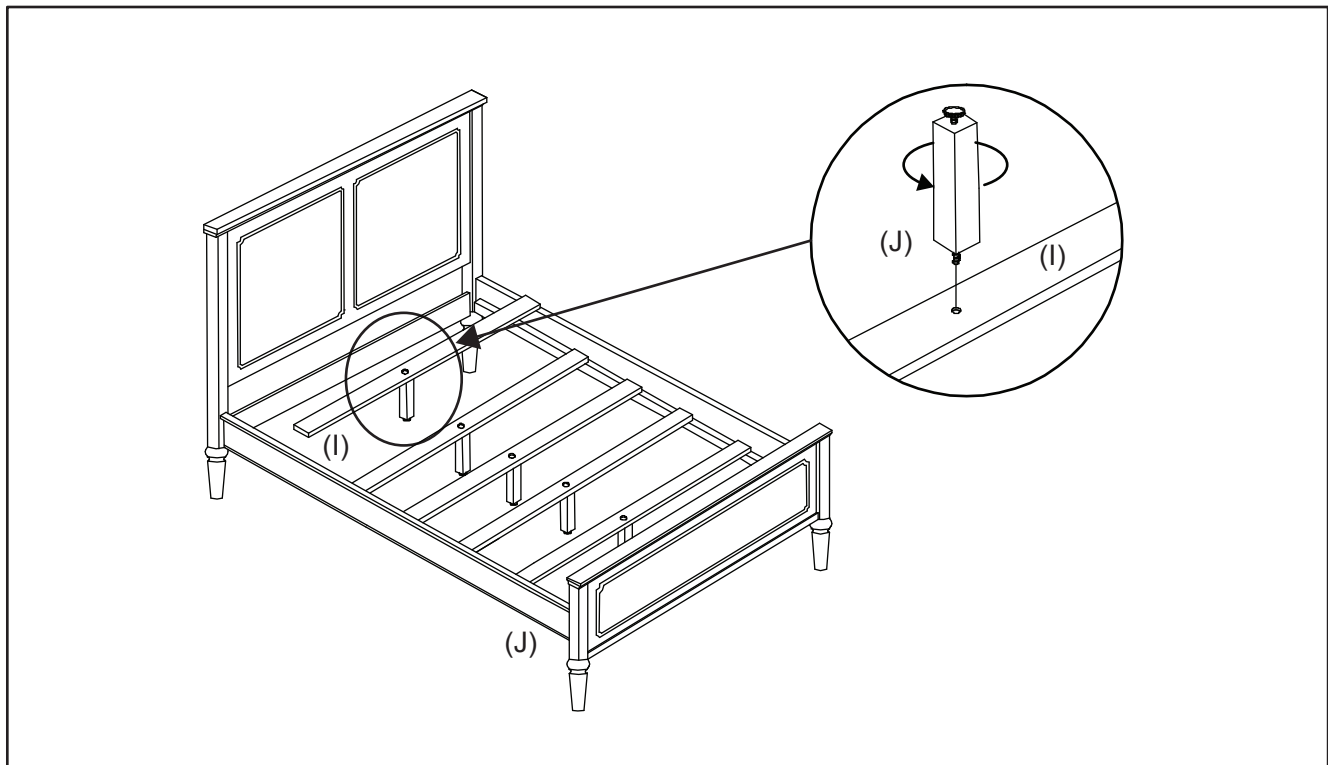
TOOLS NEEDED:
 -Assembly requires 2 or more people.
 -Requires a screwdriver.

Ltr.	Qty.	Components	
F	1	Footboard (F)	Headboard (G)
G	1		
H	2	Side Rails (H)	
I	5	Support Slats (I)	
J	5	Support Feet (J)	
			
			

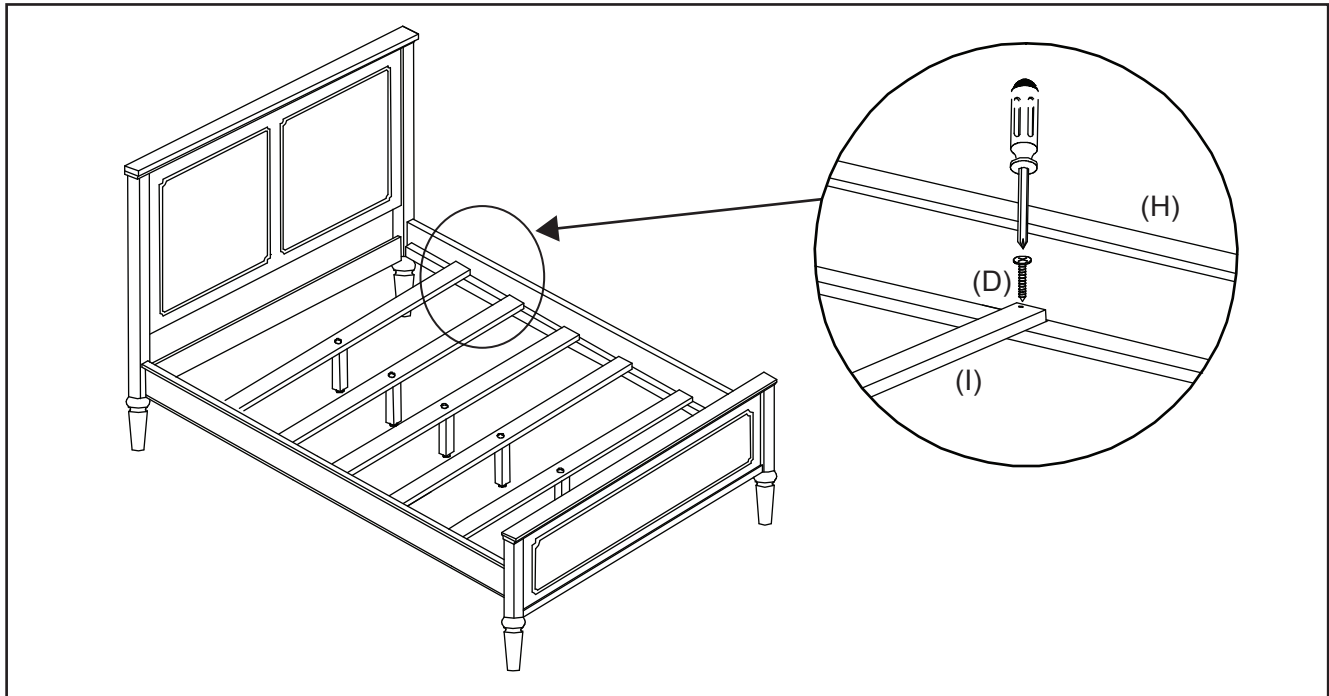
STEP 1: Screw the Bolts (A) into the Headboard (G). Align and insert the Side Rails (H) into the Headboard. Tighten a Washer (C) and a Nut (B) onto each Bolt (A) using the Wrench (E). Repeat this for both corners of the Headboard (G) and the Footboard (F).



STEP 2: Remove the plastic tube from the bolt on the end of each Support Foot (J) and screw them into the pre-drilled hole in every Support Slat (I). Tighten completely.
NOTE: Screw the Foot into the Slat's side opposite the exposed metal T-nut.



STEP 3: Align the holes at the ends of the Support Slats (I) with the pre drilled holes in the lips of the Side Rails (H). Attach the Slats to the Side Rails using the Screws (D). Tighten all Screws (D) completely.



STEP 4: If the assembled Bed is uneven, adjust the levelers on the bottom of each Support Foot (J) by twisting them clockwise or counterclockwise until the assembly is even.

