








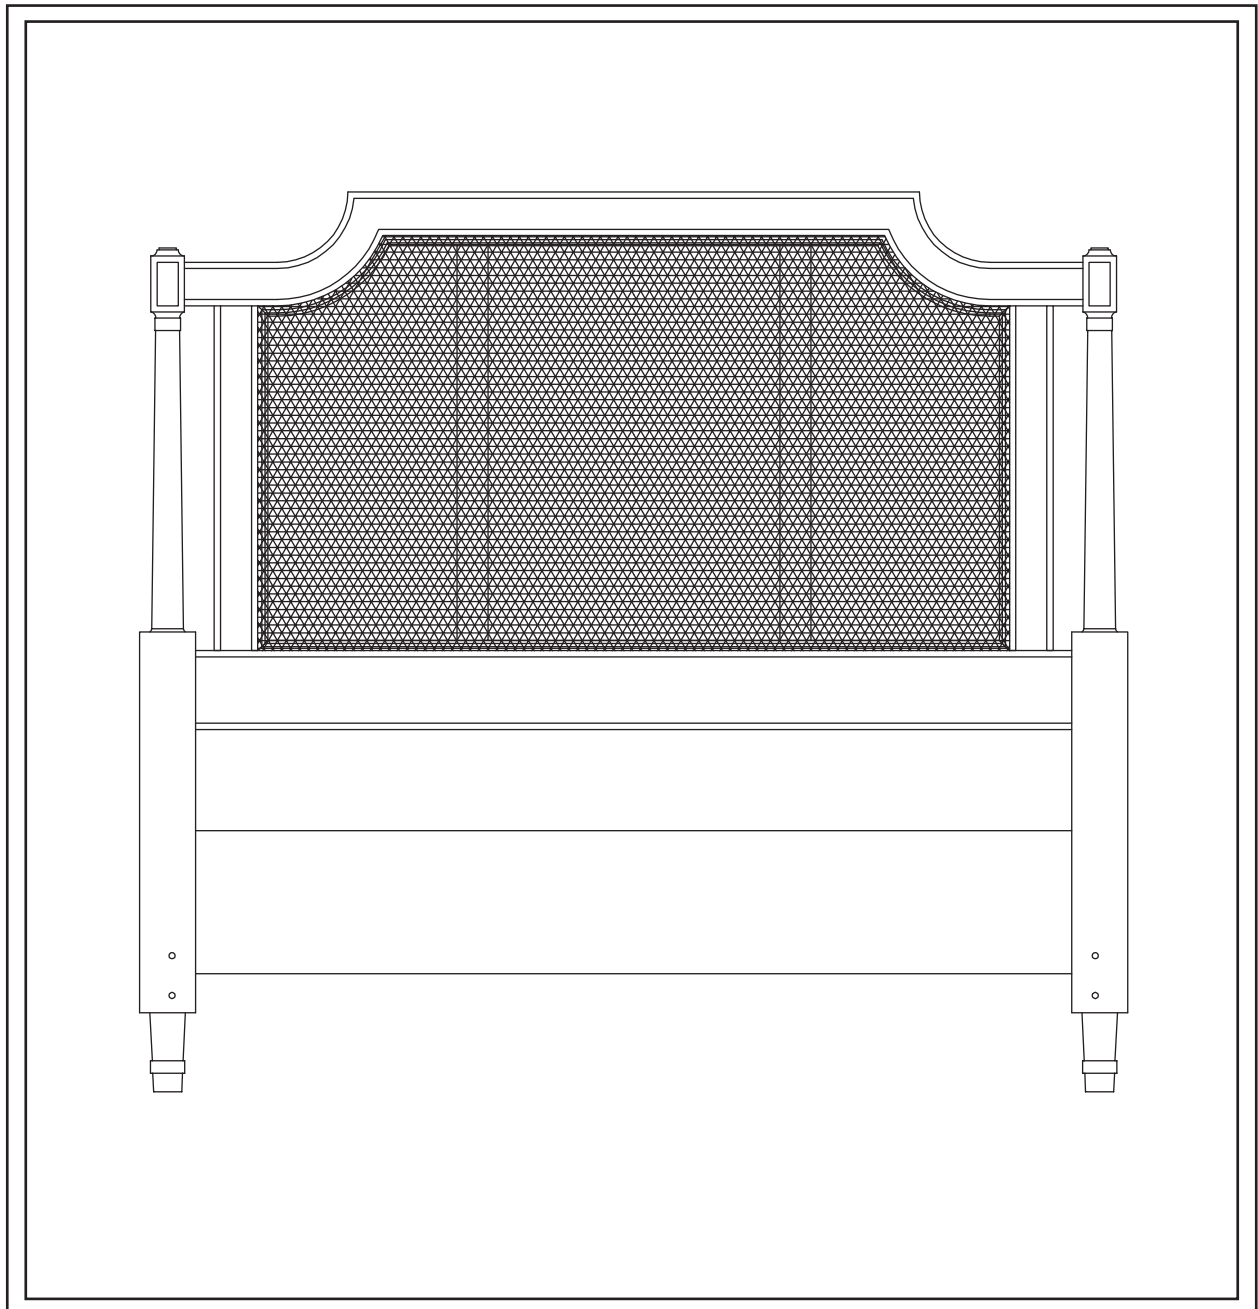

PRODUCT NAME: Villandry Headboard (QUEEN)
ITEM NUMBER: MB495 WWH QUN
ASSEMBLED DIMENSIONS : 57"H x 65.25"W x 2.25"D



Recommended Bed Frame:
Leggett and Platt K45G/K45R - Queen/King/California King


Ltr.	Qty.	Hardware Included	
A	4		Allen Bolts (M8 x 80mm)
B	4		Flat Washers (M8 x 20mm)
C	8		Lock Washers (M8)
D	4		Nuts (M8)
E	1		Wrench (12mm)
F	1		Allen Wrench (5mm)

TOOLS NEEDED:

- Wrench/Allen Wrench (Included)
- Two person assembly suggested.

Remove all parts, hardware and protective packaging from carton and carefully arrange on a clean, level, padded surface.


NOTE: To avoid accidentally discarding small parts or hardware, retain all carton contents until assembly and installation are complete.

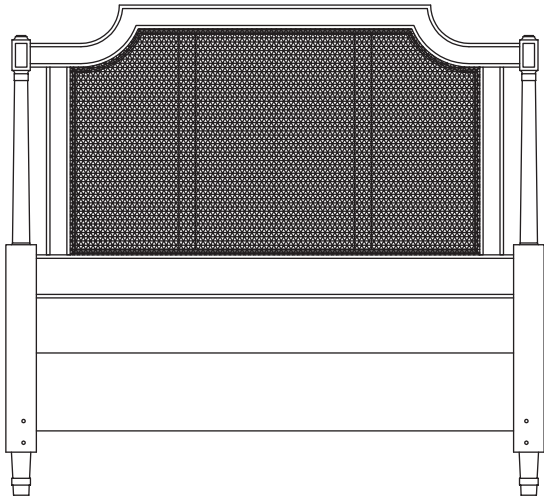Ltr.	Qty.	Components	
G	1		Headboard



Attach Headboard (G) to Bed Frame (Not Included).

Align Bed Frame Bracket with holes on lower front of Headboard. Place Flat Washer (B) onto Allen Bolt (A) and insert through back of Headboard into Bracket on Bed Frame. Place Flat Washer (B) followed by Lock Washer (C) then Nut (D) onto Bolt and use Wrench (E) and Allen Wrench (F) to securely and firmly tighten Bed Frame to Headboard. Repeat for process for all remaining holes. **If frame does not align with pre-drilled holes in Headboard, consider using a **Modification Plate, commonly called a Modi Plate (not included). These are available by searching on-line or a local retailer.**

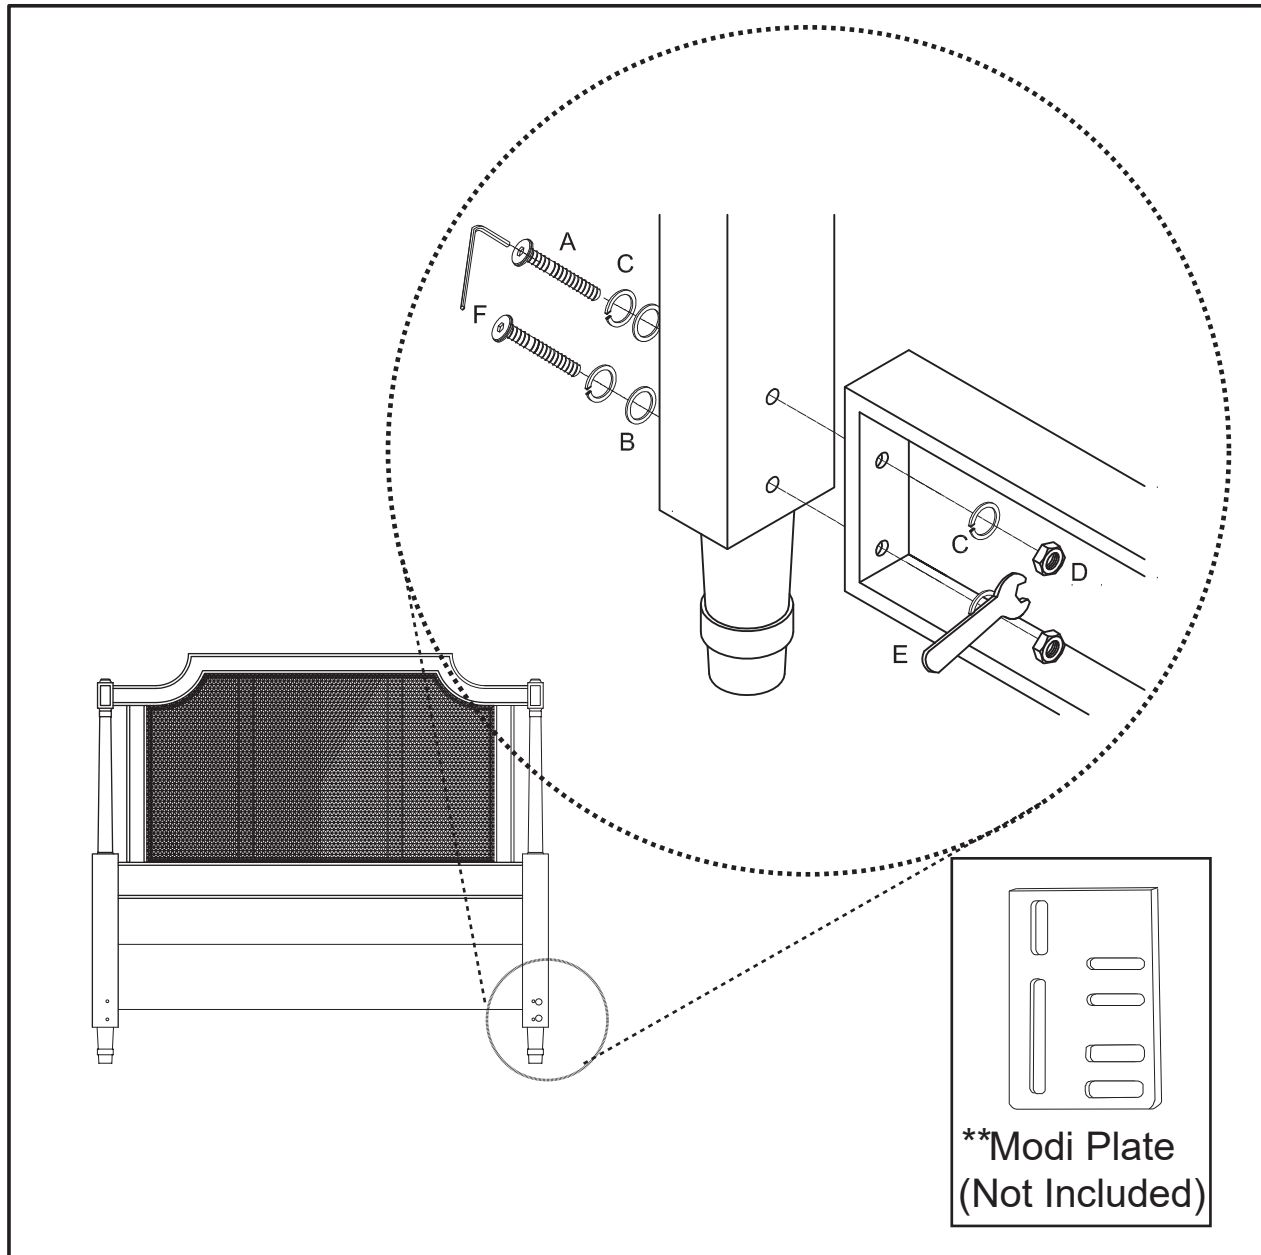

Cleaning and Care

Periodically dust with a soft, dry cloth.
Protect surfaces to prevent damage.
Do not use alcohol based cleaners or polishes.



Customer Service: 800-367-2810
Online: www.ballarddesigns.com