






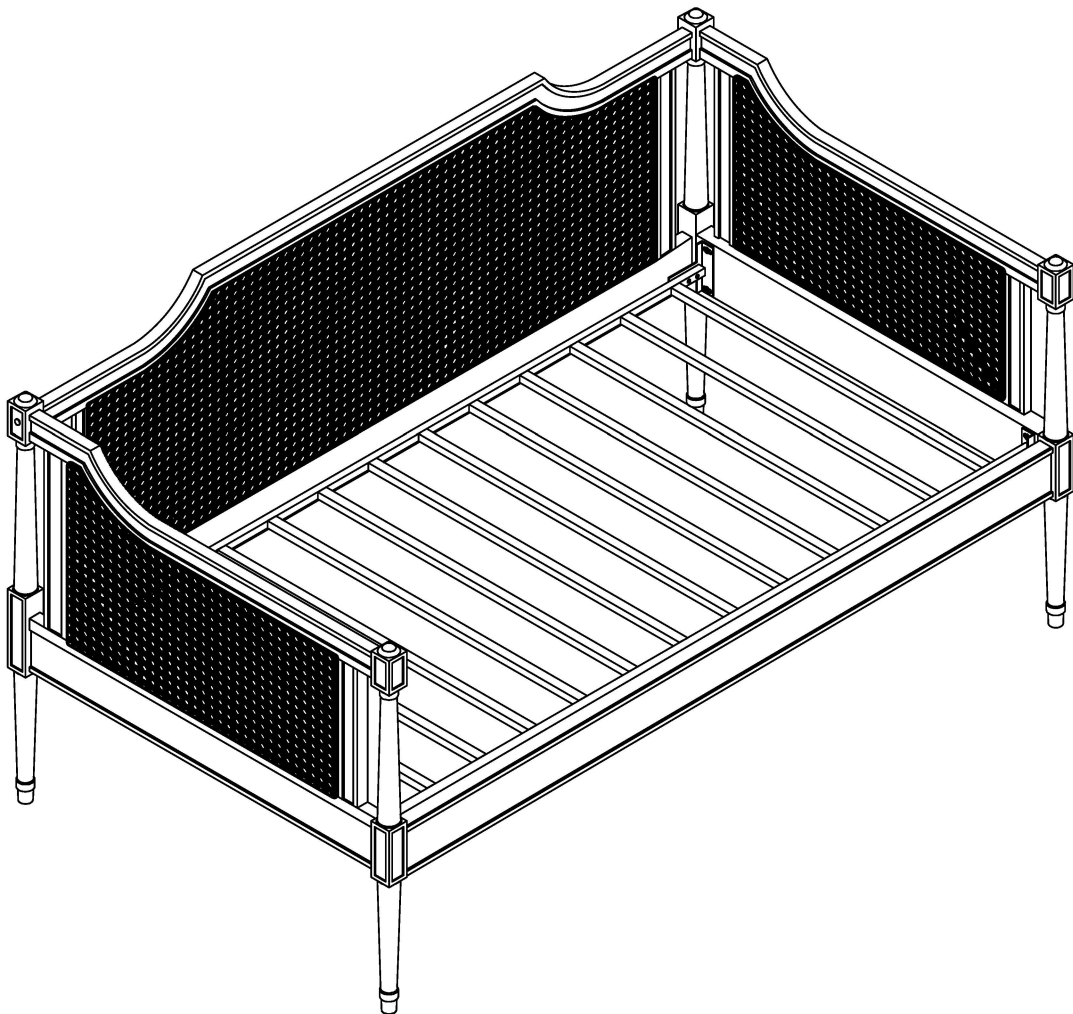













PRODUCT NAME: Villandry Daybed

ITEM NUMBER: MB503

ASSEMBLED DIMENSIONS: 44.5"H x 79.25"W x 43.5"D




Ltr	Qtr	Hardware included	
A	4		Cam Lock
B	4		Cam Bolt
C	2		Long Allen Bolt M6-40mm
D	1		Large Allen Wrench
E	1		Small Allen Wrench
F	2		Wood Plug
G	8		Medium Allen Bolt M6-25mm
H	20		Lock Washers M6
I	4		Short Allen Bolt M6-15mm
J	1		Center Support Bracket
K	4		Deck Support Bracket
L	8		Dowel Ø10 x 40mm
M	8		Nut M6
N	8		Medium Allen Bolt M6-35mm
O	16		Flat Washers M6
P	1		Wrench

**TOOLS NEEDED:**  
 Allen Wrench (included),  
 Standard Screwdriver, Small  
 Hammer  
 - Two person assembly  
 suggested.


Remove all parts, hardware and  
 protective packaging from  
 carton and carefully arrange on  
 a clean, level, padded surface.

**NOTE:** To avoid  
 accidentally discarding small  
 parts or hardware, retain all  
 carton contents until  
 assembly and installation are  
 complete.

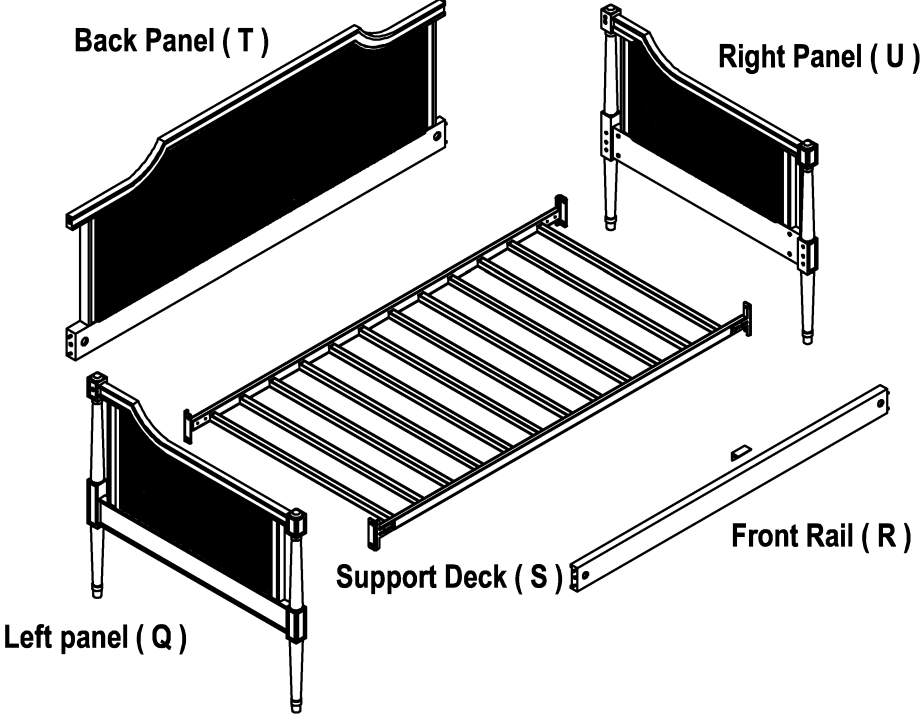
Ltr	Qtr	Components	
Q	1		Back Panel ( T )
R	1		Right Panel ( U )
S	1		
T	1		
U	1		Left panel ( Q )
			Support Deck ( S )
			Front Rail ( R )




**STEP 1:** Using Short Allen Bolt (I) with Lock Washer (H), attach Center Support Bracket (J) to center of Back Panel (T). Place each Short Allen Bolt into T-nut and tighten using Allen Wrench (E). **NOTE:** Orient Bracket as illustrated below. Insert the dowel (L) into the hole located on both end of front rail (R) and back panel (T) as illustrated below

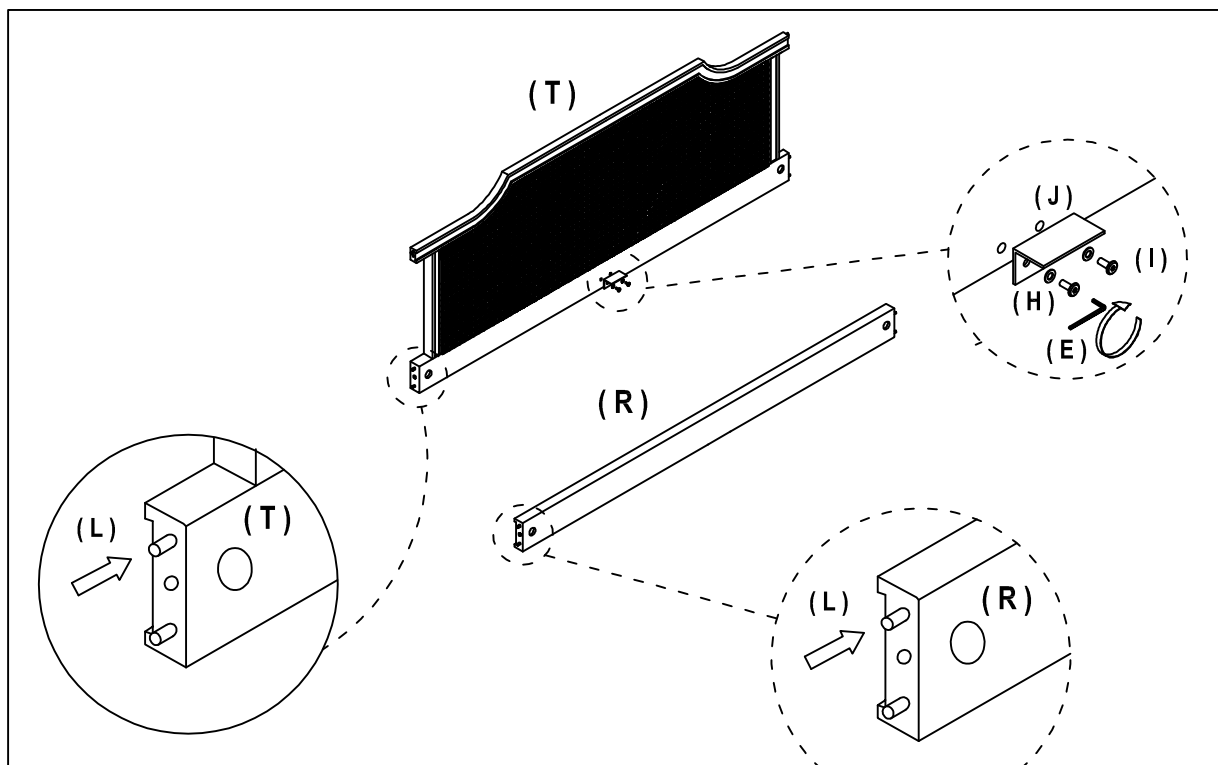


**STEP 2:** Insert Cam Bolt (B) into center hole in each leg (inset below) on the Right Panel (U) and Left Panel (Q) and firmly tighten using a screwdriver. Next, gently slide Back Panel (T) and Front Rail (R) onto Cam Bolts trough center hole in ends of each piece.

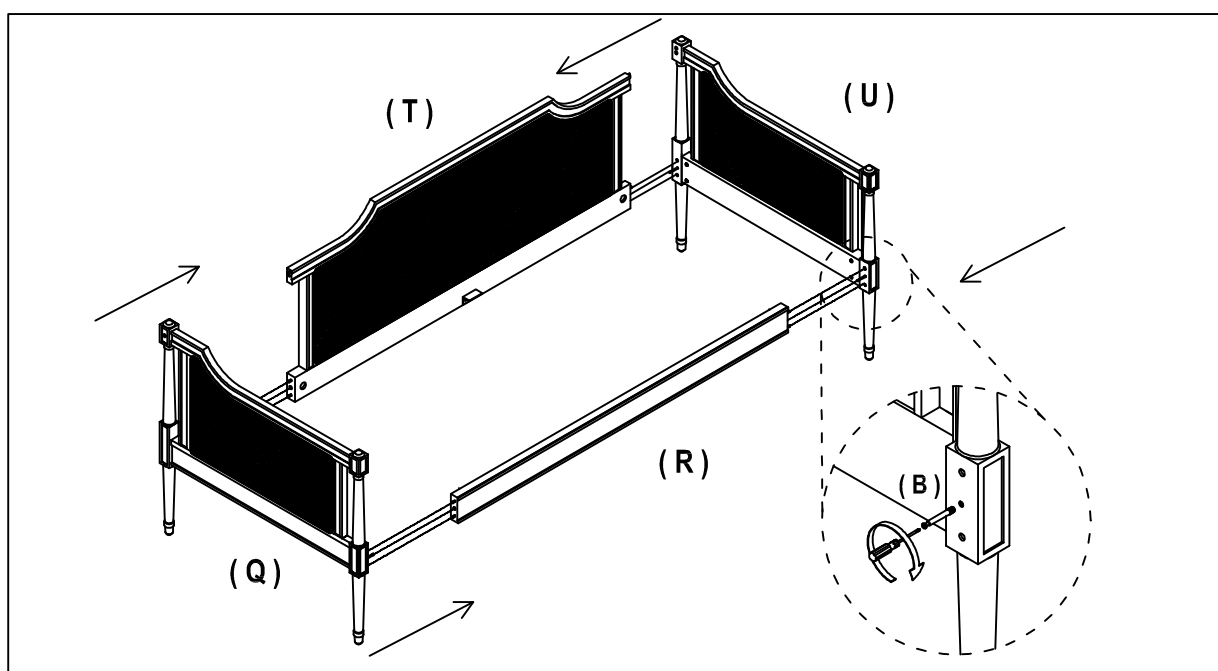


STEP 3: Connect Components (T,U,Q,R) together by inserting Cam Lock (A) into large holes on front of Back Panel (T) and back of Front Rail (R). Turn and tighten Cam Lock using Large Allen Wrench (D). NOTE: Cam Lock designed to catch and hold head of Cam Bolt. Components will be pulled together by Cam system as it is turned. Turn until Cam stops and components are secure.

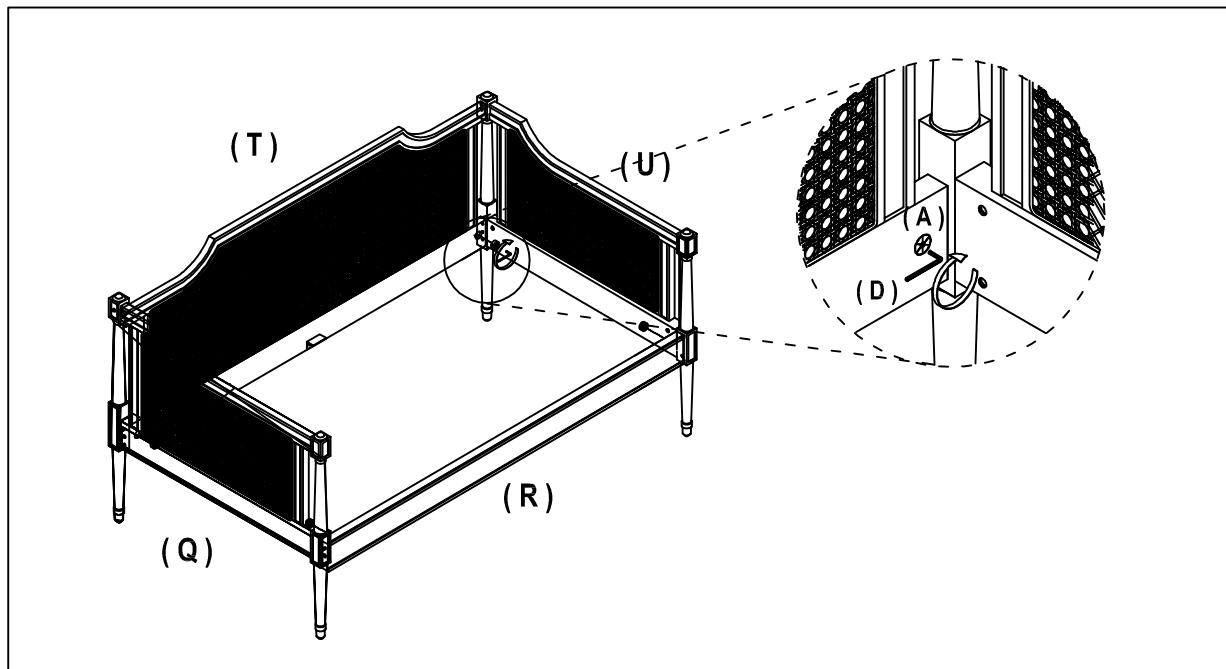


STEP 4: Place Long Allen Bolt (C) into holes in top back post of Right Panel (U) and Left Panel (Q). Firmly tighten using Small Allen Wrench (E).

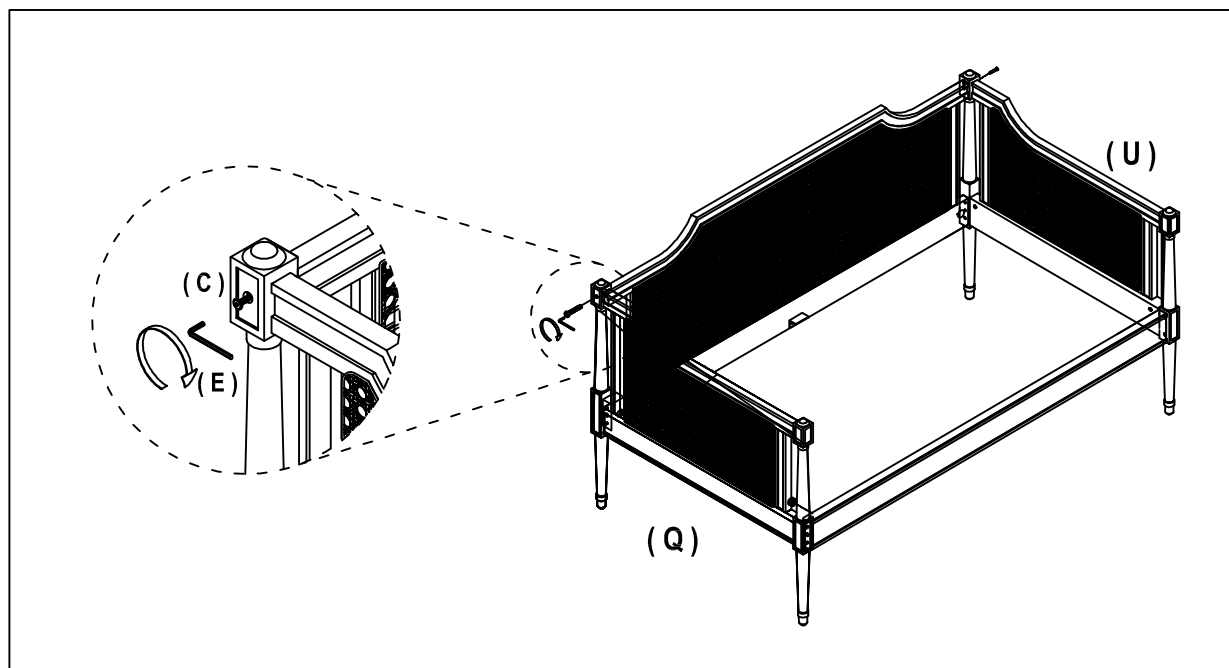


**STEP 5:** Insert Wood Plugs (F) into holes in top back post of Left Panel (Q) and Right Panel (U). Use a small hammer to gently tap in Plugs until flush with post.

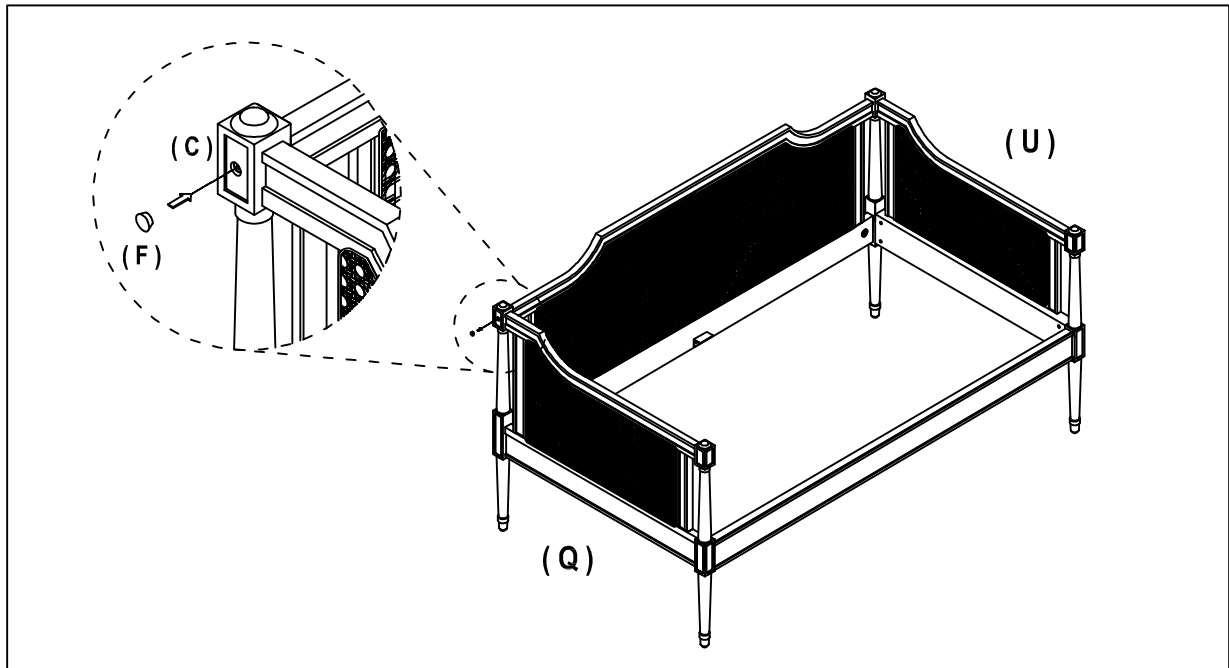


**STEP 6:** Align a Support Deck Bracket (K) onto each corner of Support Deck (S). Attach as illustrated using Medium Allen Bolt (N) with Flat Washer (O) and the other end using Nut (M) with Lock Washer (H).

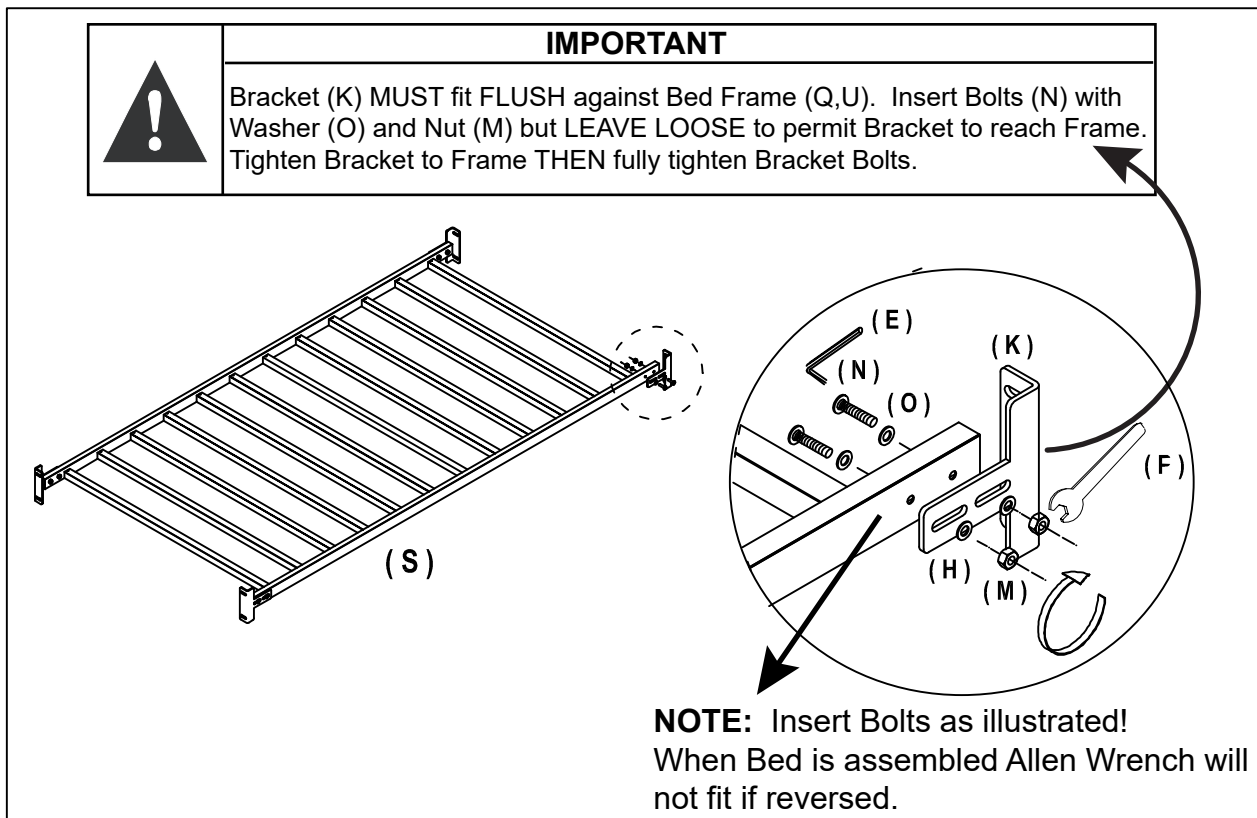

STEP 7: Gently lower Support Deck (S) into center of Daybed. Align slots in Support Deck Bracket (K) with holes in posts of Left Panel (Q) and Right Panel (U) and insert Medium Allen Bolt (G) Flat Washer (O) with Lock Washer (H). Firmly tighten and secure with Small Allen Wrench (E).

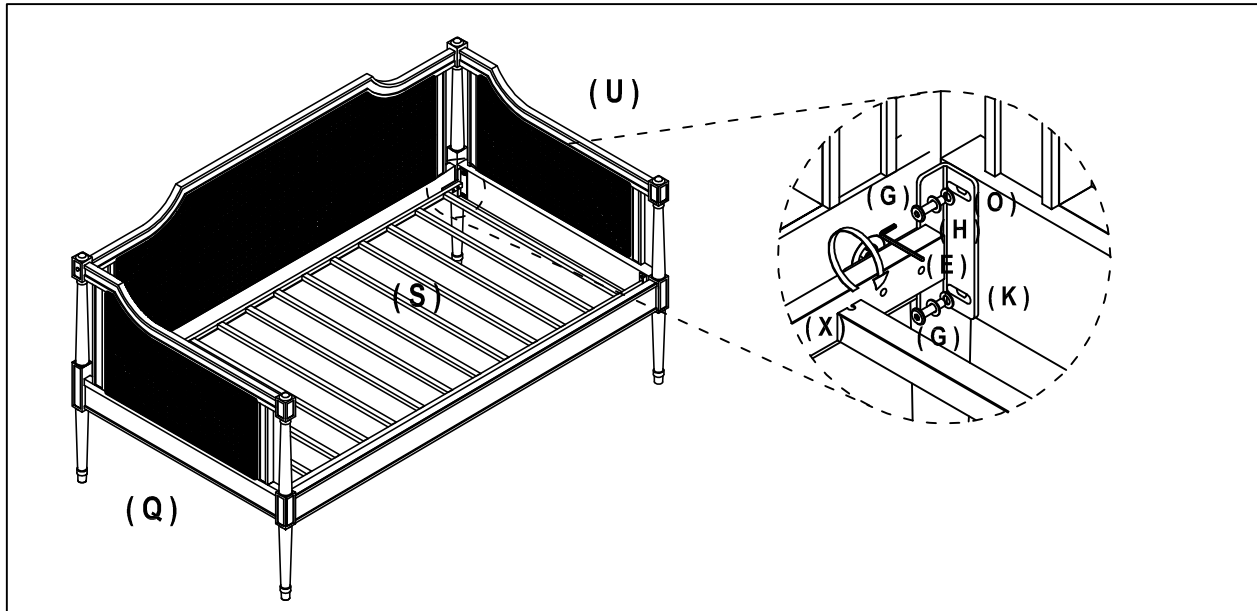

	<b>Cleaning and Care</b>
	Periodically dust with a soft, dry cloth. Prevent finish damage: do not use alcohol based cleaners or polishers.

