
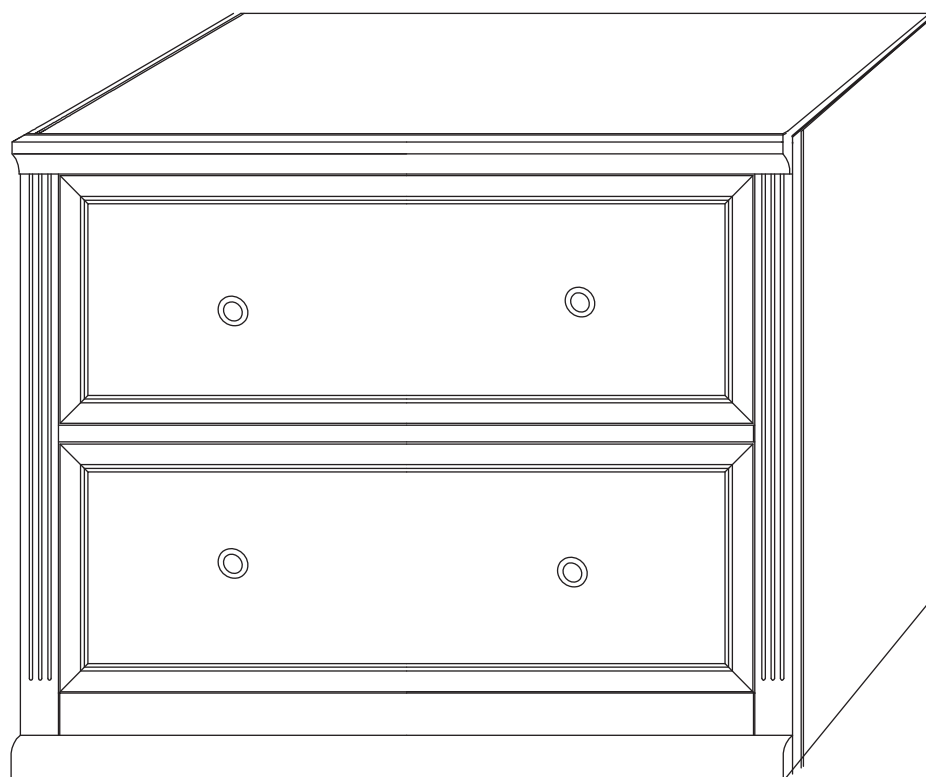



PRODUCT NAME: Tuscan File Console

ITEM NUMBER: MO227

ASSEMBLED DIMENSIONS : 30"H x 36"W x 17 1/4"D





Ltr.	Qty.	Hardware Included
A	4	 File Rod
B	1	 Anti-Tip Kit - Part B


TOOLS NEEDED:
-Two person assembly suggested.

Remove all parts, hardware and protective packaging from carton and carefully arrange on a clean, level, padded surface.


NOTE: To avoid accidentally discarding small parts or hardware, retain all carton contents until assembly and installation are complete.

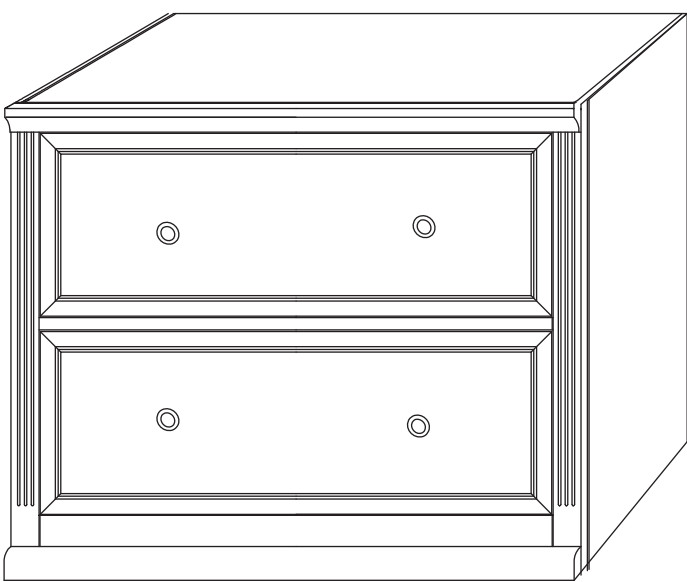
Ltr.	Qty.	Components
C	1	 <div data-bbox="224 1339 914 1455" data-label="Text"> <p>NOTE Hardware Pack and File Rods Located on underside of Cabinet</p> </div> 

STEP 1: Locate and remove File Rods (A) from underside of console and insert in notches on inside drawer edge as shown.

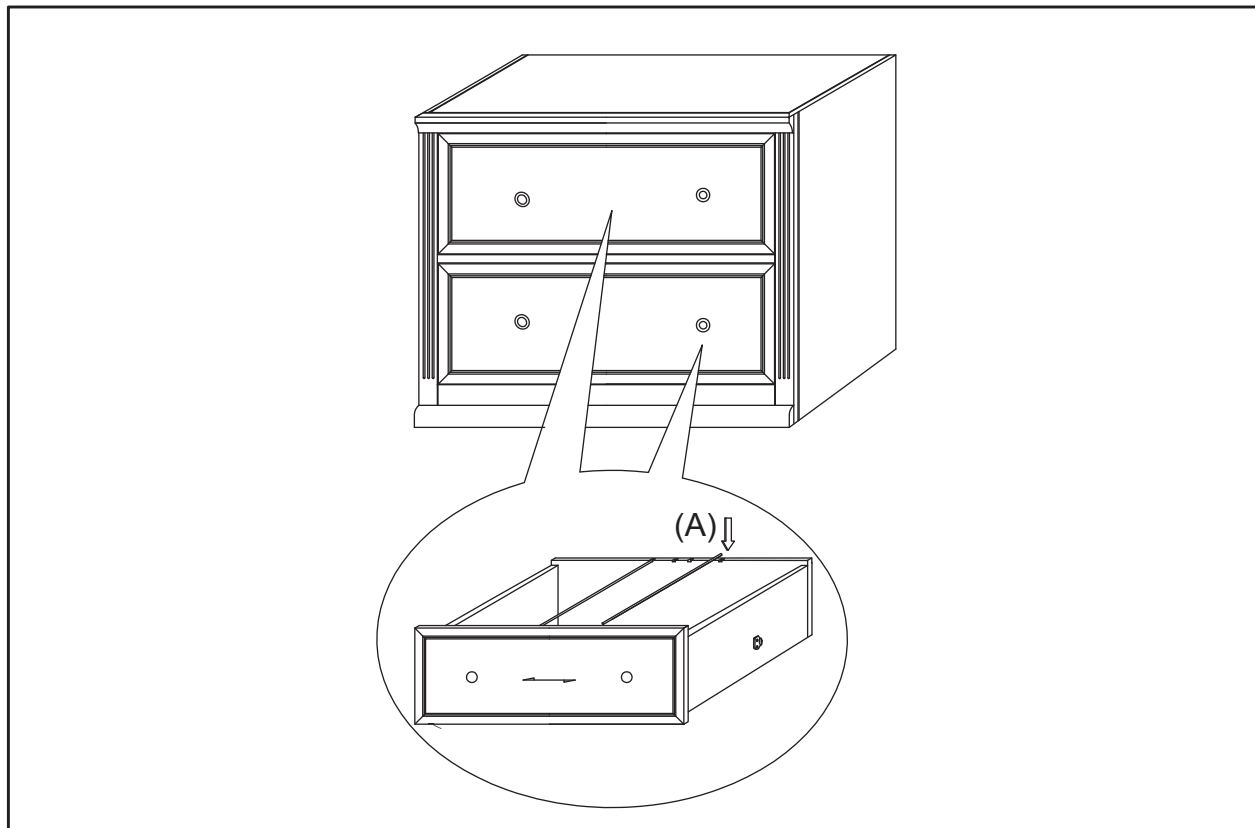

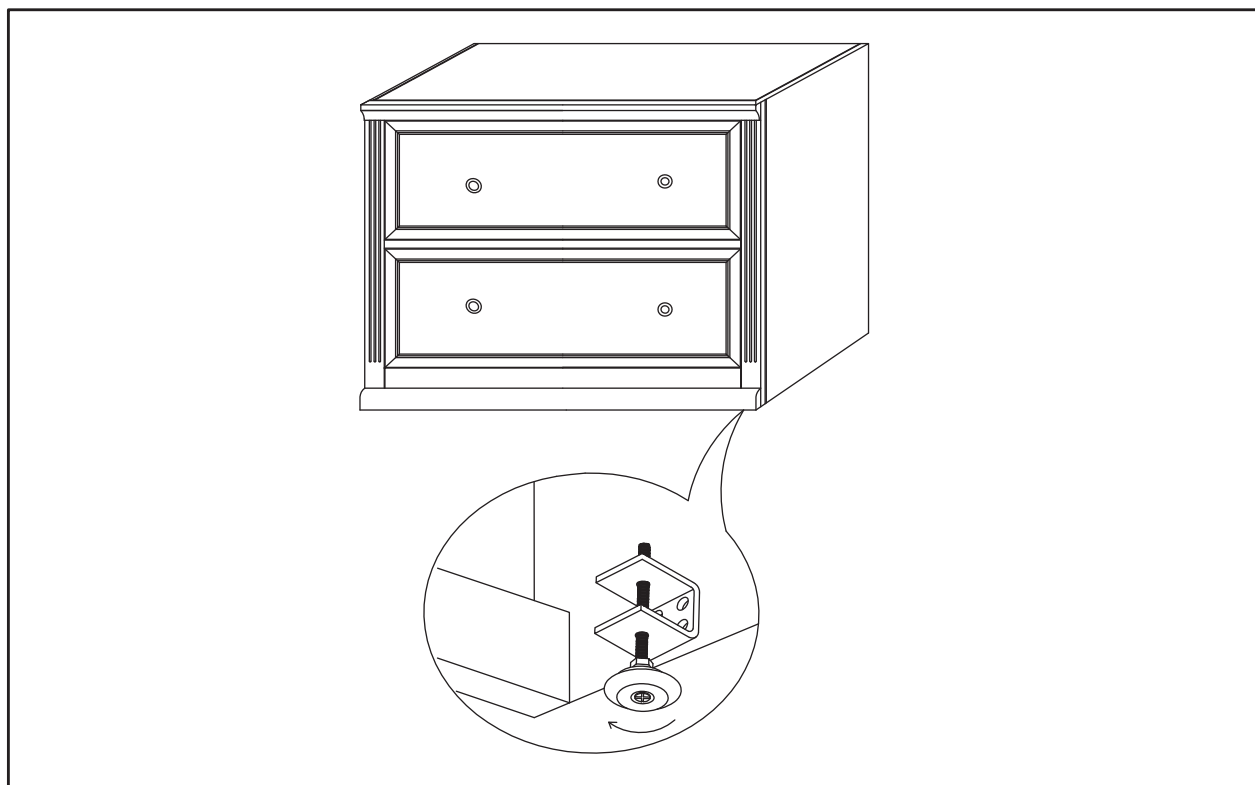



STEP 2: If necessary, Console may be leveled by adjusting Rotary Levelers located under each corner. Turn clockwise/counterclockwise until level.

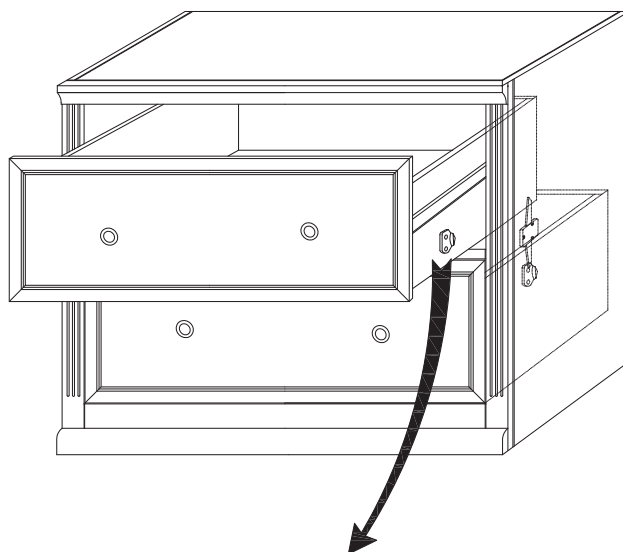




NOTE: To prevent accidental tipping of the Console, both drawers are equipped with safety locks which permit only one drawer to be open at a time.

ANTI-TIP KIT INSTALLATION (PART B):

Ltr.	Qty.	Hardware Included	
A	2		Small Screw
B	2		Large Screw
C	4		Bracket
D	2		Retention Belt

Attach 2 Brackets (C) to the back of the Console with the Small Screws (A) through the smaller holes. Screw the remaining Brackets (C) into a wall stud with the Large Screws (B) 2 inches below the Brackets attached to the furniture. Align the Brackets vertically and string in the Retention Belts (D). Confirm Straps are securely laced and locked.

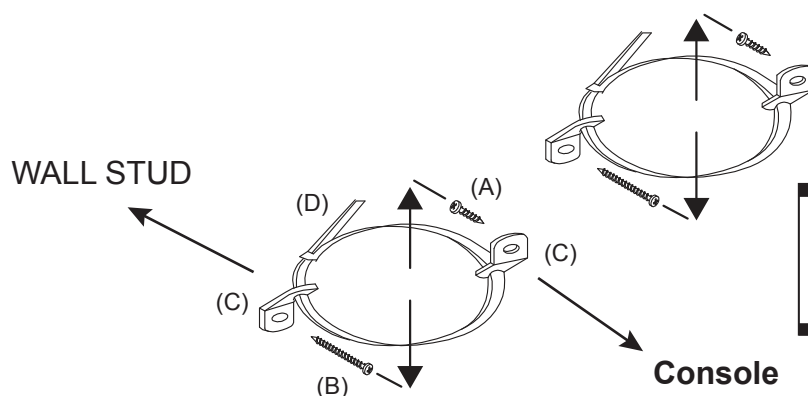

WARNING
Tip-Over Hazard
 WALL BRACKET MUST BE ATTACHED TO WALL STUD
 Prevent tipping accidents. Anchor your furniture.

Cleaning & Care:

DO NOT use alcohol based products or spray polisher as finish damage may result.
 Dust with a soft cloth.