




PRODUCT NAME: Original Home Office™ Corner Desk Addition Work Surface*

ITEM NUMBER: MO239





ASSEMBLED DIMENSIONS : 28"H x 53 3/4"W x 33"D

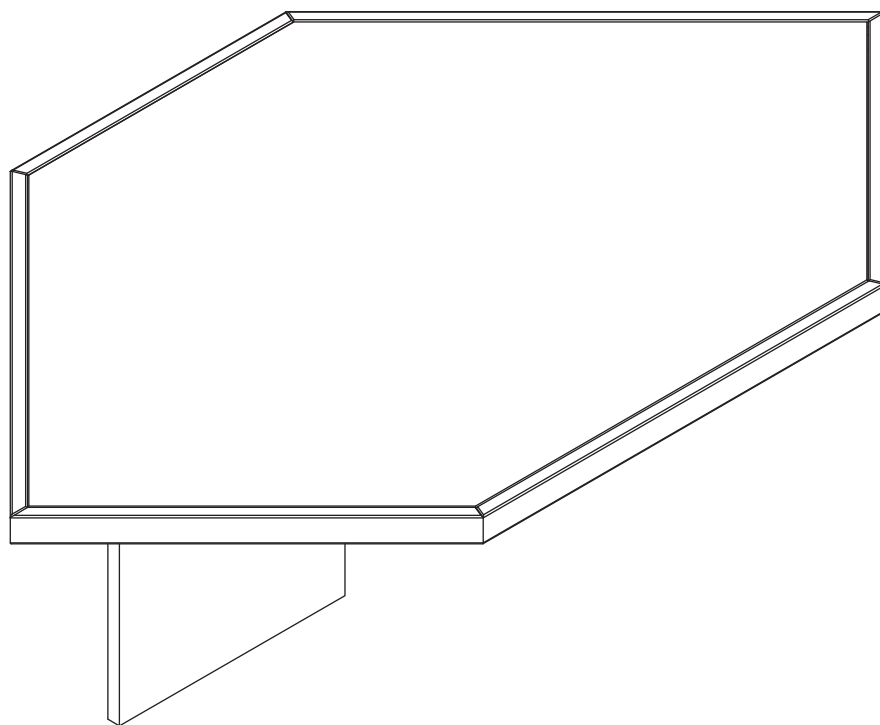*Corner Desk Addition Work Surface is designed for use with other Original Home Office Cabinets and Work Surface Tops. Sold separately. Not designed as a stand alone work surface.





Prevent accidentally discarding small parts or hardware. Retain all carton contents until assembly and installation are complete.

 Assemble in location for intended use.

Ltr.	Qty.	Hardware Included	
A	24		Wood Screw
B	16		Coarse Wood Screw
C	4		L-Bracket
D	4		Connector


TOOLS REQUIRED:
Phillips Screwdriver
-Two person assembly suggested.

Remove all parts, hardware and protective packaging from carton and carefully arrange on a clean, level, padded surface.

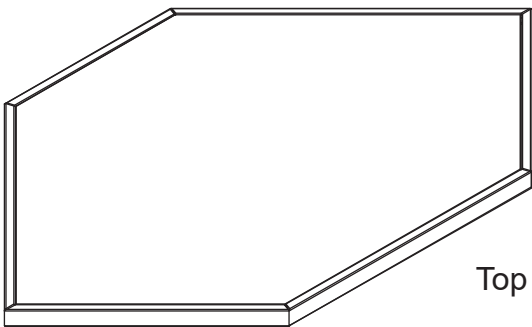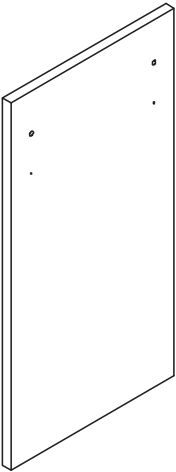
Ltr.	Qty.	Components
E	1	 <p>Top</p>
F	1	 <p>Leg</p>




STEP 1: Remove components and hardware from packaging.

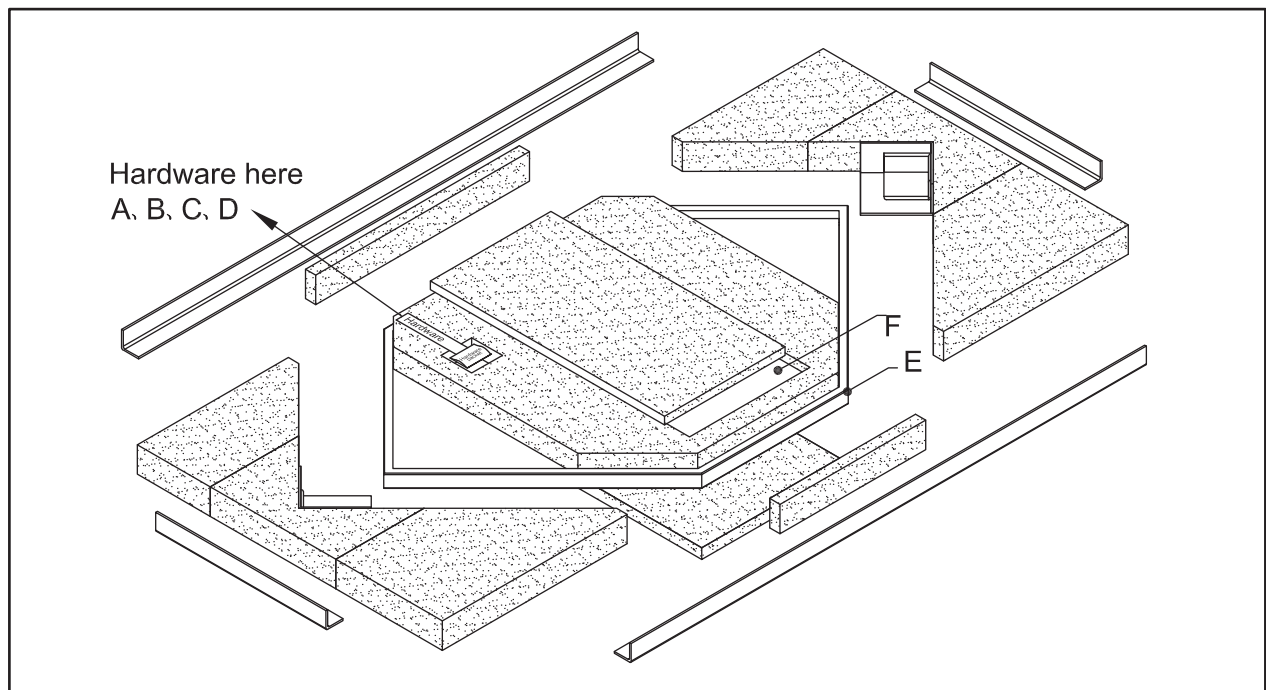

STEP 2: Secure L-Brackets (C) to Leg (F) using Coarse Wood Screws (B). Firmly tighten.

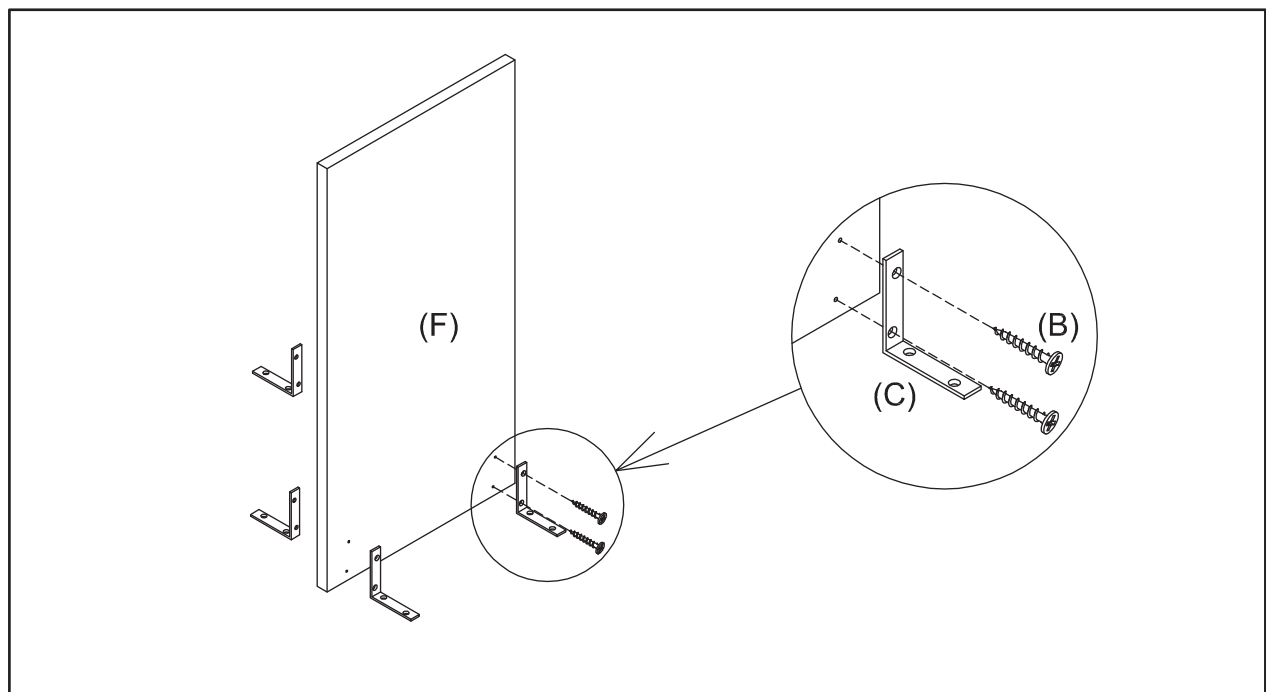


STEP 3: Invert Top (E) onto a clean, level, padded surface. Secure L-Brackets (C) on Leg (F) to Top (E) using Coarse Wood Screws (B).

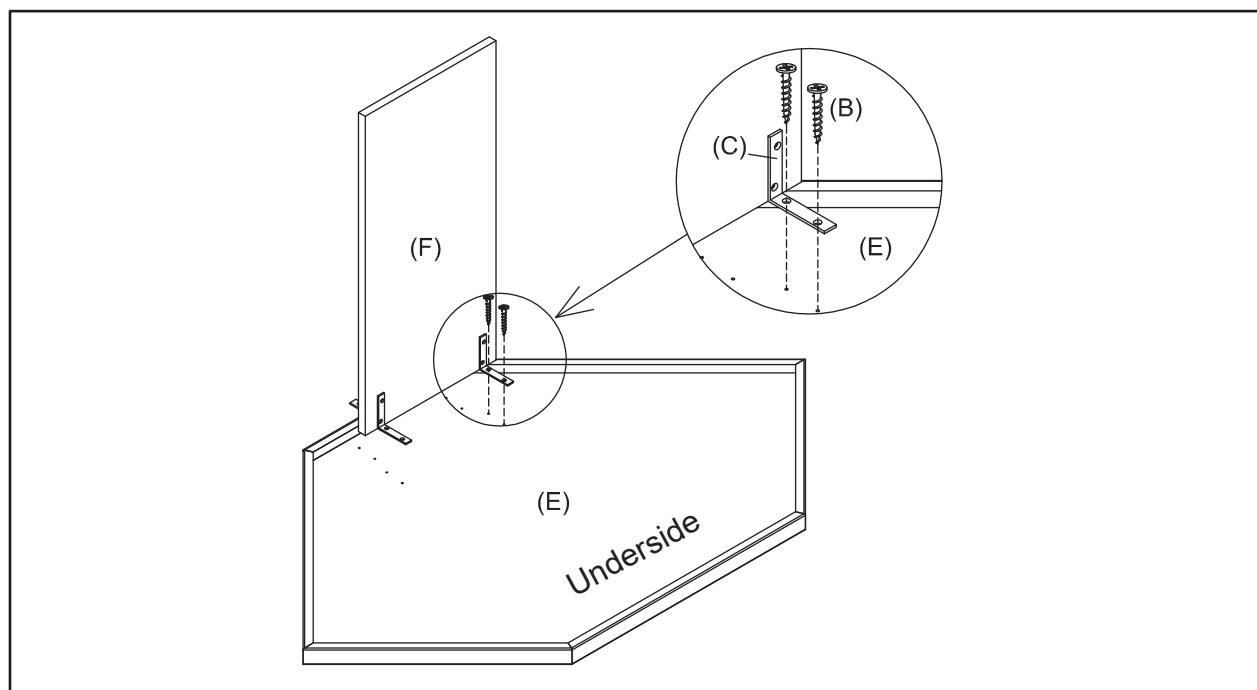



STEP 4: Attach Connectors (D) to underside end of each *Original Home Office Work Surface Top using Wood Screws (A). Firmly tighten.

*NOTE: Original Home Office Work Surface Tops sold separately.

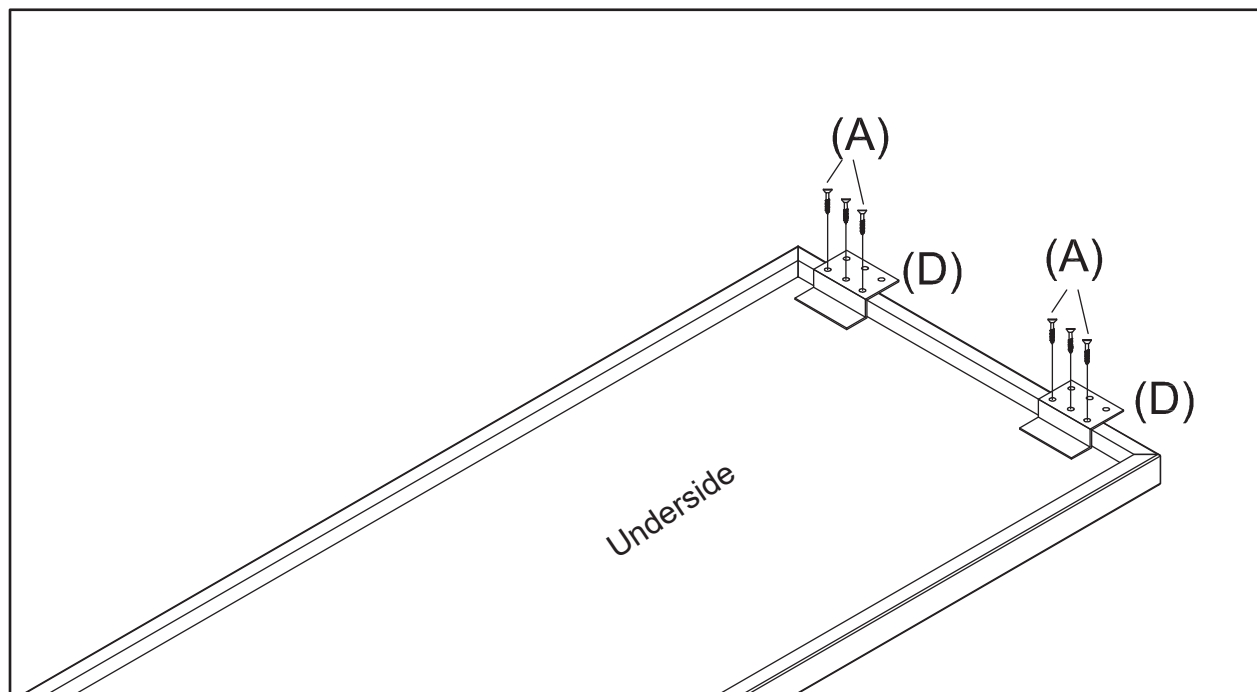

STEP 5 : Attach Connectors (D) to underside end of each Original Home Office Top using Wood Screws (A). Firmly tighten.

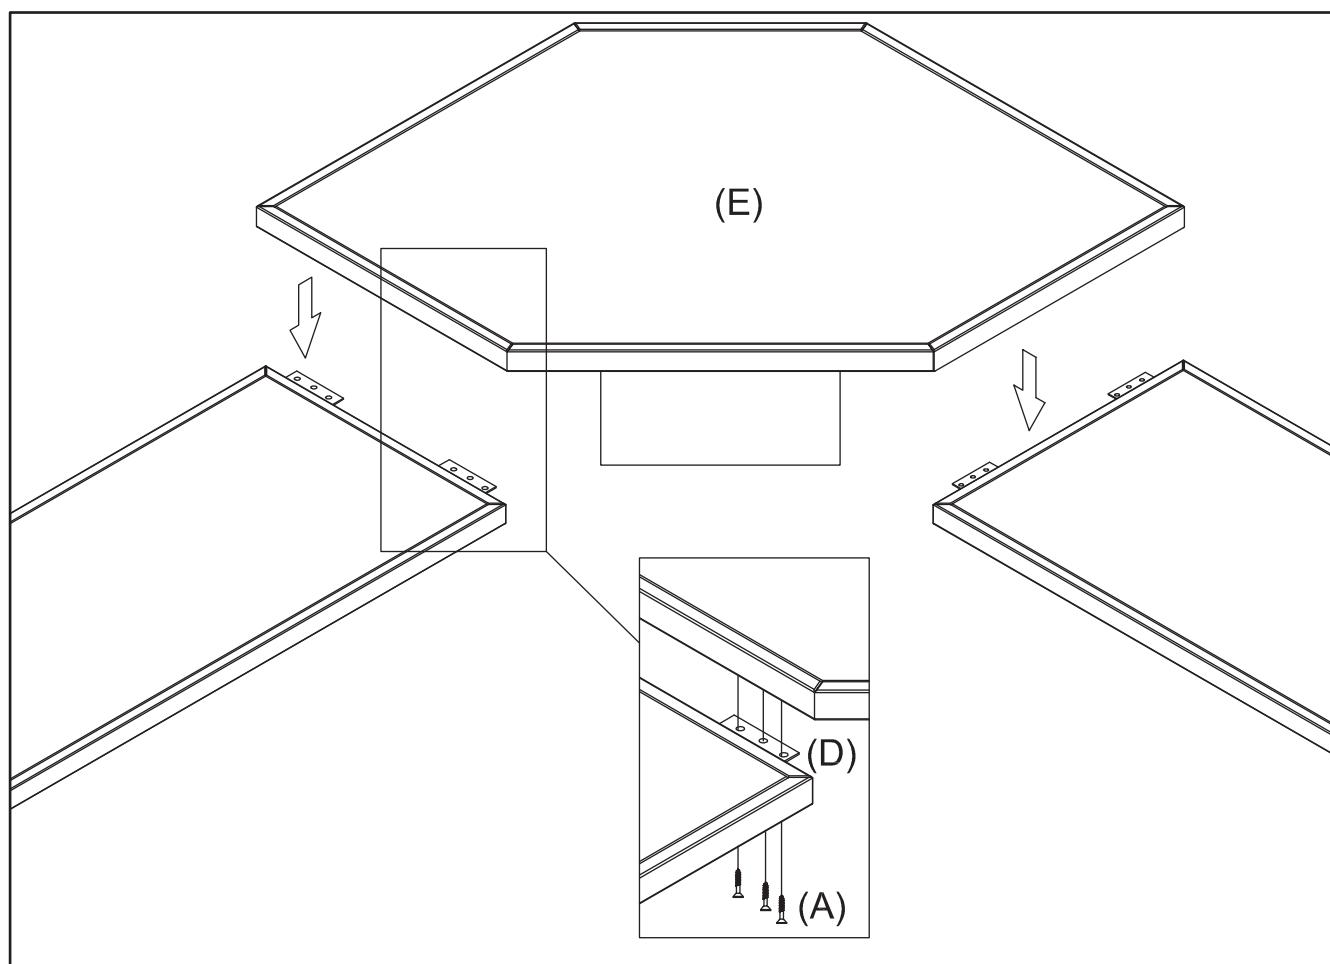

	Cleaning and Care
	Periodically dust with a soft, dry cloth. Prevent finish damage: do not use alchohol based cleaners or polishers.