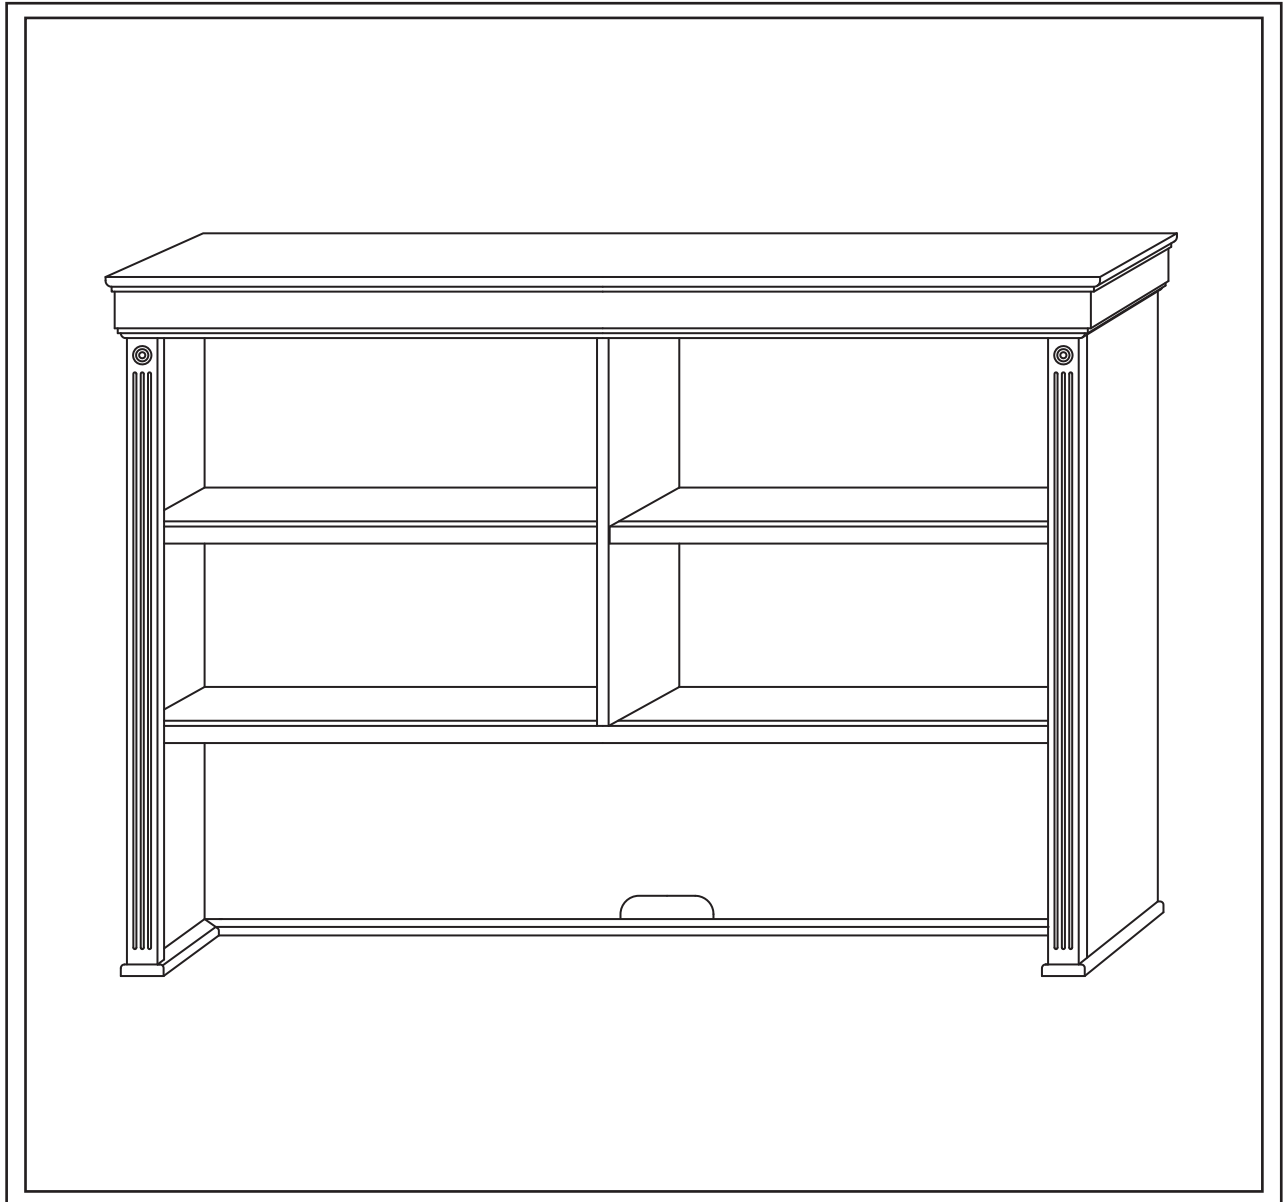


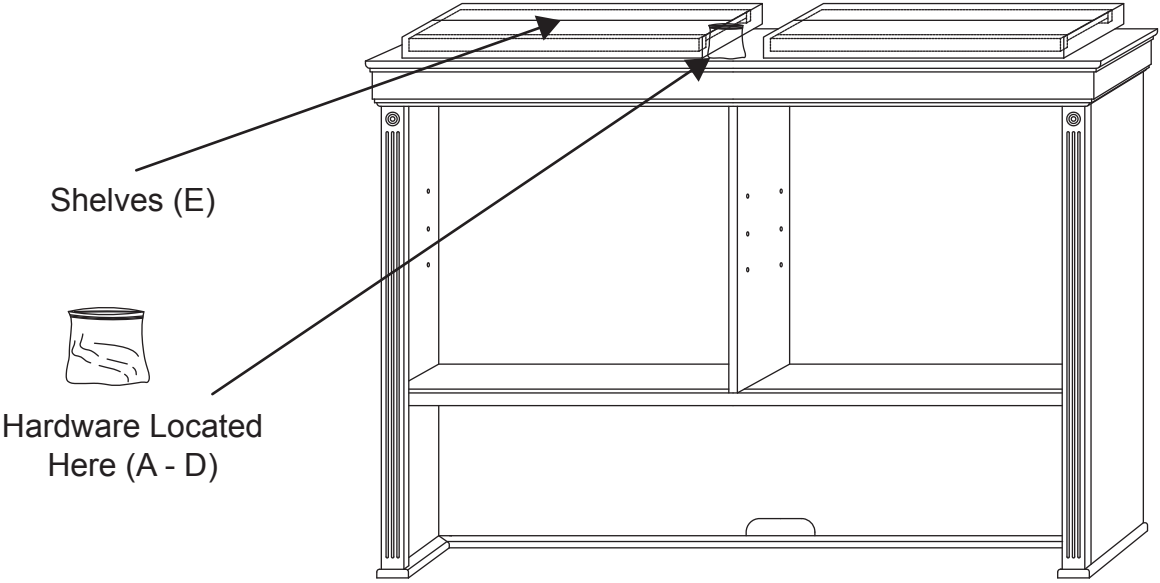
PRODUCT NAME: Verona Hutch





ITEM NUMBER: MO445

DIMENSIONS OF ITEM ASSEMBLED: 45"H x 64"W X 15"D



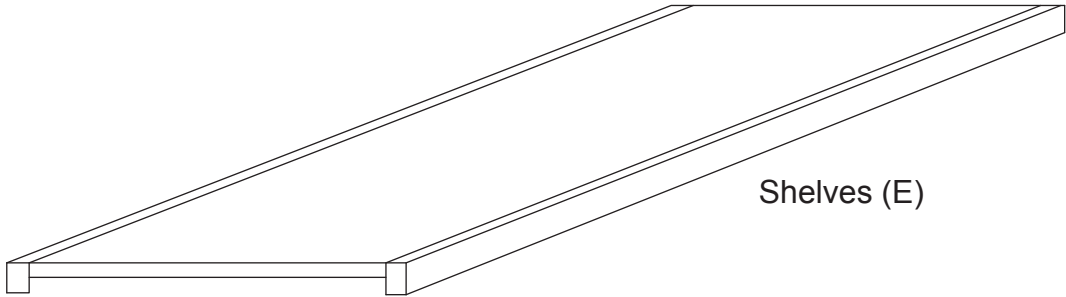
NOTE: Assemble the Desk and Hutch in desired location for use.



Ltr.	Qty.	Hardware Included	
A	8		Shelf Supports
B	3		Connector Plates
C	6		Screws
D	2		Anti Tip Kits

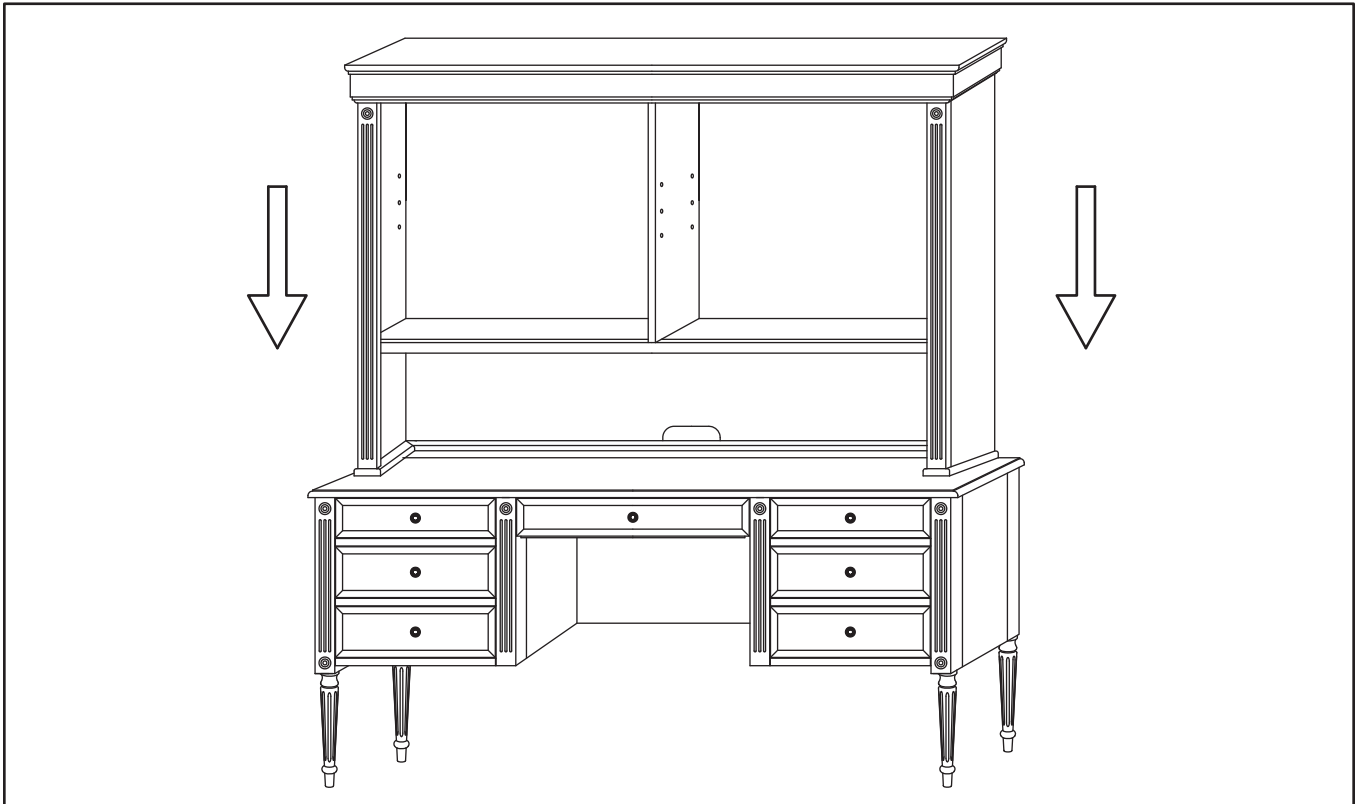
TOOLS NEEDED:
-Requires a screwdriver.
-Assembly requires 2 people.

NOTE: When unpacking, lay the parts on a padded surface such as the packaging provided.
Be sure to locate all hardware before throwing away any packaging.

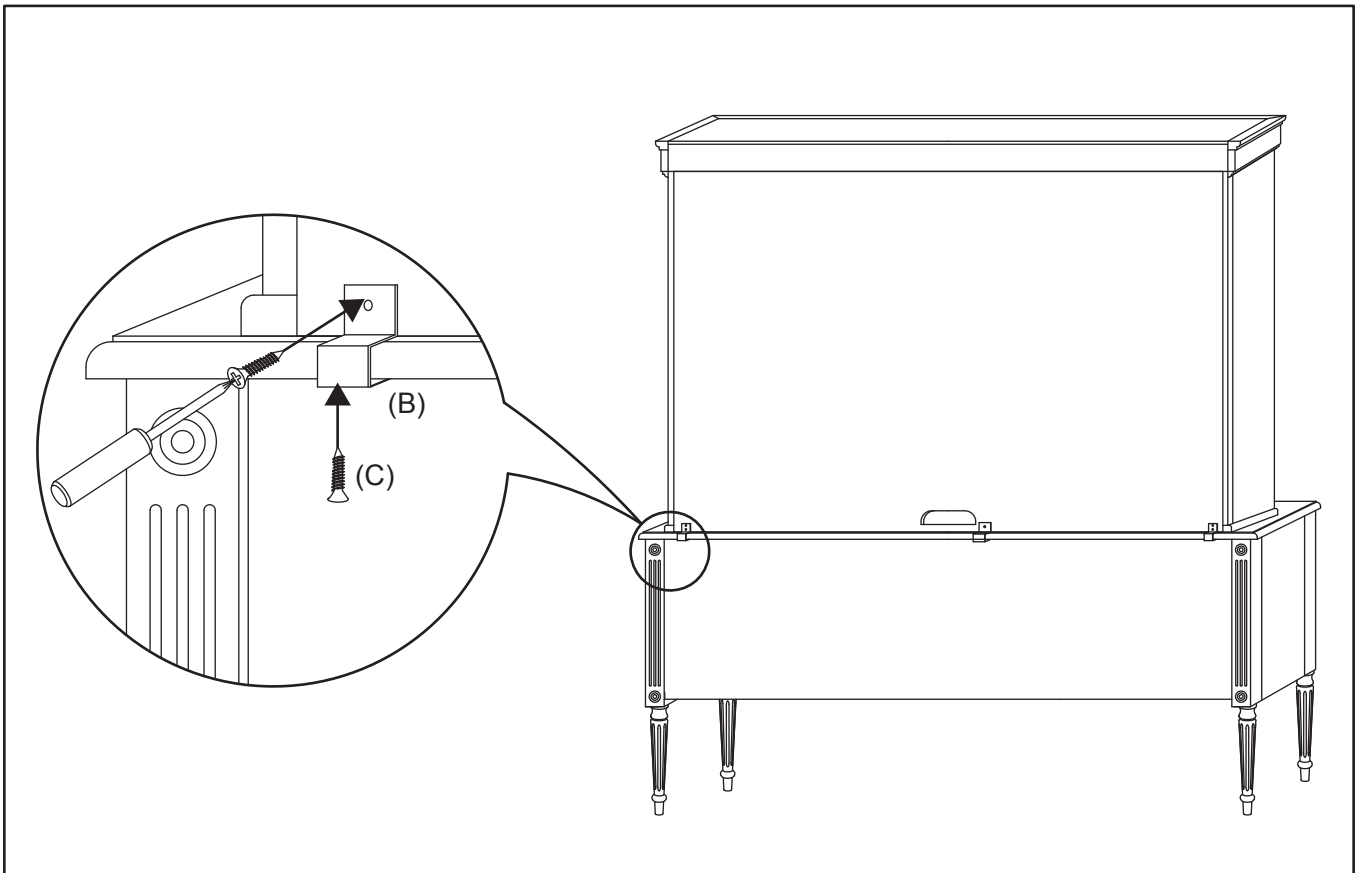
Ltr.	Qty.	Components
E	2	 Shelves (E)

NOTE: Assemble the Desk and Hutch in desired location for use.

STEP 1: Carefully place the Hutch onto the Desk.

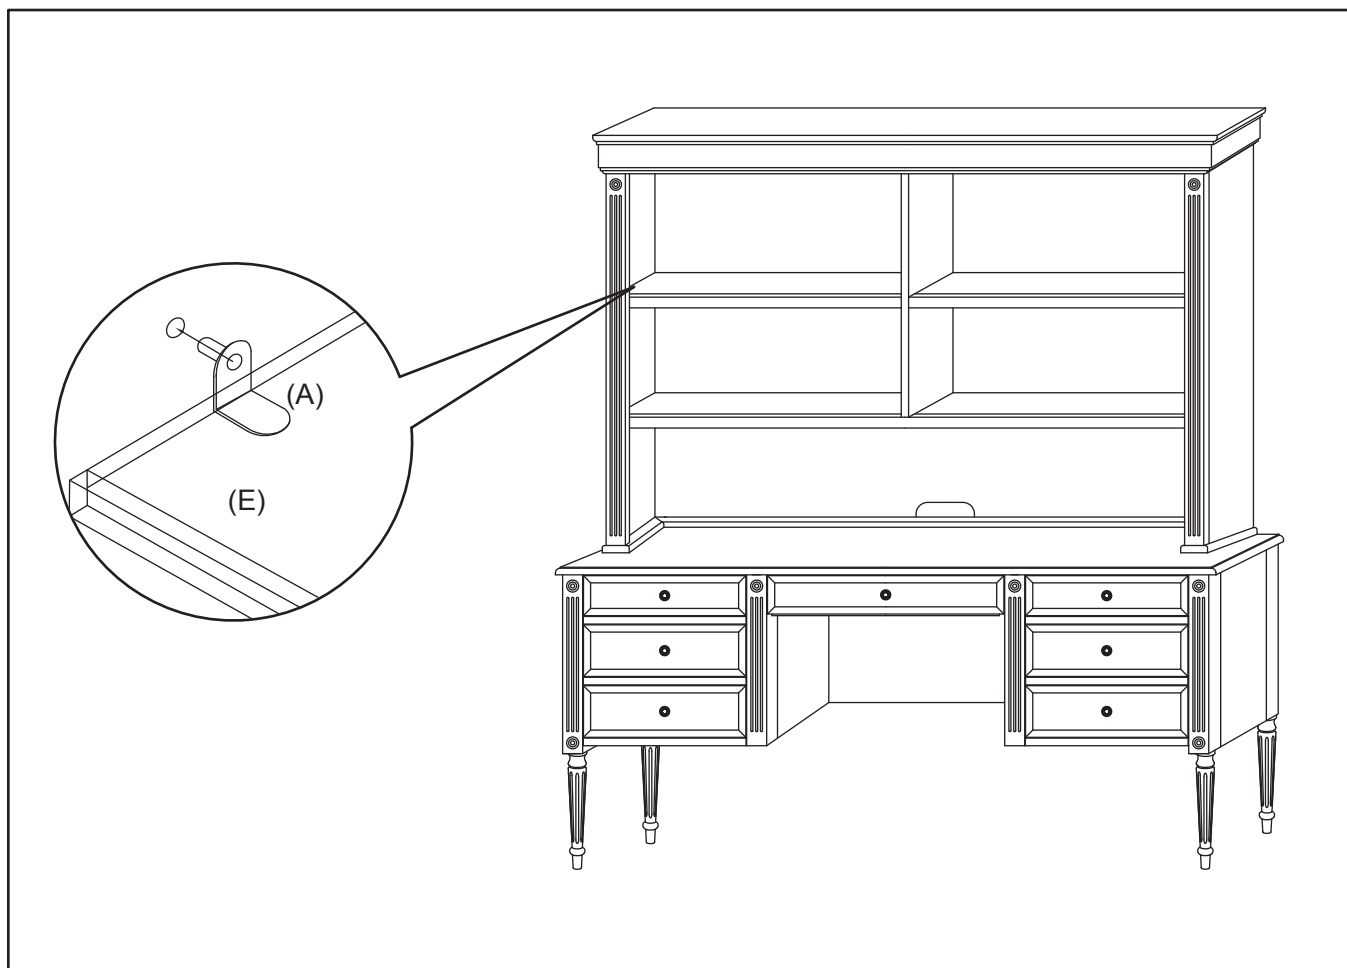


STEP 2: Attach the Hutch to the Desk using the Connector Plates (B) and the Screws (C). Line up the Connector Plates with the pre drilled holes on the Desk and Hutch.




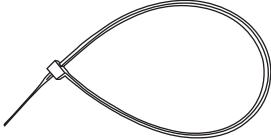


NOTE: Assemble the Desk and Hutch in desired location for use.

STEP 3: Place the Shelf Supports (A) at the desired Shelf (E) heights and lay the Shelves on the Supports.



ANTI TIP INSTALLATION: **PART D**

Ltr.	Qty.	Hardware Included	
F	2		Small Screws
G	2		Large Screws
H	4		Brackets
I	2		Retention Belts

Attach the Brackets (H) to the Hutch with the Small Screws (F) through the smaller holes. Then screw in other Brackets to the Wall and into a Stud with the Large Screws (G) 2 inches below the Brackets attached to the Hutch. Align the Brackets vertically and string in the Retention Belts (I). Confirm the Straps are securely laced and locked.

