


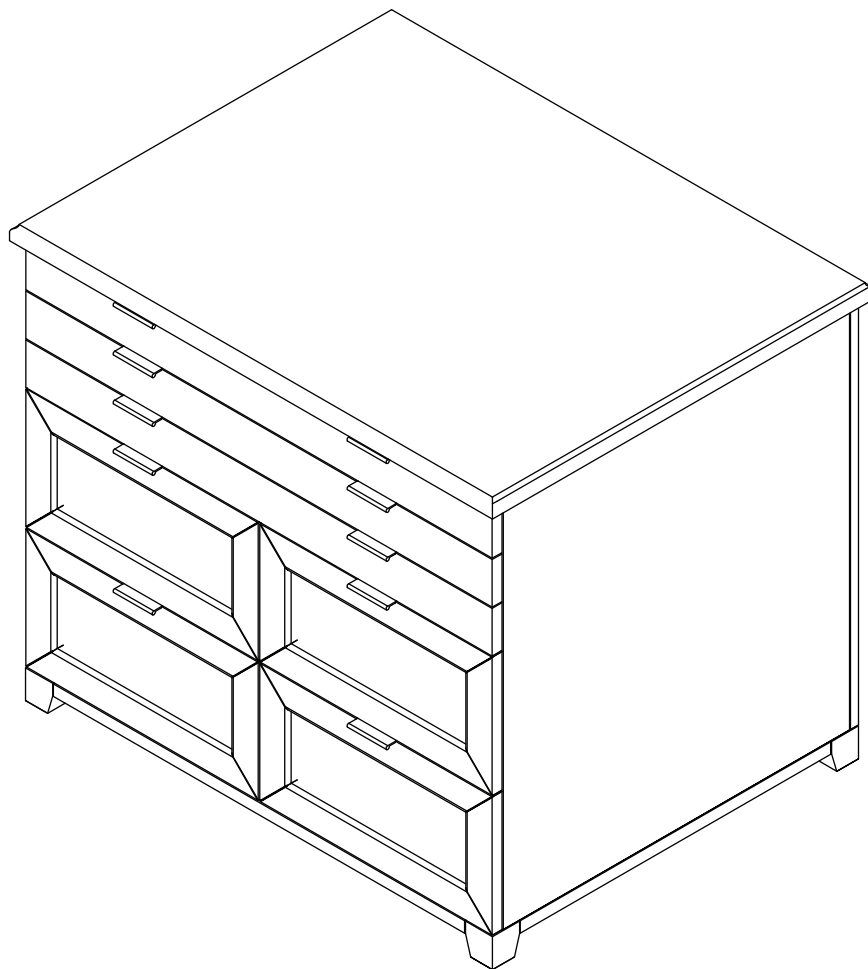

PRODUCT NAME: Hutton Flat File


ITEM NUMBER: MO632

ASSEMBLED DIMENSIONS : 30"H x 35.12"W x 27.8"D



Prevent accidentally discarding small parts or hardware. Retain all carton contents until assembly and installation are complete.

! Assemble in location for intended use.
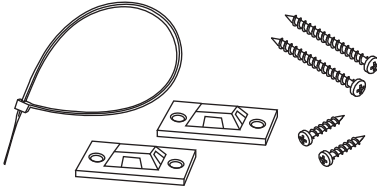
| Qty | Hardware Included |
|-----|--------------------------------------------------------------------------------------------------------------------------------------|
| 2 |  Wall Anchoring (Anti-tip) Kits See page 3 |

WARNING
Tip-Over Hazard
Prevent tipping accidents. Anchor your furniture.
ANCHORING HARDWARE INCLUDED


REQUIRED TOOLS:
Phillips Screwdriver
-Two person assembly suggested.


Remove all parts, hardware and protective packaging from carton and carefully arrange on a clean, level, padded surface.

NOTE: To avoid accidentally discarding small parts or hardware, retain all carton contents until assembly and installation are complete.

LEVELERS: Cabinet is equipped with Rotary Levelers located under each corner. If necessary, Cabinet may be adjusted by carefully lifting applicable corner and turning Leveler clockwise/counterclockwise.

REVERSIBLE DRAWER PANELS: Front Lower Drawer Panels may be changed by fully opening drawer and sliding panel up, out, flipping, and replacing.

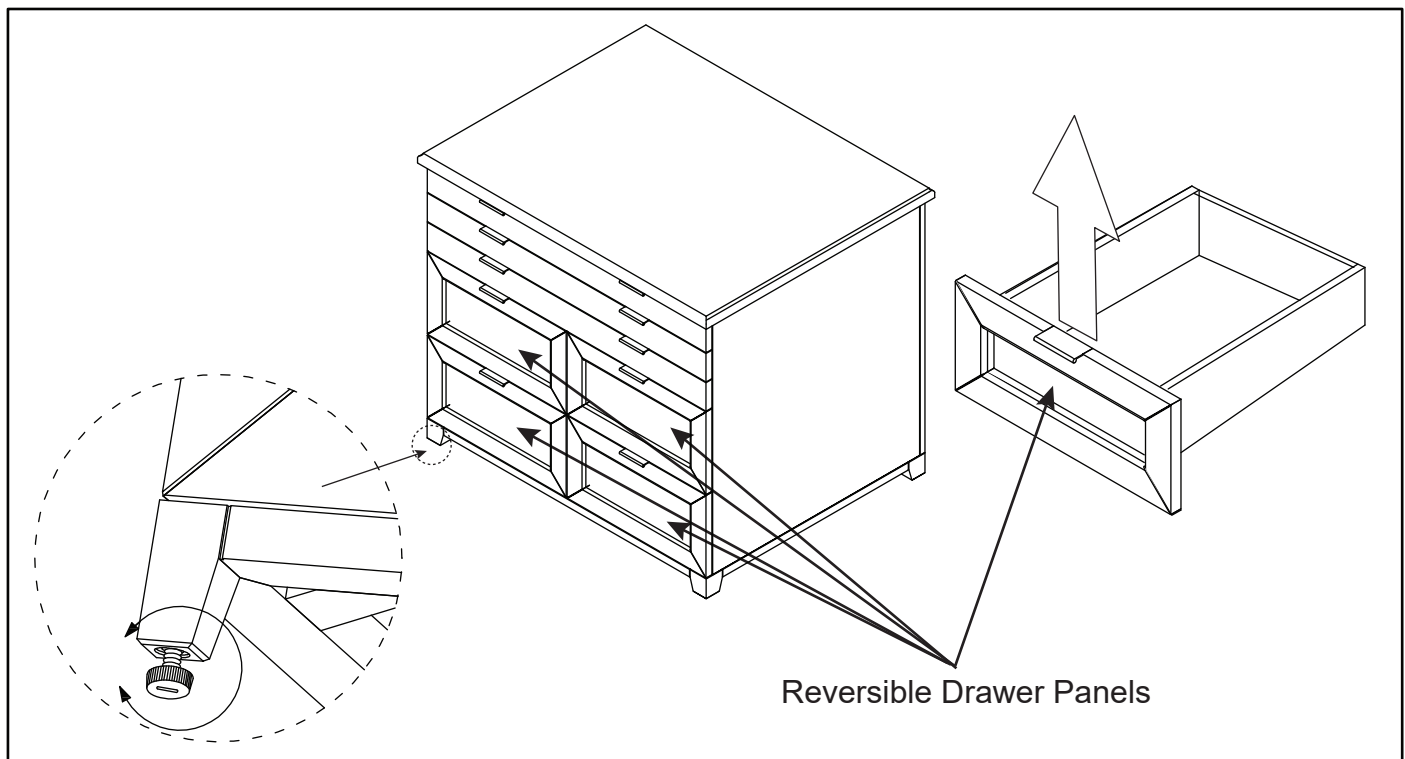





| | |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Cleaning and Care Periodically dust with a soft, dry cloth. Prevent finish damage: do not use alcohol based cleaners or polishes. Promptly remove spills. |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|



Customer Service: 800-367-2810
Online: www.ballarddesigns.com

WALL ANCHORING HARDWARE (ANTI-TIP)

| Ltr. | Qty. | Hardware Included | |
|------|------|-----------------------------------------------------------------------------------|----------------|
| A | 4 |  | Small Screw |
| B | 4 |  | Large Screw |
| C | 4 |  | Bracket |
| D | 2 |  | Retention Belt |



1. Place furniture against wall at desired location then locate and mark a Wall Stud behind unit.
2. Corresponding to Stud location, attach one Bracket (C) to back of unit using Small Screws (A).
3. To keep hardware out of view after installation, attach remaining Bracket (C) **INTO WALL STUD** with Large Screws (B) 2 inches below Bracket attached to back of unit.
4. Move unit into place, align Brackets then connect both using Retention Belt (D).
5. Confirm Belt is securely laced and locked.

