




PRODUCT NAME: Charlotte Desk and Stools




ITEM NUMBER: MO650


ASSEMBLED DIMENSIONS : 30"H x 50"W x 24"D

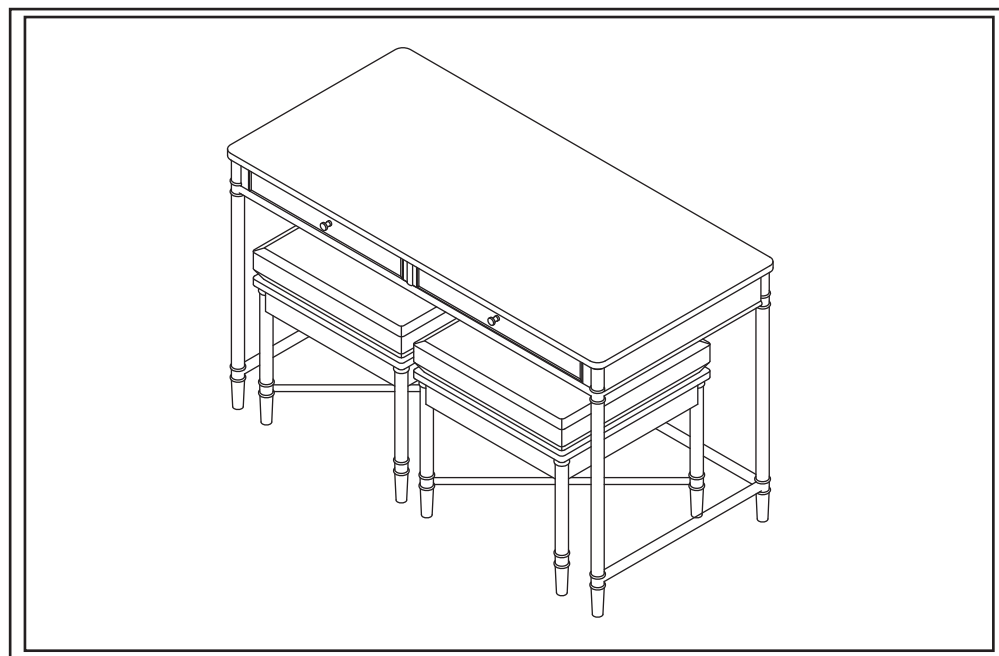

Phillips Screwdriver Required (Anti-tip)
Desk and Stools fully assembled.

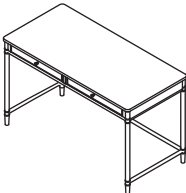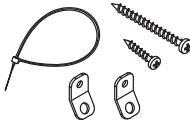

Ltr.	Qty.	Hardware/Components Included	
A	2		Stools
B	1		Desk
C	2		Wall Anchoring (Anti-tip) Kits See page 2

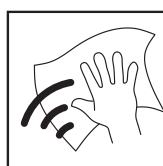

Cleaning and Care

Periodically dust with a soft, dry cloth.
Prevent finish damage: do not use alcohol based
cleaners or polishers. Promptly remove spills.





PRODUCTS ARE NOT INTENDED
FOR COMMERCIAL USE.

UPDATED: 1-5-2023

MADE IN VIETNAM

Page 1 of 2

WALL ANCHORING HARDWARE (ANTI-TIP)

Ltr.	Qty.	Hardware Included	
A	2		Large Screw
B	2		Small Screw
C	4		Bracket
D	2		Retention Belt



Installation:

1. Place furniture against wall at desired location then locate and mark a Wall Stud behind unit.
2. Corresponding to Stud location, attach one Bracket (C) to back of unit using Small Screw (B).
3. To keep hardware out of view after installation, attach remaining Bracket (C) **INTO WALL STUD** with Large Screw (A) 2 inches below Bracket attached to back of unit.
4. Move unit into place, align Brackets then connect both using Retention Belt (D).
5. Confirm Belt is securely laced and locked.

