



PRODUCT NAME: Verona Desk

ITEM NUMBER: MO659

ASSEMBLED DIMENSIONS : 30"H x 65"W x 29"D



Prevent accidentally discarding small parts or hardware.
Retain all carton contents until assembly and installation are complete.

REQUIRED TOOLS:

Phillips Screwdriver (Anti-tip)
-Two person assembly suggested

ASSEMBLY TIME: 15 minutes



Ltr.	Qty.	Hardware Included
A	2	<p>Wall Anchoring (Anti-Tip) Kits See Page 3</p>

Ltr.	Qty.	Components
B	1	<p>Desk (B)</p>
C	4	<p>Legs (C)</p> <div> <p>Legs packaged separately in small box inside main carton</p> </div>
D	1	<p>Cover (D)</p>

PRODUCTS ARE NOT INTENDED
FOR COMMERCIAL USE.

UPDATED: 7-31-2024



Cleaning and Care

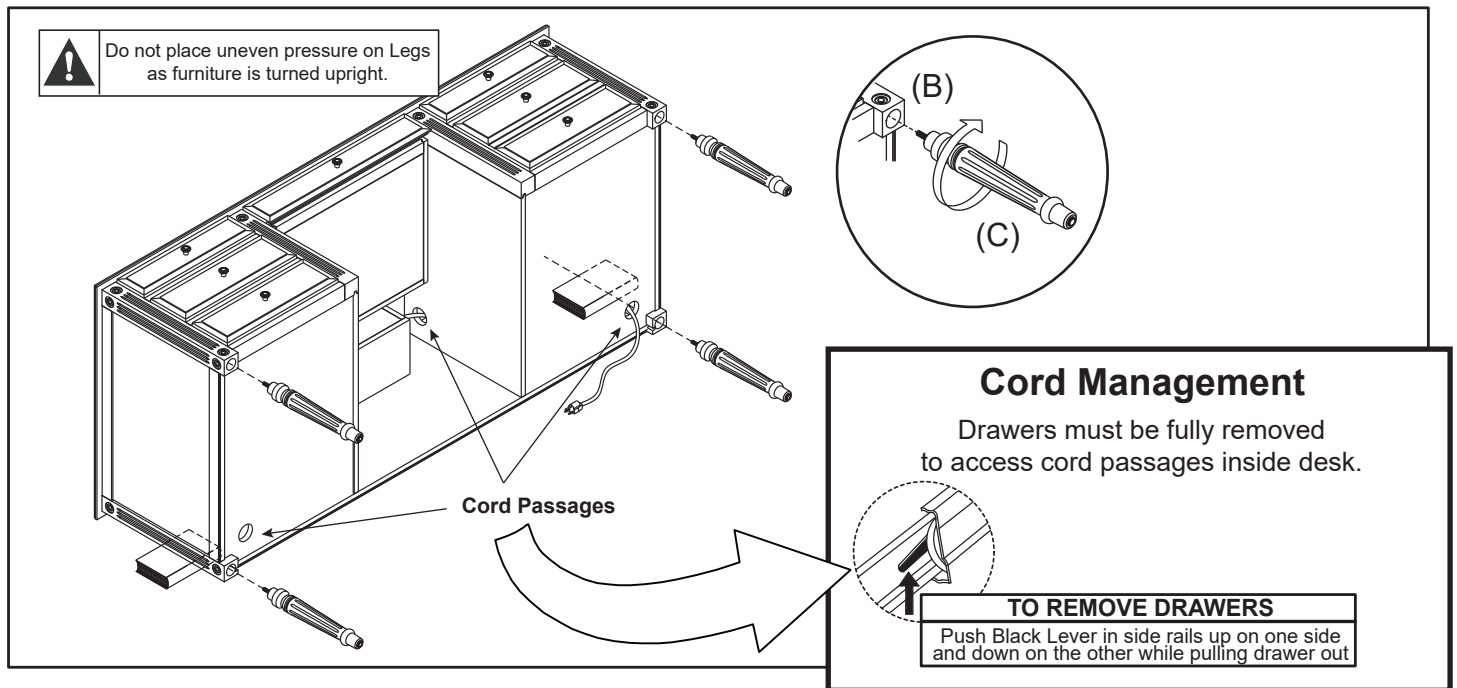
Periodically dust with a soft, dry cloth.
Protect surfaces to prevent damage.
Do not use alcohol based cleaners or polishes.

MADE IN VIETNAM


Page 1 of 3

ASSEMBLY: Carefully set Desk (B) onto its back onto a level, padded surface. Insert, turn and firmly tighten each Leg (C) as illustrated.





CAUTION: To avoid possible damage, do not place uneven pressure on Legs as desk is turned upright.



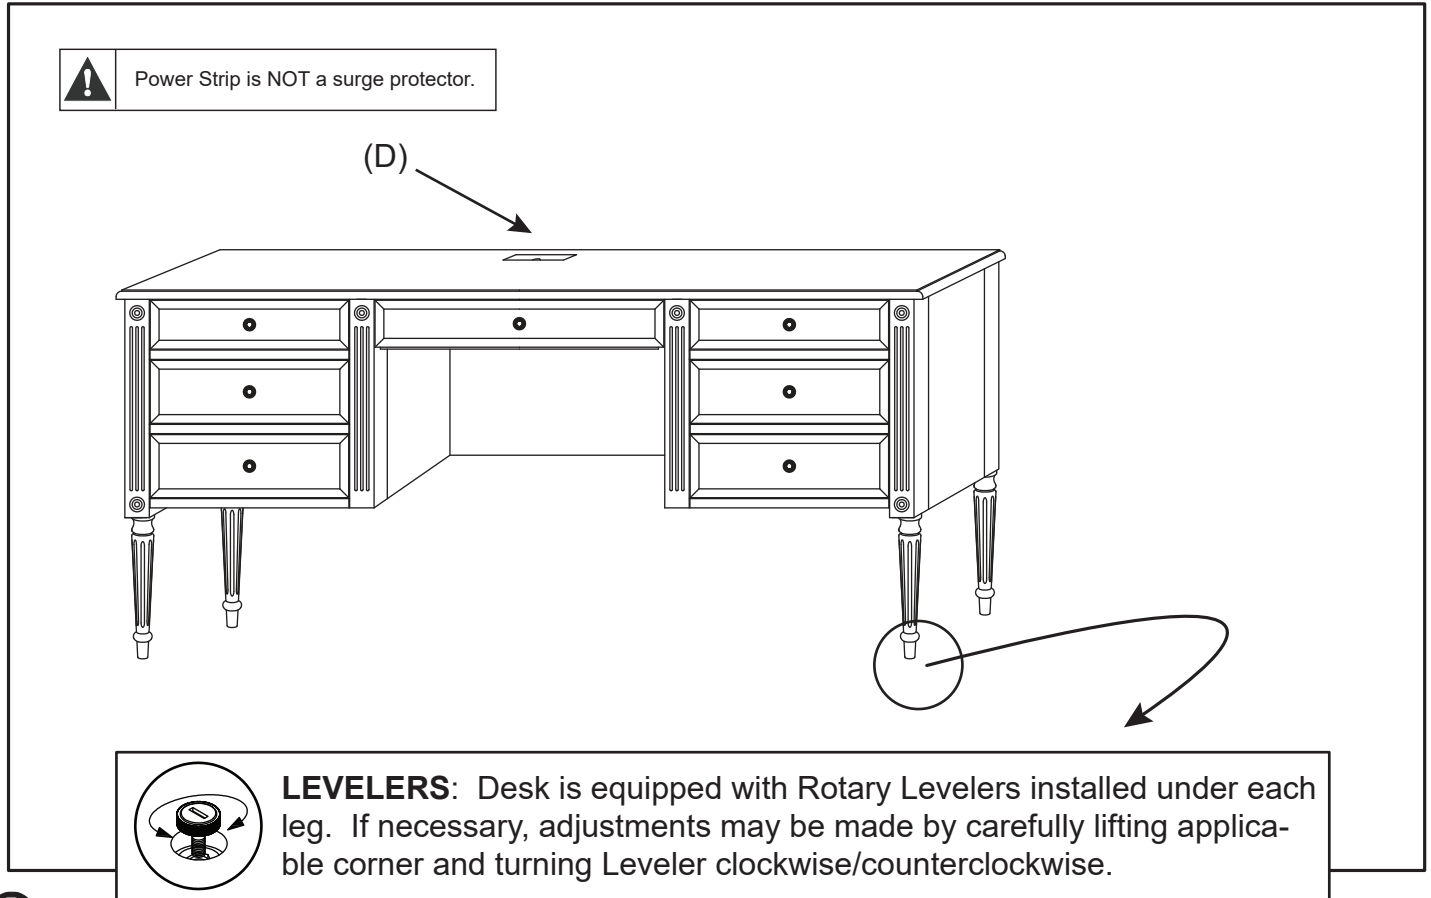POWER STRIP: Place Cover (D) into place. Power Strip includes USB-A Charging and is not a surge protector. Attach proper surge protection as needed (not included).



WALL ANCHORING HARDWARE (ANTI-TIP)

Ltr.	Qty.	Hardware Included	
A	2		Large Screw
B	2		Small Screw
C	4		Bracket
D	2		Retention Belt



Installation:

1. Place furniture against wall at desired location then locate and mark a Wall Stud behind unit.
2. Corresponding to Stud location, attach one Bracket (C) to back of unit using Small Screw (B).
3. To keep hardware out of view after installation, attach remaining Bracket (C) **INTO WALL STUD** with Large Screw (A) 2 inches below Bracket attached to back of unit.
4. Move unit into place, align Brackets then connect both using Retention Belt (D).
5. Confirm Belt is securely laced and locked.

