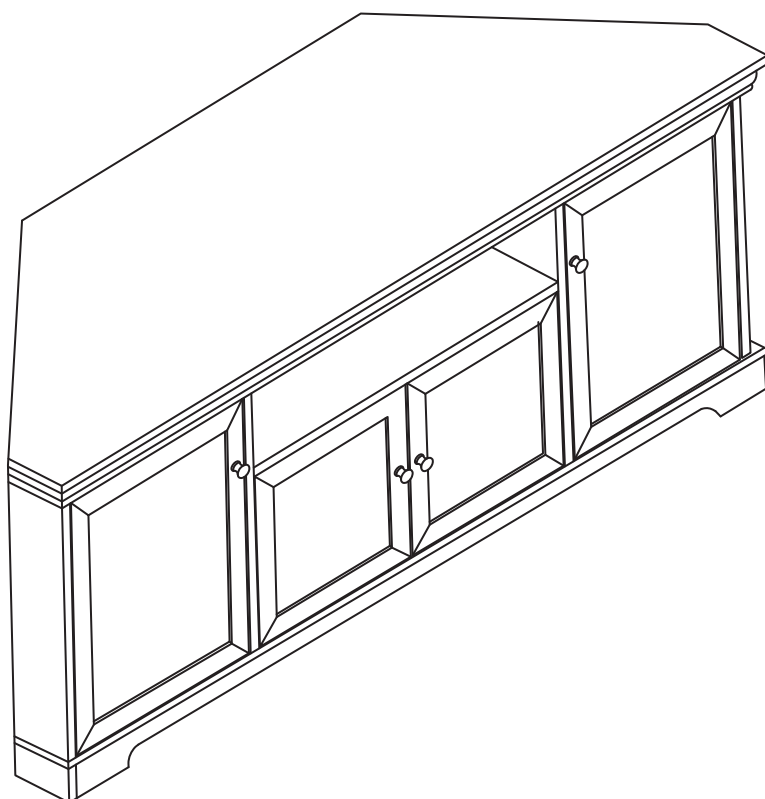


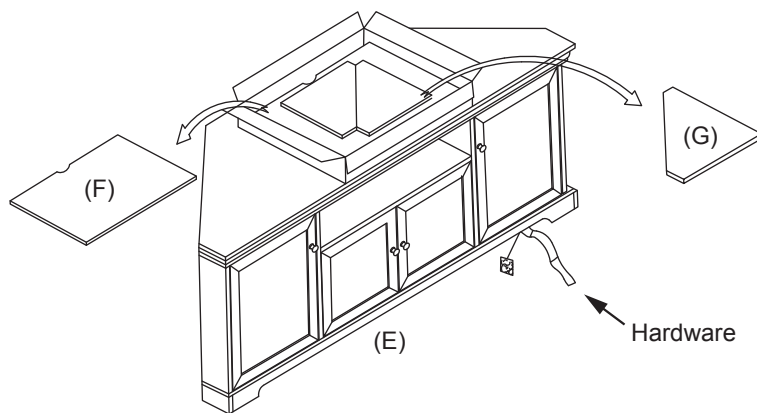
PRODUCT NAME: Reston Corner Console

ITEM NUMBER: MQ072

DIMENSIONS OF ITEM ASSEMBLED: 22"H x 58"W X 20"D






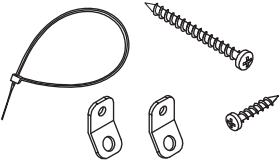
**▲ Assemble in location for intended use.**



**REQUIRED TOOLS:**  
Phillips and Flat Head Screwdrivers  
-Two person assembly suggested.

Remove all parts, hardware and protective packaging from carton and carefully arrange on a clean, level, padded surface.

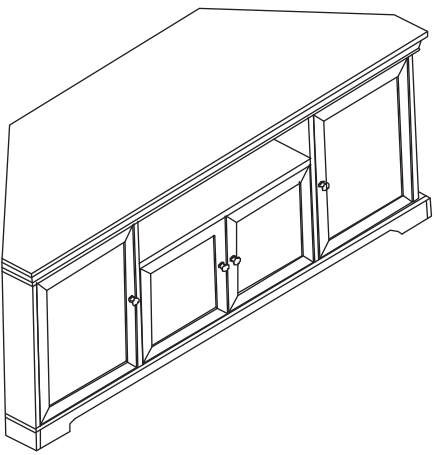
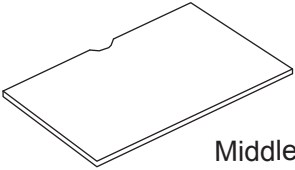
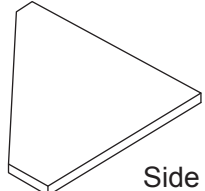
**NOTE:** To avoid accidentally discarding small parts or hardware, retain all carton contents until assembly and installation are complete.

Ltr.	Qty.	Hardware Included	
A	12		Shelf Supports
B	2		Shelf Pins
C	4		Wood Plugs
D	2		Wall Anchoring (Anti-tip) Kits See page 4

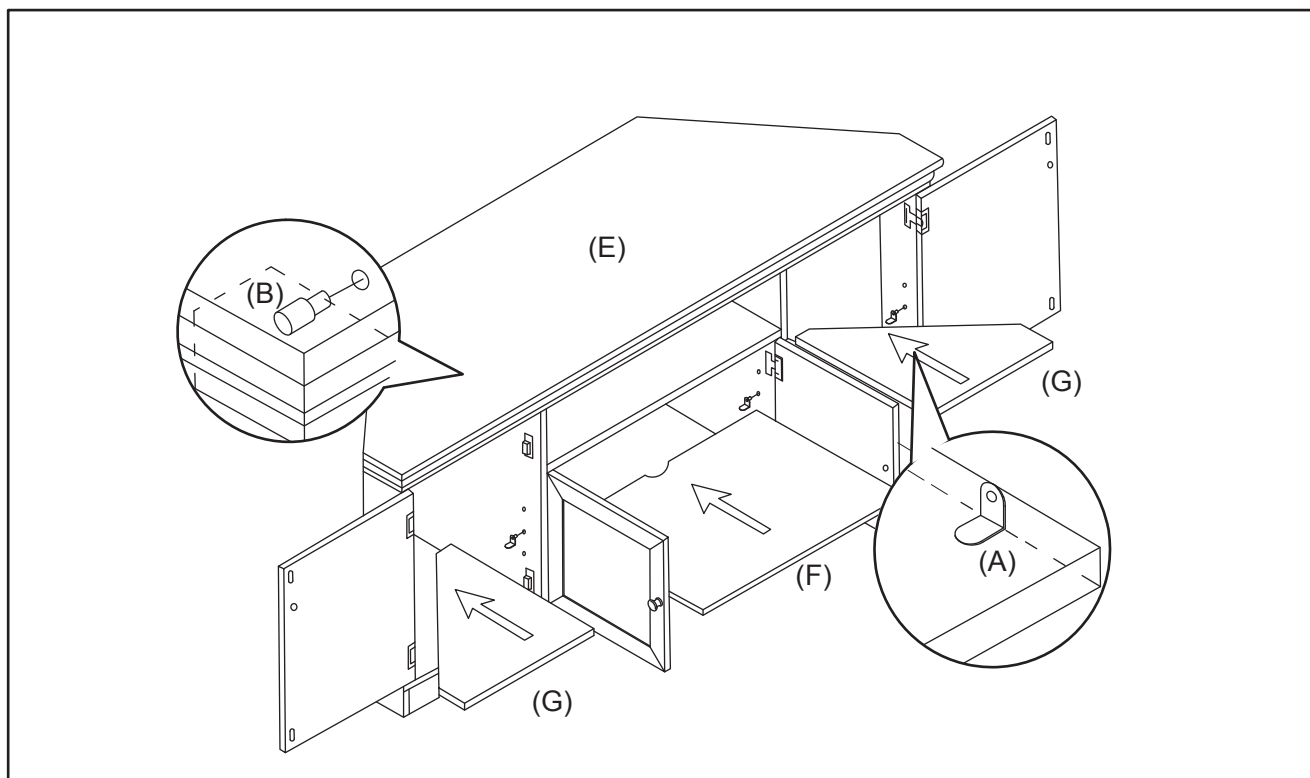


**WARNING**  
**Tip-Over Hazard**  
ANCHORING HARDWARE INCLUDED

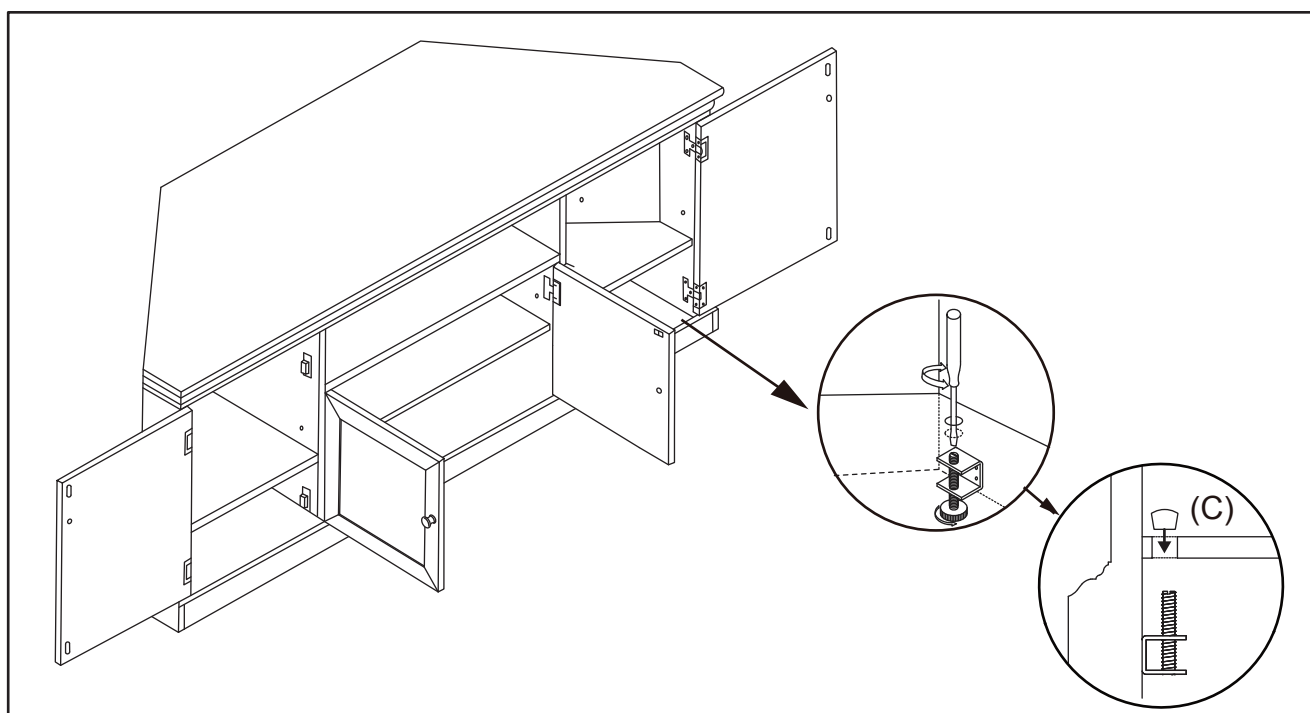
Serious or fatal crushing injuries can occur from a furniture tip-over. Prevent tipping accidents. Anchor your furniture.

Ltr.	Qty.	Components	
E	1	 <p>Console (E)</p>	
F	1		
G	2		
		 <p>Middle Shelf (F)</p>	
		 <p>Side Shelves (G)</p>	





**STEP 1:** Place Shelf Supports (A) at desired Shelf height in side holes. Place Shelf Pins (B) in back holes then lay Shelves (F & G) onto Supports.



**STEP 3:** If doors are uneven, adjust interior levelers located in bottom corners using a Flathead screwdriver. Turn clockwise or counterclockwise until Console is even and doors are aligned. Cover holes by inserting Wood Plugs (C).



WALL ANCHORING HARDWARE (ANTI-TIP)

Ltr.	Qty.	Hardware Included	
A	2		Large Screw
B	2		Small Screw
C	4		Bracket
D	2		Retention Belt



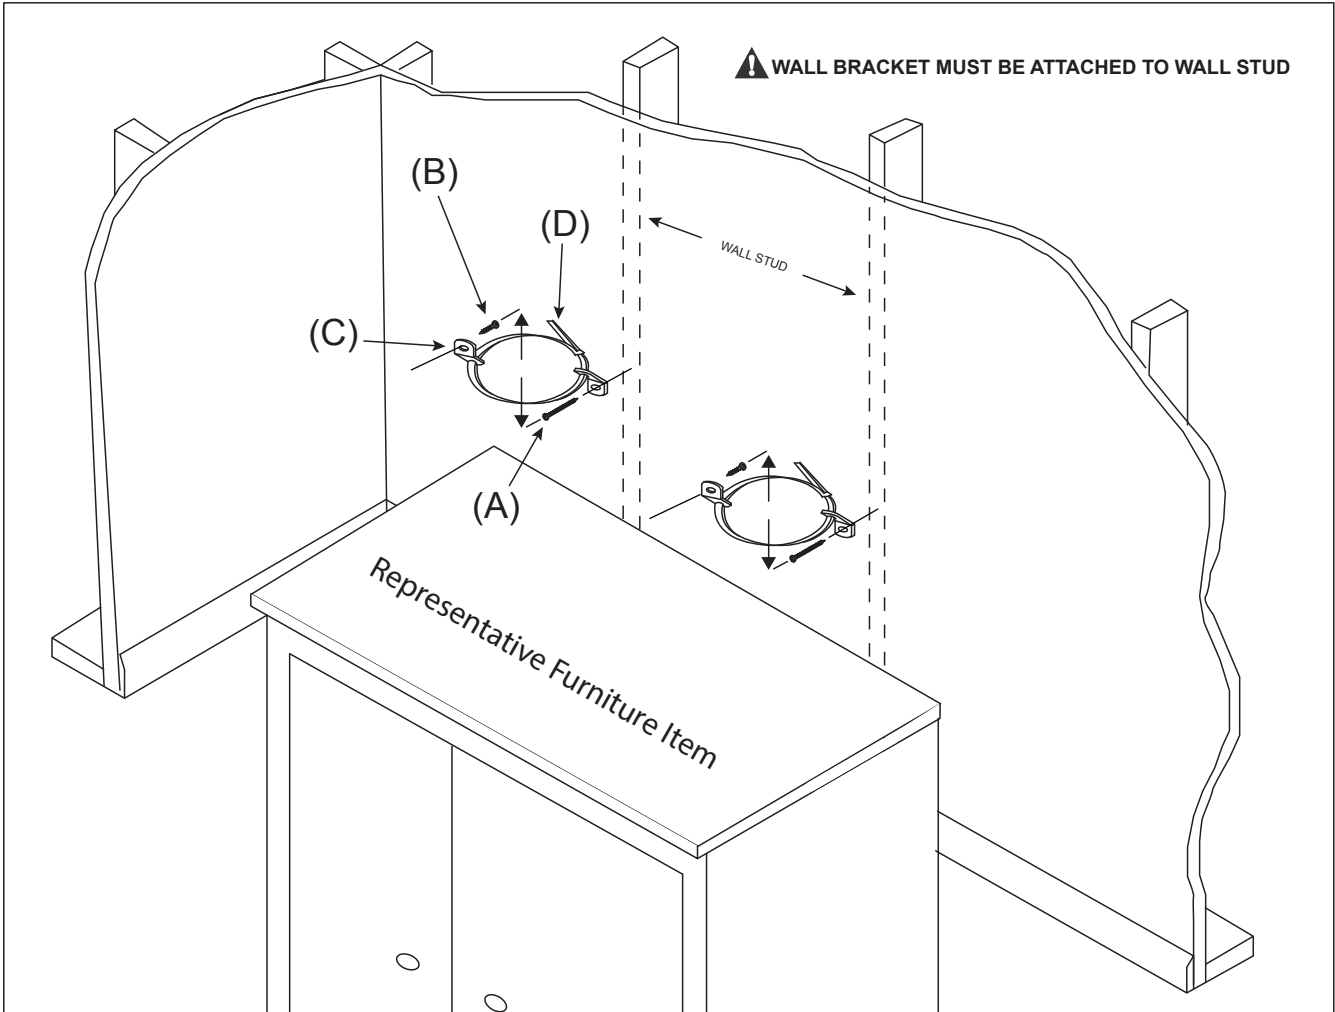
**WARNING**

**Tip-Over Hazard**

Serious or fatal crushing injuries can occur from a furniture tip-over  
Prevent tipping accidents. Anchor your furniture.

Installation:

- 1. Place furniture against wall at desired location then locate and mark a Wall Stud behind unit.
- 2. Corresponding to Stud location, attach one Bracket (C) to back of unit using Small Screw (B).
- 3. To keep hardware out of view after installation, attach remaining Bracket (C) **INTO WALL STUD** with Large Screw (A) 2 inches below Bracket attached to back of unit.
- 4. Move unit into place, align Brackets then connect both using Retention Belt (D).
- 5. Confirm Belt is securely laced and locked.



Cleaning & Care:

DO NOT use alcohol based products or spray polisher as they can damage the finish. Dust with soft cloth.