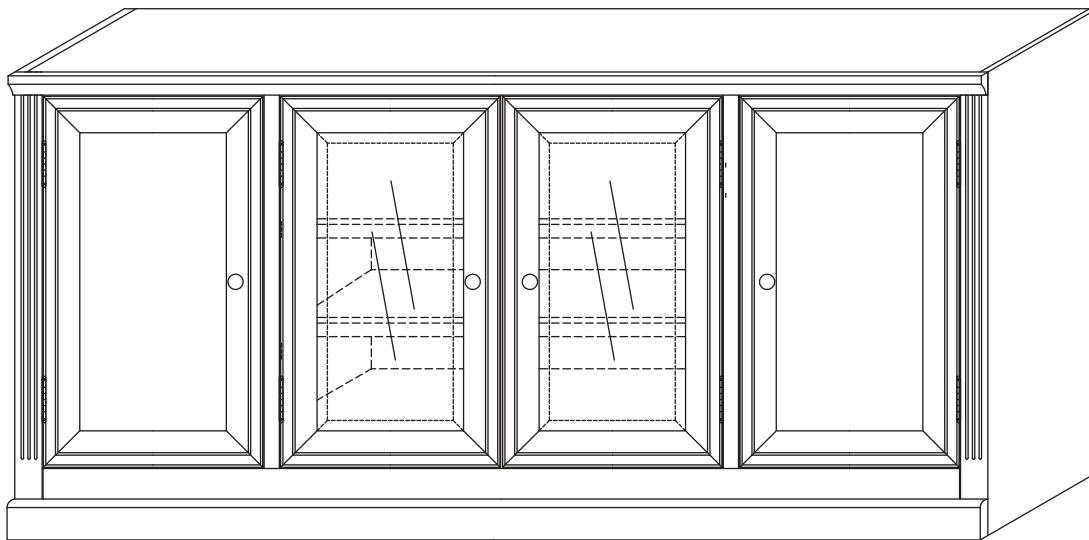
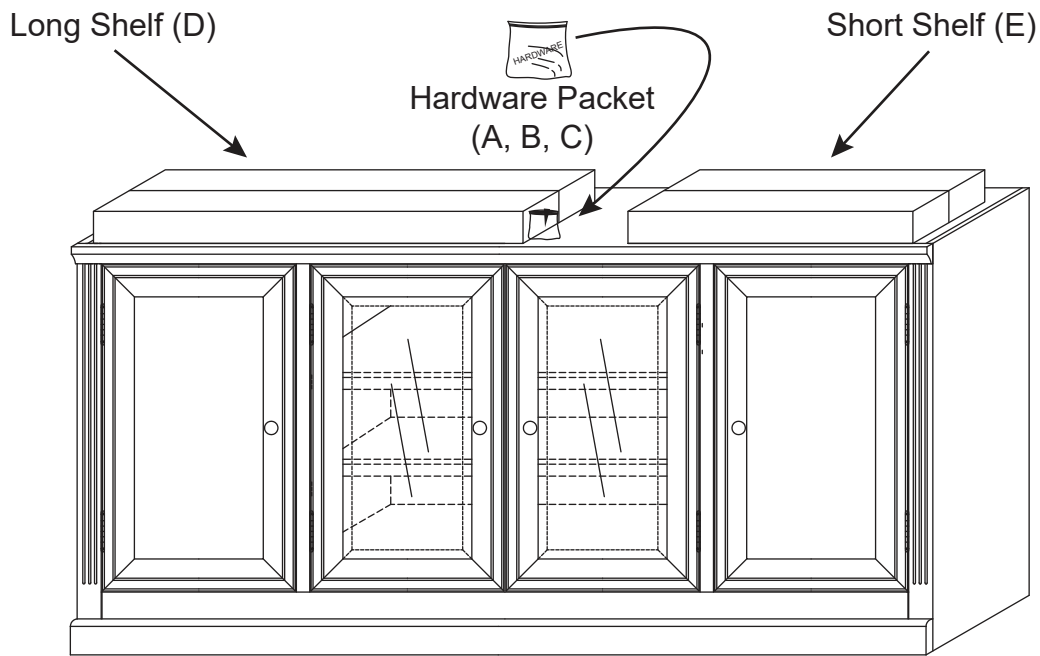







PRODUCT NAME: Tuscan Wide Media Console
ITEM NUMBER: MQ098
ASSEMBLED DIMENSIONS : 30"H x 63"W x 17"D



NOTE: Assemble in intended area for use.

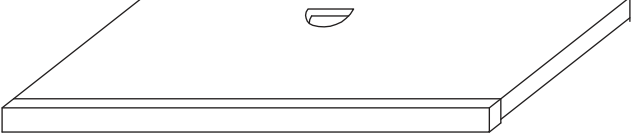
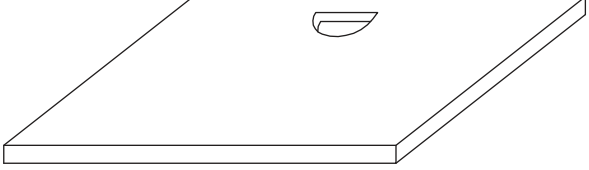


Ltr.	Qty.	Hardware Included	
A	24		Shelf Support
B	2		Anti-Tip Kit PART B
C	4		Wood Plug

TOOLS NEEDED:
Phillips Screwdriver, Optional Drill
-Two person assembly suggested.

Remove all parts, hardware and protective packaging from carton and carefully arrange on a clean, level, padded surface.

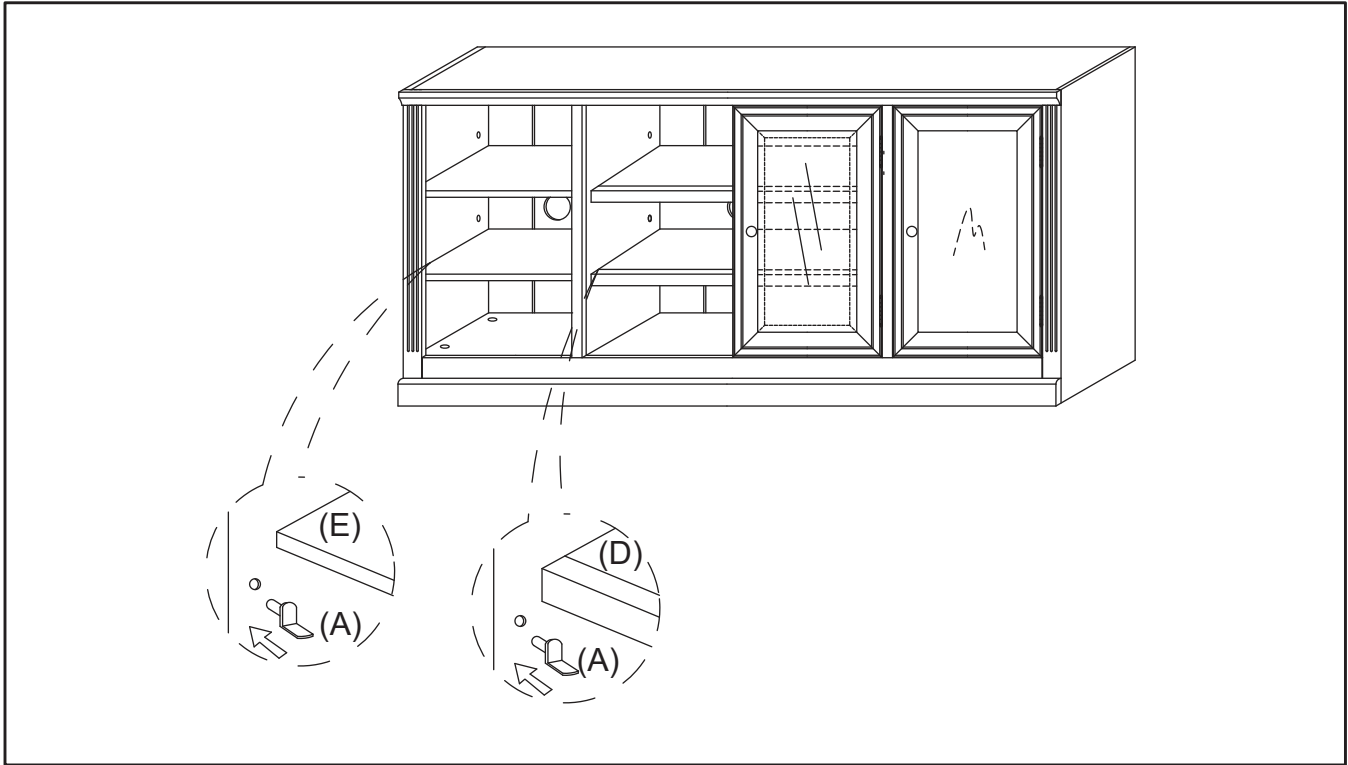
NOTE: To avoid accidentally discarding small parts or hardware, retain all carton contents until assembly and installation are complete.

Ltr.	Qty.	Components	
D	2		Long Shelf (D)
E	4		Short Shelf (E)

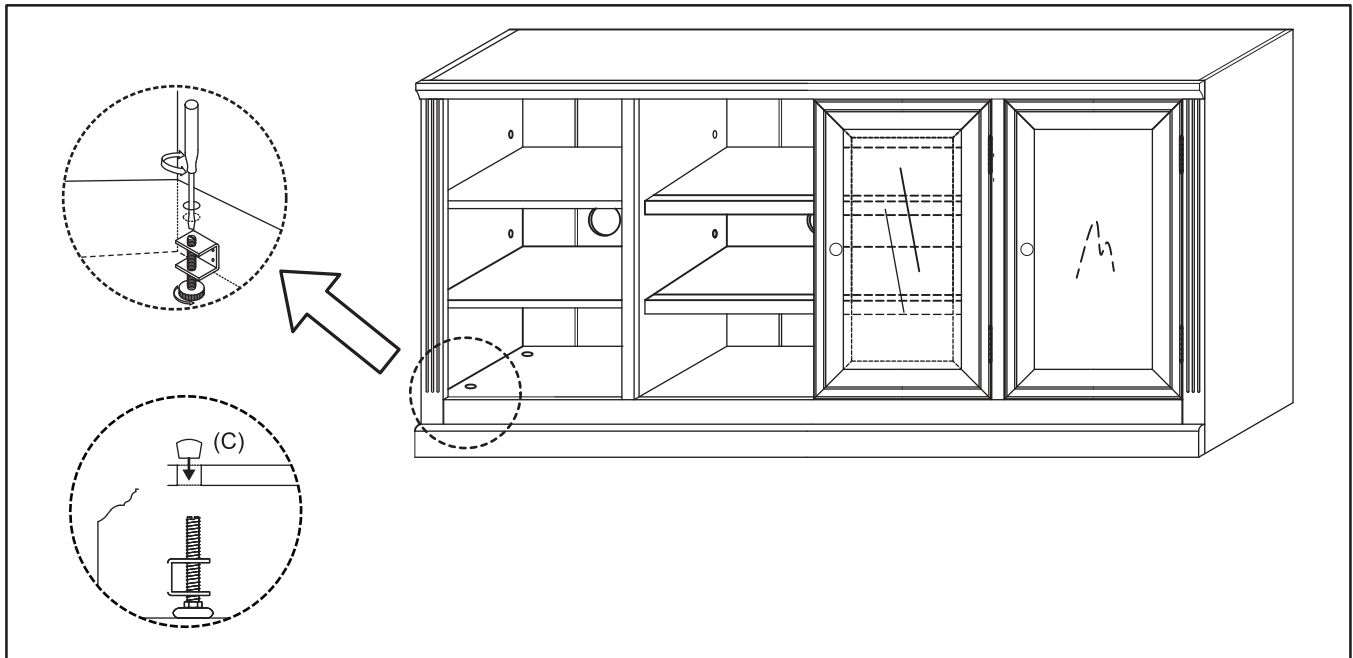


NOTE: Assemble in intended area for use.

INSTALL SHELVES: Inside Console, place Shelf Supports (A) into pre-drilled holes at desired height. Gently lay Long Shelves (D) in center compartment and Short Shelves (E) in outer compartments.



LEVELERS: If necessary, the Console may be leveled by adjusting LEVELERS located on the bottom of each corner which are accessible **INSIDE** the Console. Use a Flat Head Screwdriver to turn clockwise/counter-clockwise to adjust. Cover holes with Wood Plugs (C) when complete.



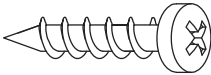
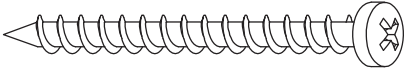
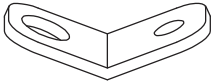
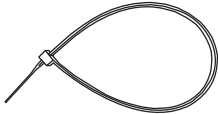
Cleaning and Care

Periodically dust with a soft, dry cloth.
Protect surfaces to prevent damage.
Do not use alcohol based cleaners or polishes.



Customer Service: 800-367-2810
Online: www.ballarddesigns.com

ANTI TIP INSTALLATION: **PART B**

Ltr.	Qty.	Hardware Included	
F	2		Small Screw
G	2		Large Screw
H	4		Brackets
I	2		Retention Belt

Orient Bracket (H) with smaller hole against back of Console and attach using Small Screw (F). Next, orient another Bracket with larger hole against wall and attach INTO A WALL STUD using Large Screw (G). NOTE: To limit visibility of hardware, install wall bracket approximately one inch lower than Bracket on Console. Push Console to wall, align bracket and attach together by threading and securing Retention Belt (I). Install hardware to BOTH ENDS of Console.

