


PRODUCT NAME: Braden 3 Drawer Console


ITEM NUMBER: MS029

DIMENSIONS OF ITEM ASSEMBLED: 33"H x 54"W X 14"D

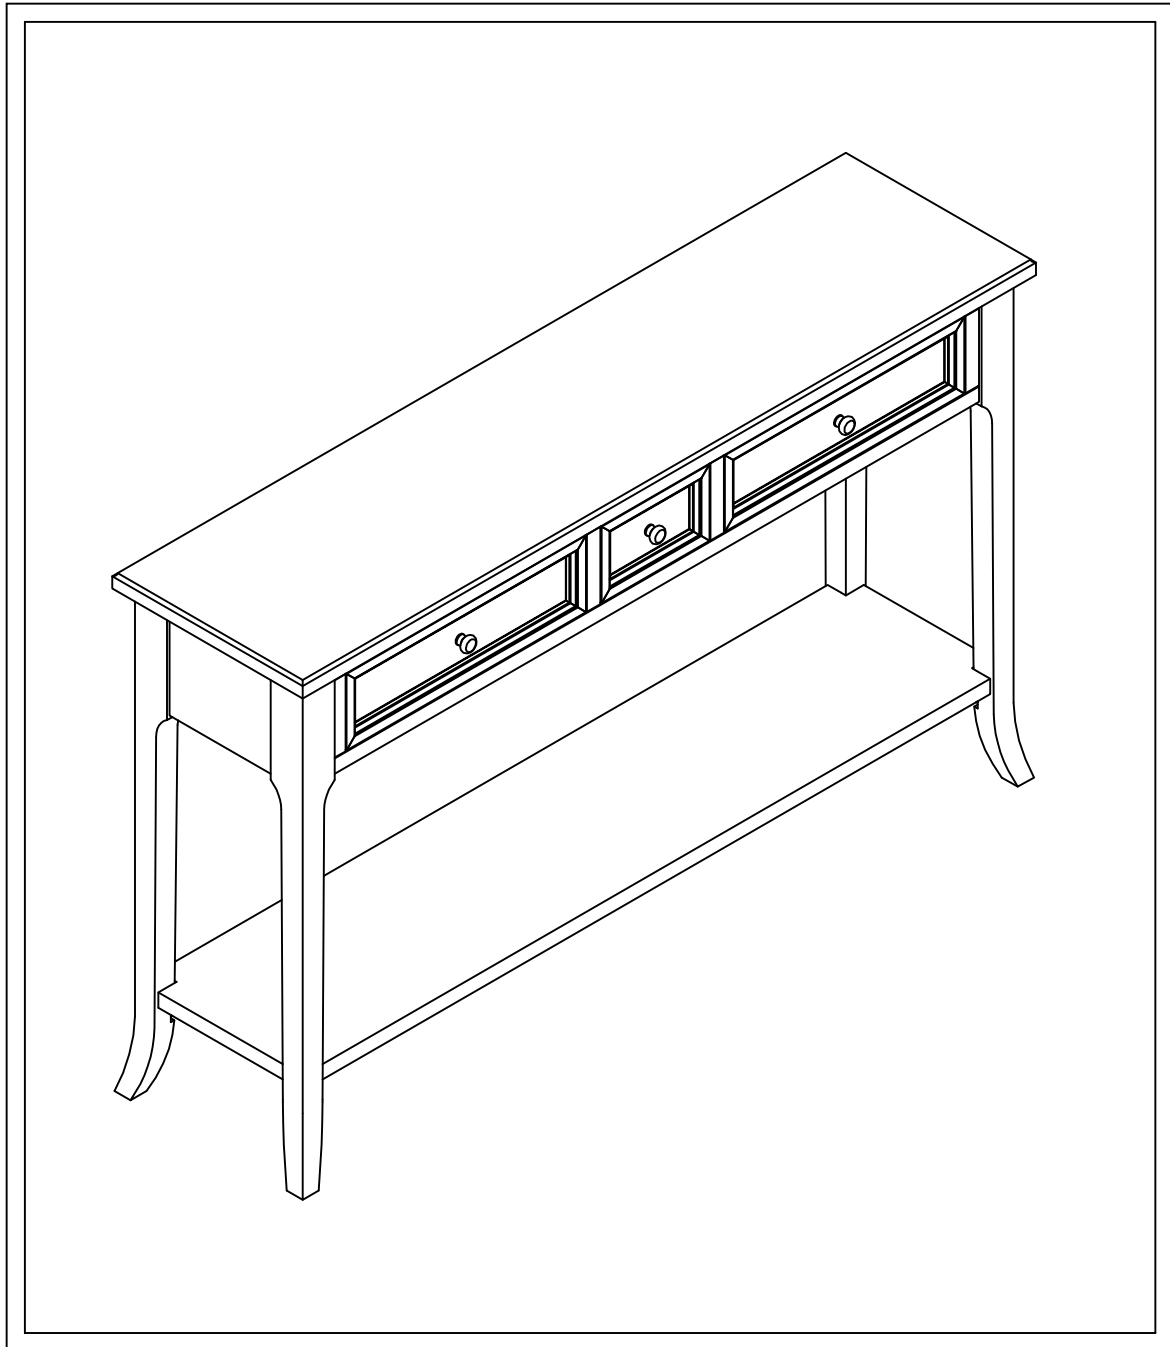


# TOOLS NEEDED:

- Possible 2 person assembly.
- Requires a screwdriver.

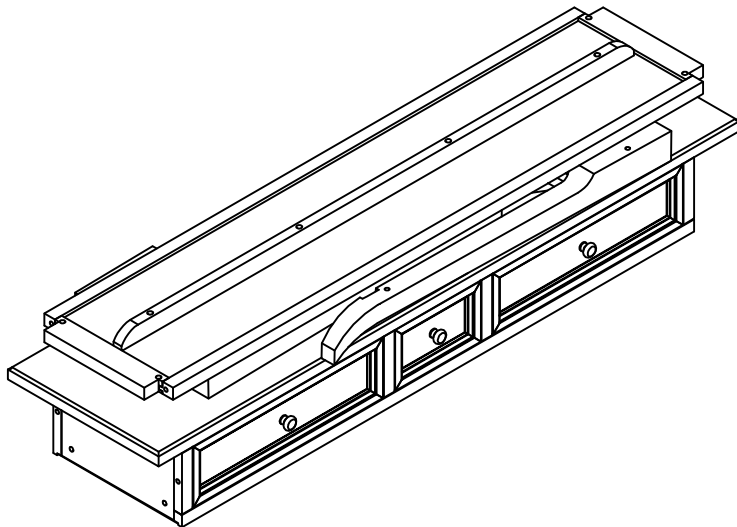


NOTE: When unpacking, lay the parts on a padded surface such as the packaging provided. Be sure to locate all hardware before throwing away any packaging.


Ltr.	Qty.	Hardware Included		Ltr.	Qty.	Hardware Included	
A	8		Large Allen Screws	E	16		Lock Washer
B	8		Small Allen Screws	F	16		Washer
C	4		Brackets	G	8		Wood Dowels
D	1		Allen Wrench	H	2		Anti Tip Kits

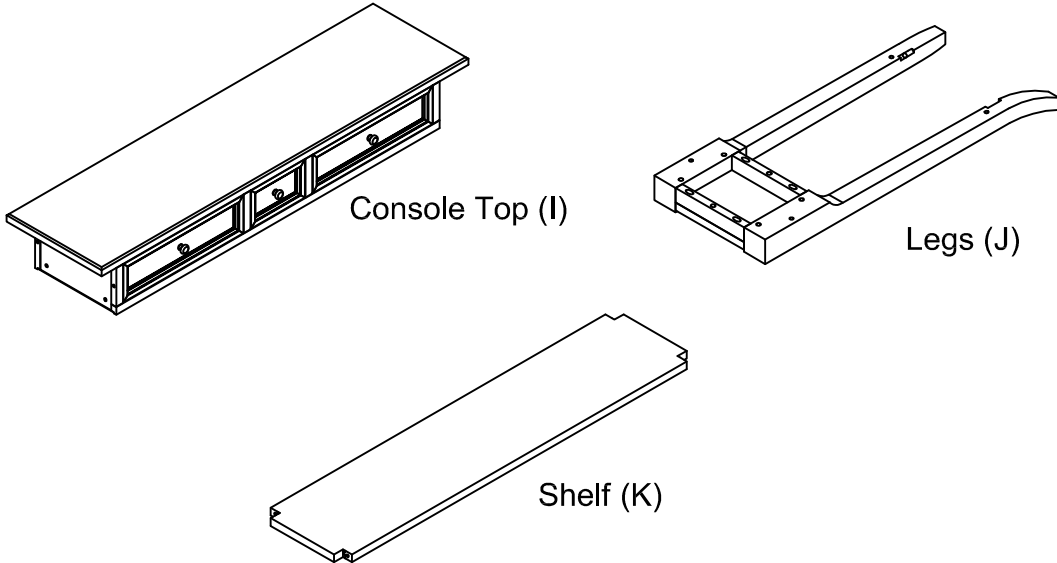Ltr.	Qty.	Components	
I	1	 <div>Console Top (I)</div> <div>Legs (J)</div> <div>Shelf (K)</div>	
J	2		
K	1		


**STEP 1:** Lay the Console Top (I) upsidedown on a smooth, clean surface such as the packaging provided and remove the two outer drawers from the Top. Insert the Dowels (G) into the middle holes at the corners of the Top.

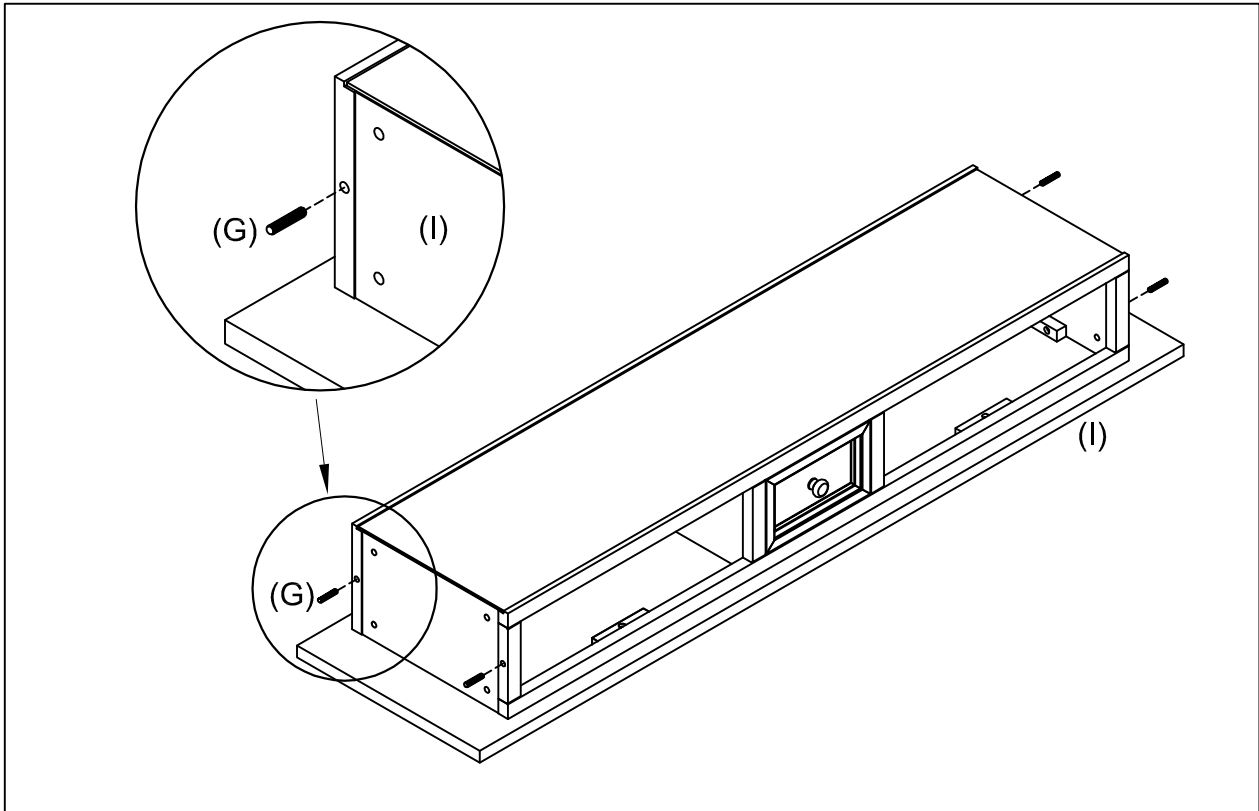


**STEP 2:** Attach the Legs (J) to the Console Top (I) from the inside of the drawer holes using the Large Allen Bolts (A), Lock Washers (E) and Washers (F). Tighten the Bolts with the Allen Wrench (D).

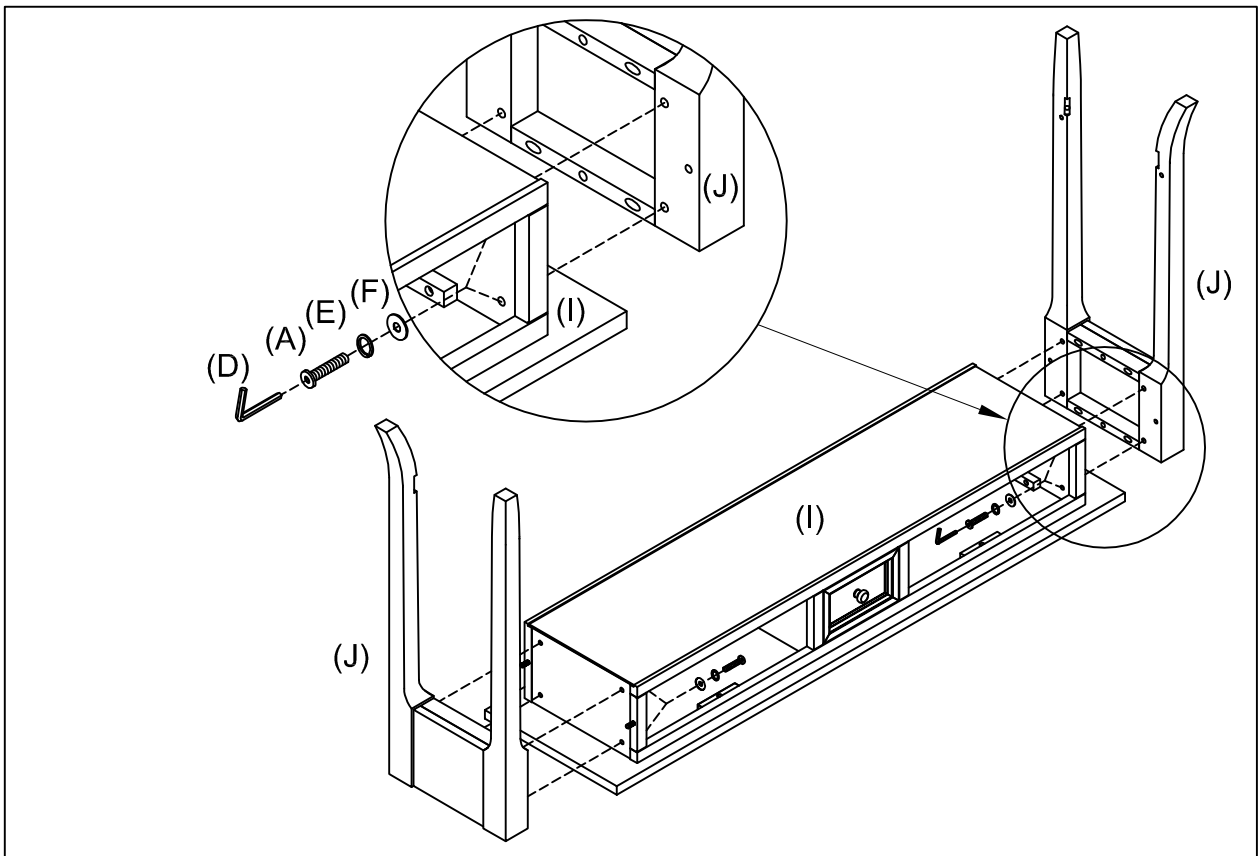

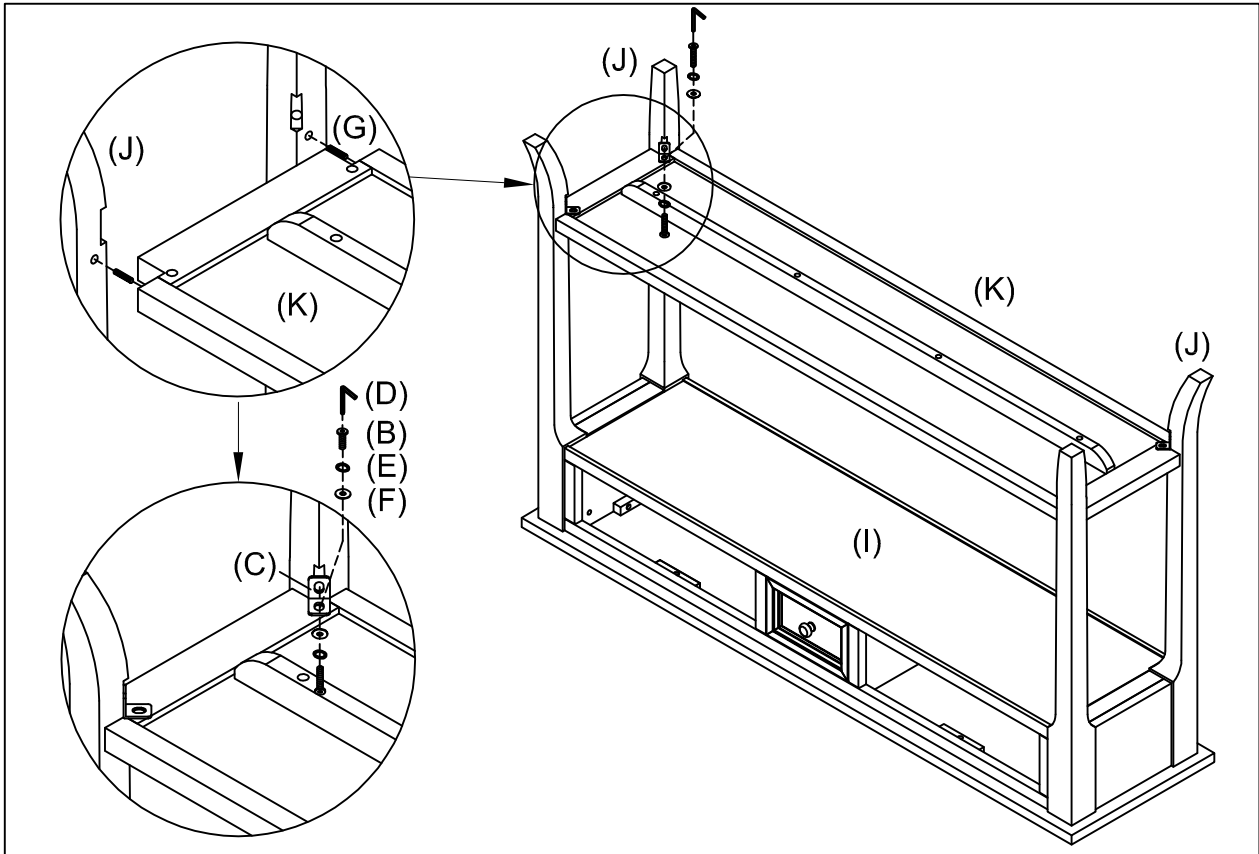



**STEP 3:** Insert the remaining Dowels (G) into the holes on the Legs (J). Attach the Shelf (K) to the Legs (J) by screwing on the Brackets (C) with the Small Allen Bolts (B), Lock Washers (E) and Washers (F). Use the Allen Wrench (D) to tighten Bolts.

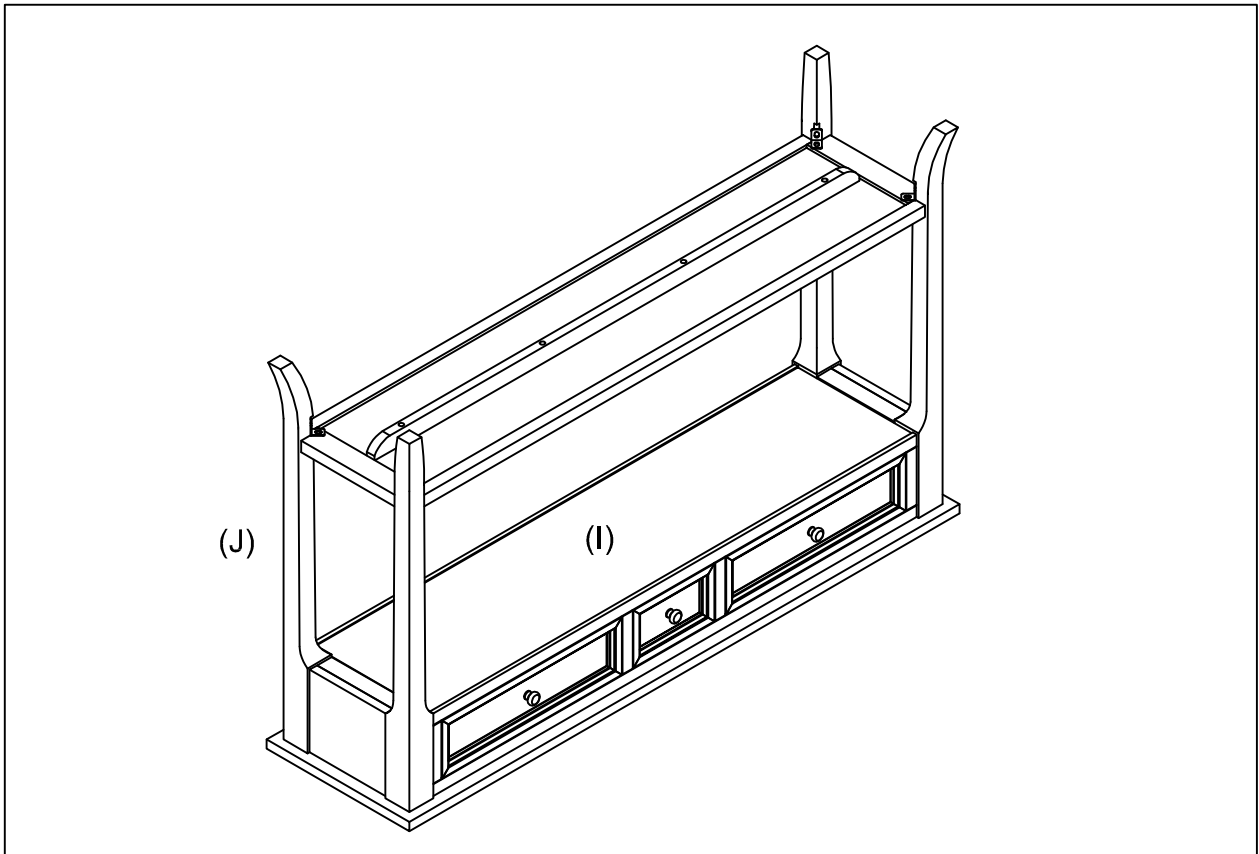

**STEP 4:** Put the Drawers back into the Console Top (I). Turn the Console upright being sure NOT to put uneven pressure on the Legs (J).



## ANTI TIP INSTALLATION: **PART H**

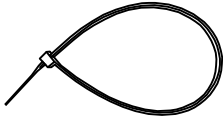Ltr.	Qty.	Hardware Included	
L	2		Small Screw
M	2		Large Screw
N	4		Brackets
O	2		Retention Belt

Attach 2 of the Brackets (N) to the back of the Console Top (I) with the Small Screws (L) through the smaller holes using a Phillips head screwdriver. Then screw in the remaining Brackets to the wall studs with the Large Screws (M) 2 inches below the Brackets attached to the furniture. Align the Brackets vertically and string in the Retention Belts (O). Confirm Straps are securely laced and locked.

