



PRODUCT NAME: BAMBOO METAL ETAGERE







ITEM NUMBER: MV289

DIMENSIONS OF ITEM ASSEMBLED: 22.75"W X 18.5"D X 72"H

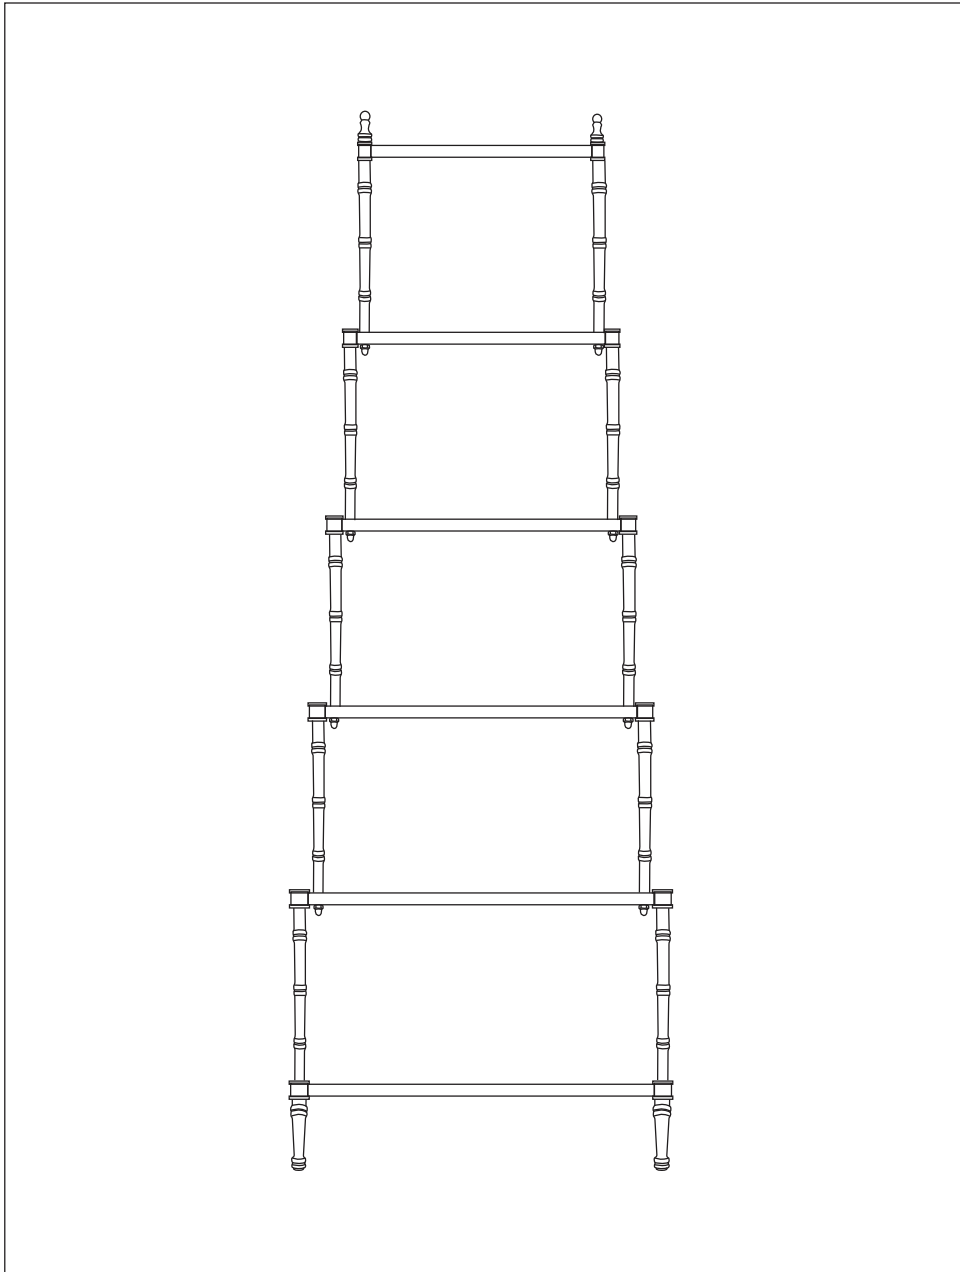


Ltr.	Qty.	Hardware Included
A	16	 <p>Top Nuts</p>


TOOLS NEEDED:
13mm. Wrench
2 People Preferable

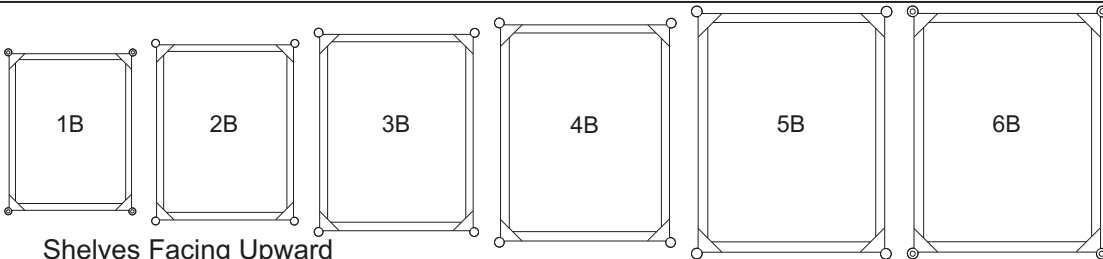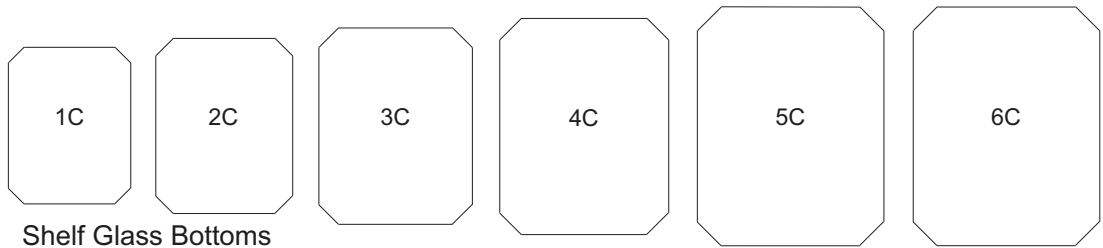Ltr.	Qty.	Components
B	6	 <p>Shelves Facing Upward</p>
C	6	 <p>Shelf Glass Bottoms</p>
D	16	 <p>Shelf Legs</p>
E	4	 <p>Bottom Shelf Legs</p> <p>Has a Longer Screw at the Bottom</p>
F	4	 <p>Legs</p>
G	4	 <p>Toppers</p>


PARTS LOCATED BELOW

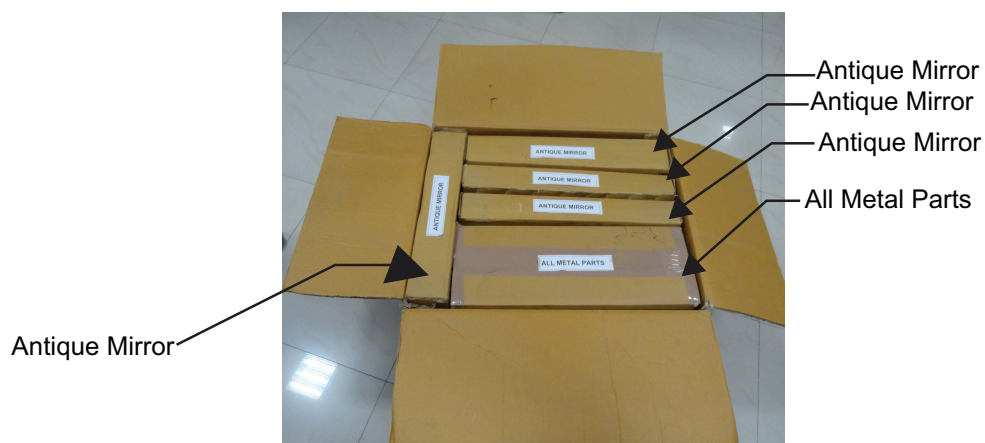


**STEP 1: Put Toppers(G) into the Smallest Shelf(A).
Make sure the topper is on the top face.
Repeat on all 4 corners.**

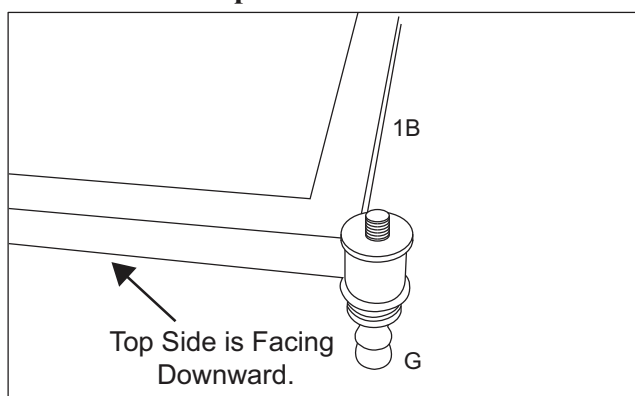


STEP 2: Twist in a Shelf Leg(D) into Toppers(G) on every corner.

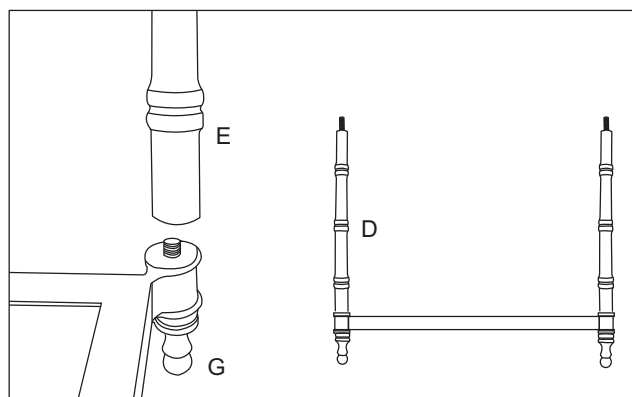


STEP 3: Align Shelf Legs with the next larger shelf(2B). The screws should align with the holes on the inside of the frame.

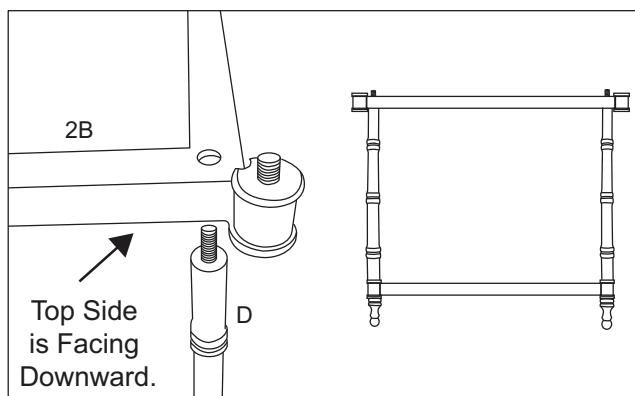


STEP 4: Secure legs to Shelf 2B with Top Nuts(A) on all 4 corners. Be sure to tighten them completely.

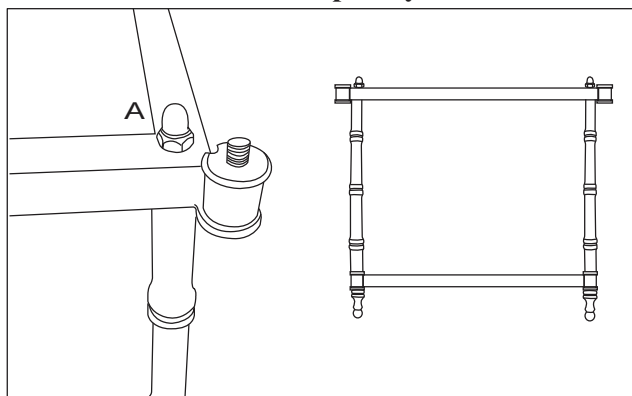


STEP 5: Repeat Steps 2-4 Starting with Shelf 3B to 5B.

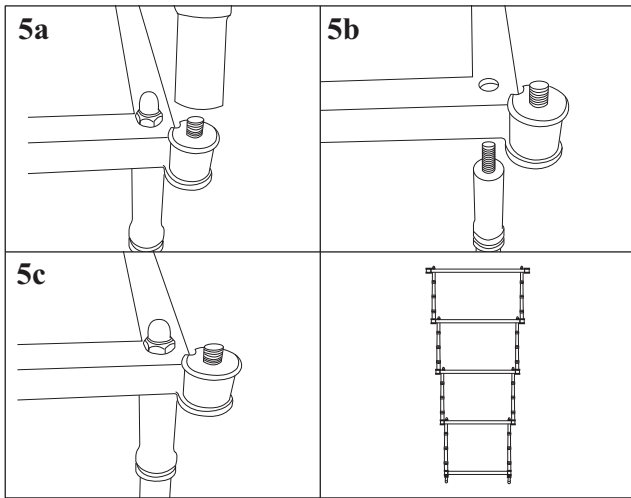


STEP 6: Attach bottom shelf legs(E) to the 4 corners of shelf 5B.

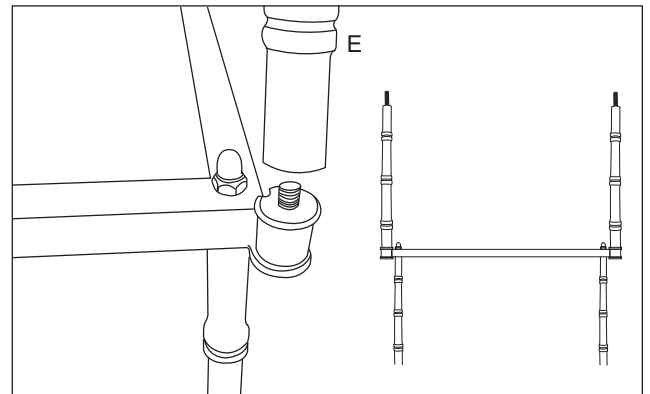


STEP 7: Align shelf 6B with the bottom shelf legs(E).

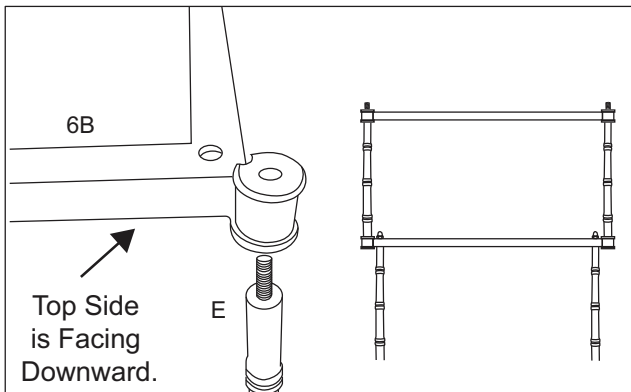

STEP 8: Add Legs(F) to all 4 corners of shelf 6B.

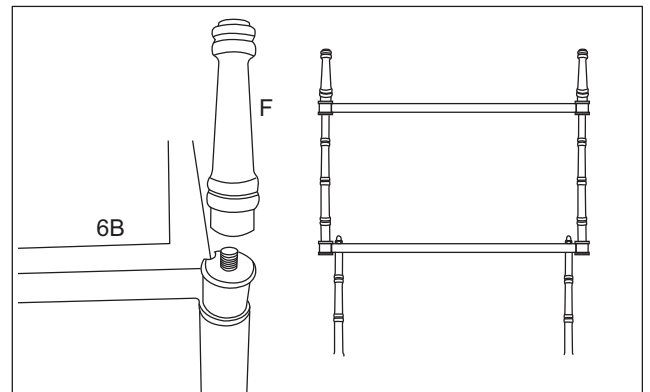

STEP 9: After putting the legs on flip the unit onto its feet. Then place all the mirrors onto their corresponding shelves.

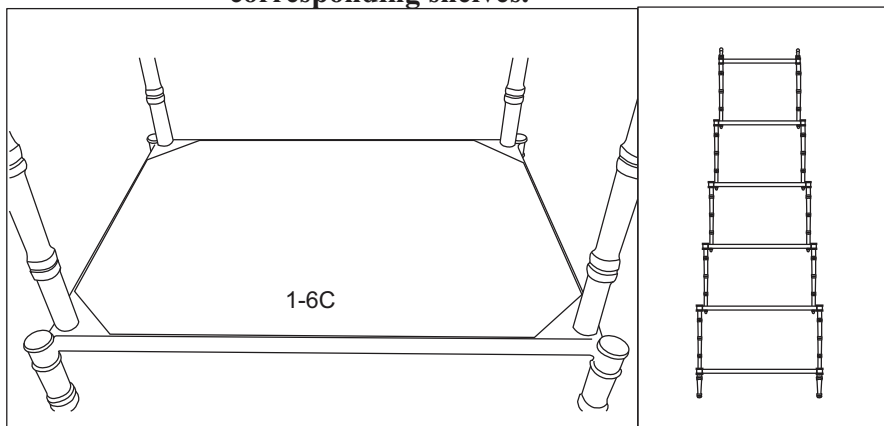

Cleaning & Care:

Clean with soft damp cloth periodically.