
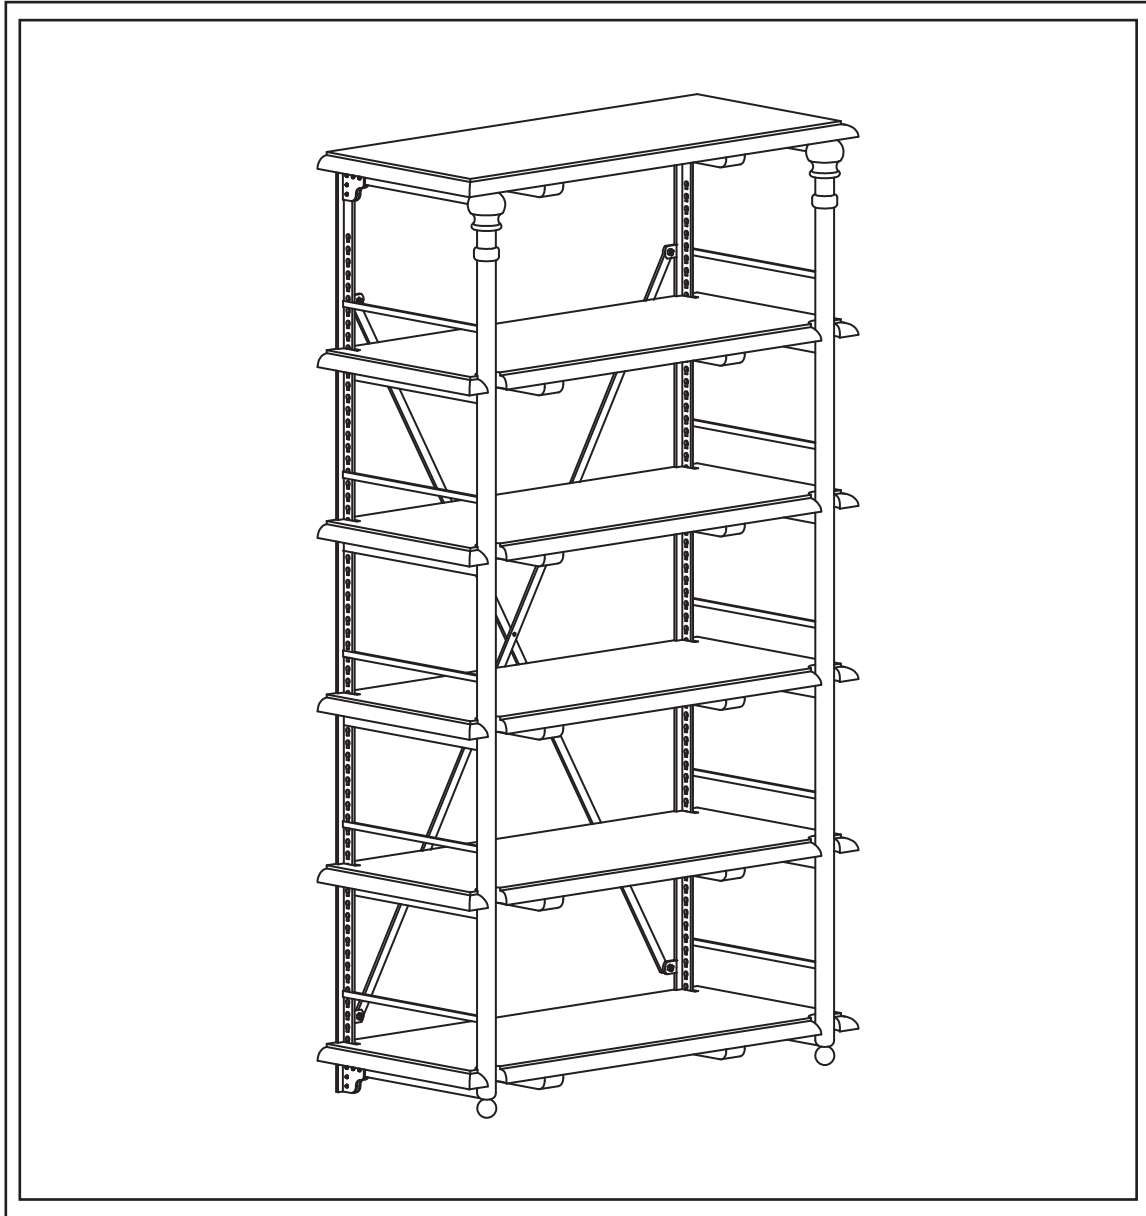







PRODUCT NAME: Toulouse Tall Tower

ITEM NUMBER: MV393

DIMENSIONS OF ITEM ASSEMBLED: 84"H x 42 1/2"W x 16"D







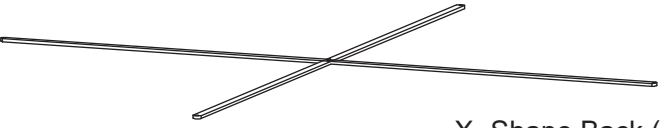
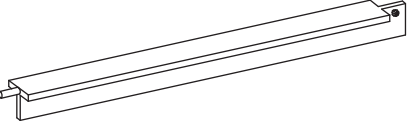
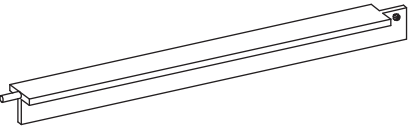



Ltr.	Qty.	Hardware Included	
A	4		Allen Bolts and Cap Nuts
B	12		Allen Bolts
C	2		Wood Screws
D	1		Wrench
E	1		Allen Wrench
F	2		Anti Tip Kits

TOOLS NEEDED:

- Assembly requires 2 or more people.
- Assembly requires a screwdriver.
- 1/16" Drill Bit and Power Drill suggested.


NOTE: When unpacking, lay the parts on a padded surface such as the packaging provided. Be sure to locate all hardware before throwing away any packaging.

Ltr.	Qty.	Components	
G	1		
H	1	Top Fixed Shelf (G)	
I	1		
J	3	Middle Fixed Shelf (H)	Adjustable Shelves (J)
K	1		
L	1	Bottom Fixed Shelf (I)	
M	1		Left Side Frame (K)
N	3		
O	3	Right Side Frame (L)	
P	10		X-Shape Back (M)
		Left Shelf Supports (N)	
		Right Shelf Supports (O)	
			Shelf Guards (P)


NOTE: Assemble the Tower in the desired location.

STEP 1: Assemble Tower on a smooth, clean surface such as the packaging provided. Loosely attach the Top Fixed Shelf (G) to the tops of the Left and Right Side Frames (K & L) using the Allen Bolts (B) and Allen Wrench (E). Then loosely attach the Bottom Fixed Shelf (I) to the bottoms of the Side Frames using the Allen Bolts and Allen Wrench (E).

NOTE: Do not fully tighten the Allen Bolts.

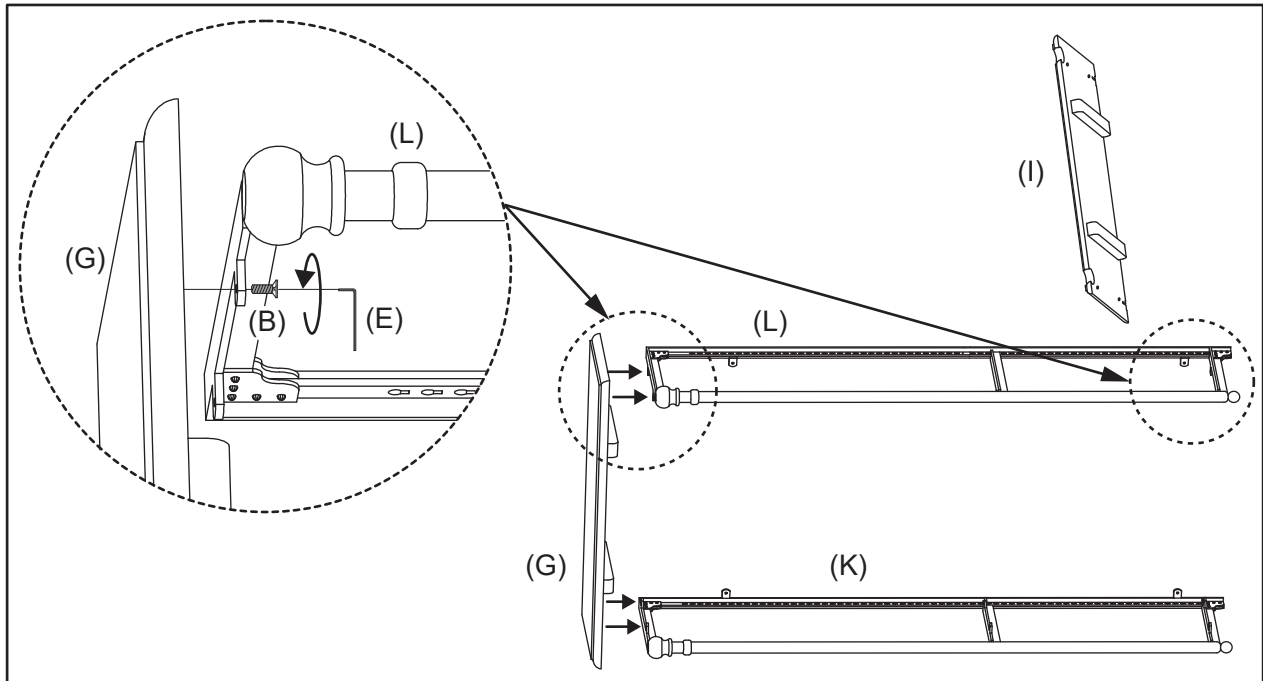


STEP 2: Attach the X-Shape Back (M) to the Left and Right Side Frames (K & L). Align the ends of the X-Shape to the tabs at the top and bottom of the Frames. The pre-drilled holes in the X-Shape should be at the bottom of the X. The Back should be attached behind the Frame tabs. Unscrew the assembled Allen Bolts and Cap Nuts (A) and insert the Bolts from the back and tighten the Cap Nuts using the Wrench (D). Fully tighten the Allen Bolts (B) attaching the Top and Bottom Fixed Shelves (G & I) with the Allen Wrench (E).

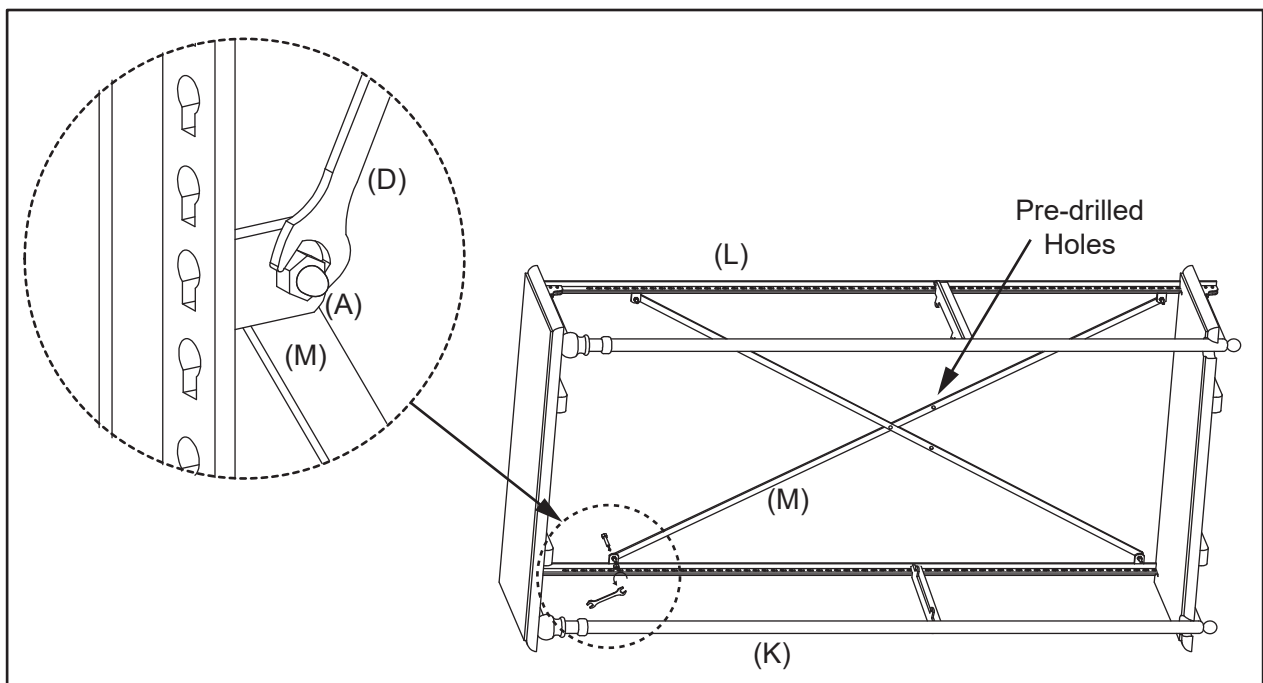


NOTE: Assemble the Tower in the desired location.

STEP 3: Stand Tower upright and lay the Middle Fixed Shelf (H) on the center support bars of the Left and Right Side Frames (K & L) with the notches facing the front. To get the Shelf in place, tilt it back, slide it through the Side Frame and lay it flat on the supports. Attach the Frames and Shelf from underneath using the Allen Bolts (B) and Allen Wrench (E).

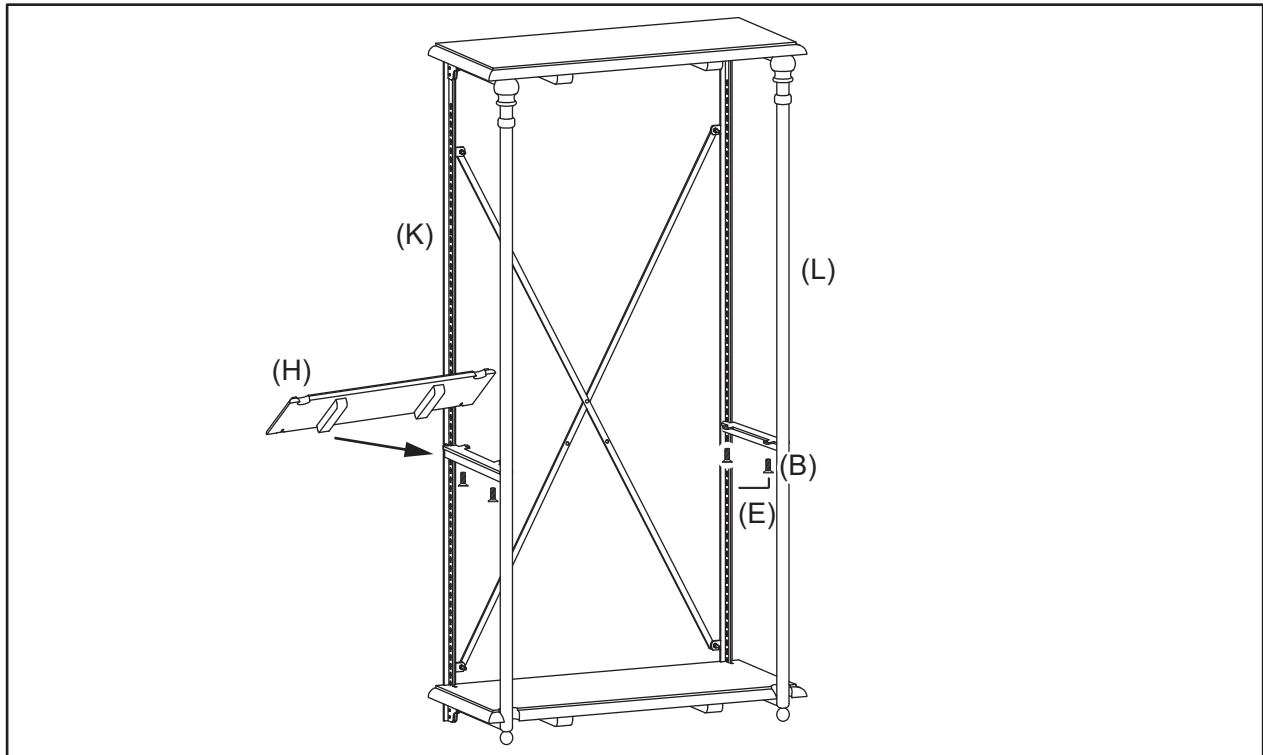


STEP 4: Attach the X-Shape Back (M) to the Middle Fixed Shelf (H). Insert the Wood Screws (C) through the pre-drilled holes in the X-Shape Back and tighten with a screwdriver.

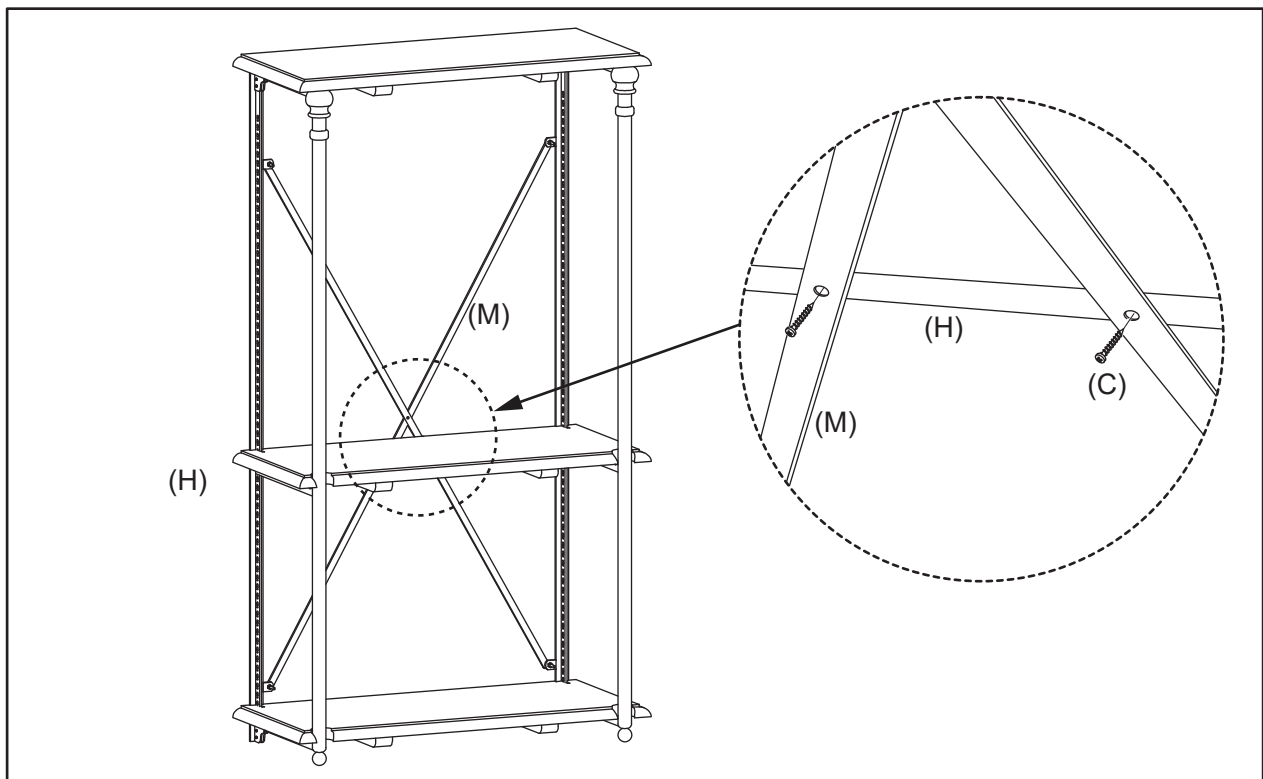


NOTE: Assemble the Tower in the desired location.

STEP 5: Insert the Left and Right Shelf Supports (N & O), with equal spacing, on the respective Side Frames (K & L) by inserting the Shelf Support fronts into the holes in the Side Frame's front first and then sliding the back of the Shelf Support into the corresponding key hole in the Side Frame's Back. Make sure the Shelf Supports are securely locked into place and are in a horizontal position.

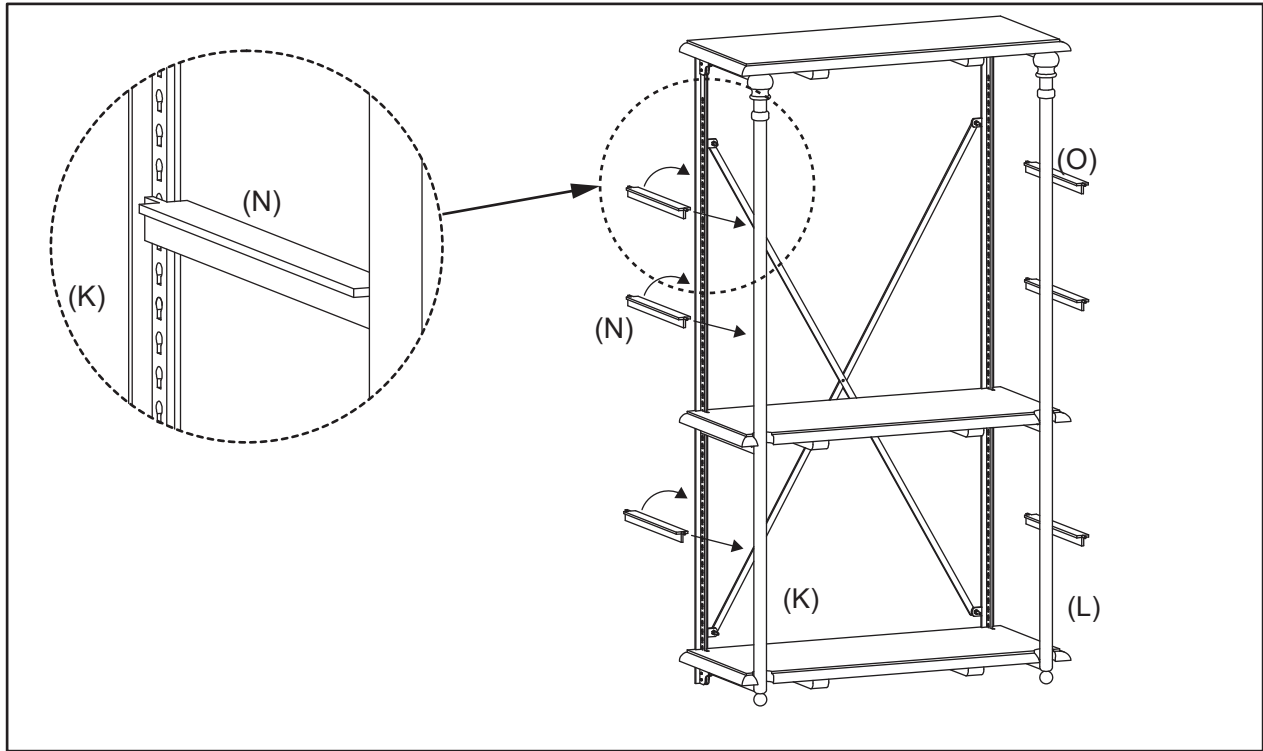




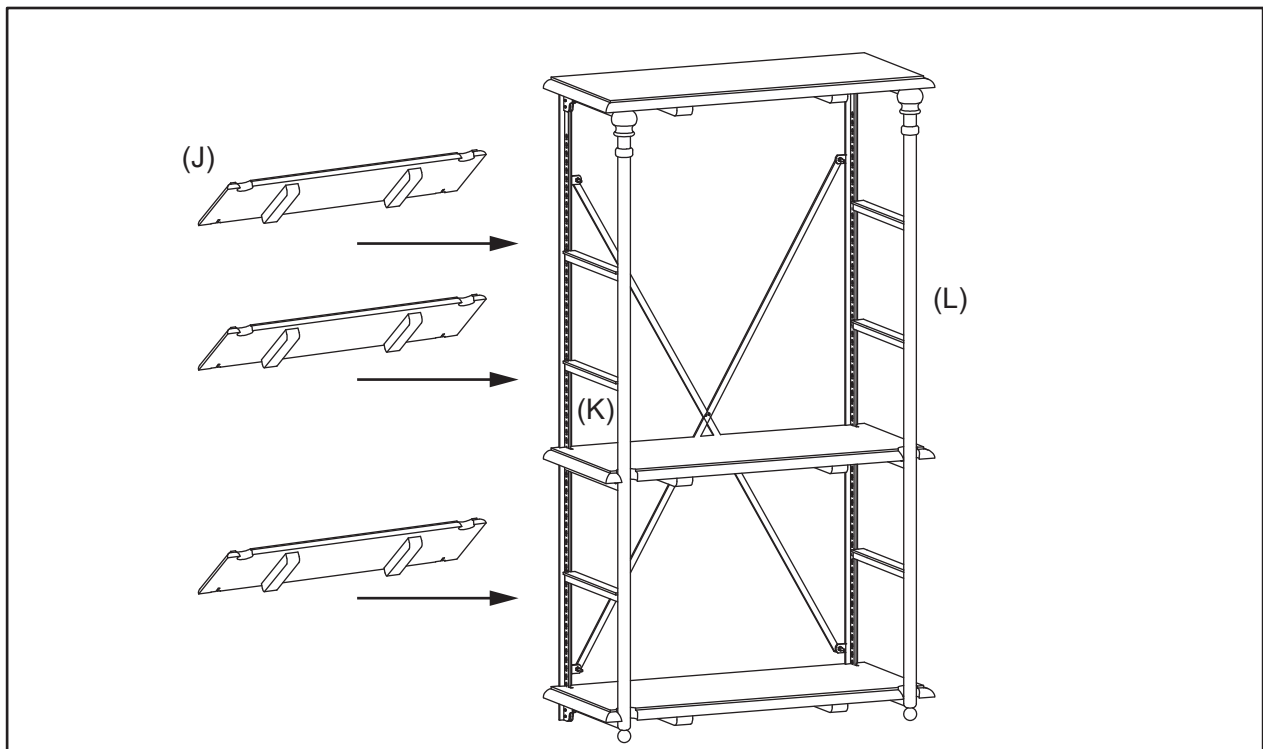

STEP 6: Lay the Adjustable Shelves (J) on the Shelf Supports (N & O) with the notches facing the front of the Side Frames. To get the Shelves in place, tilt them back, slide them through the Side Frame and lay them flat on the Supports.

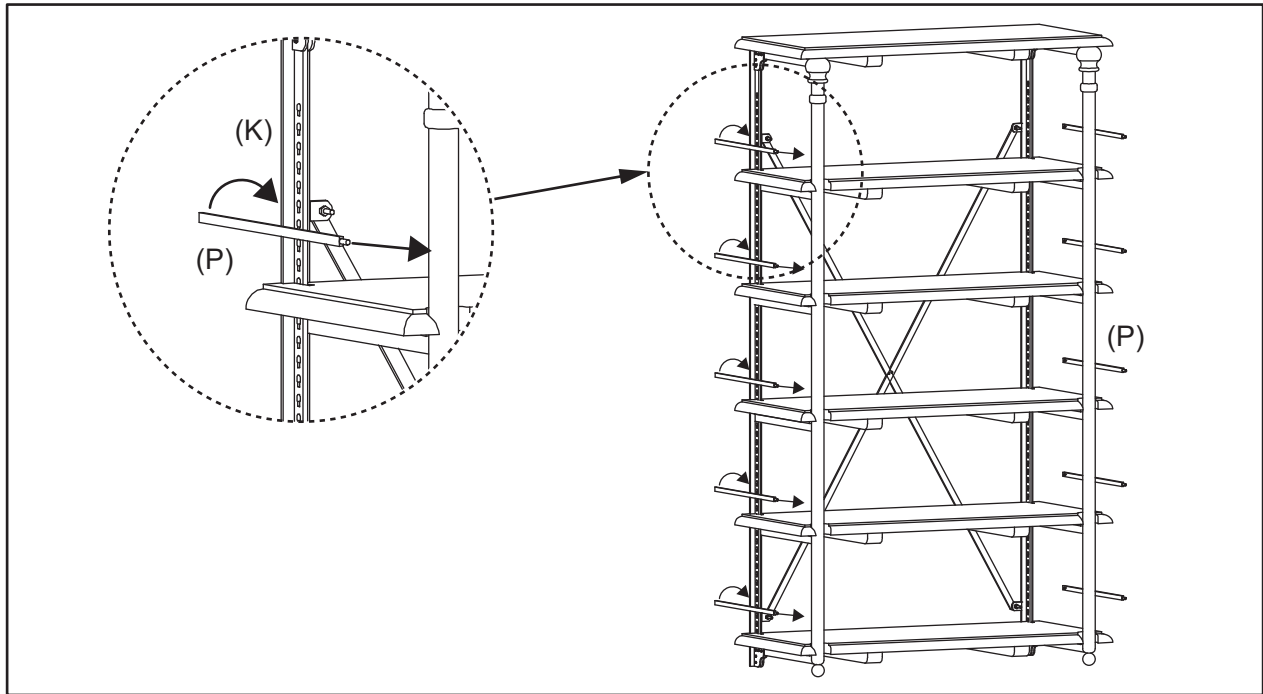

NOTE: Assemble the Tower in the desired location.


STEP 7: Insert the Shelf Guards (P) into the Side Frames (N & O) by inserting the Guards into the front holes of the Side Frames first and then sliding the back of the support into the corresponding key hole in the Side Frames back. Make sure the button on the Guard is facing inward and the Guards are in a horizontal position.



Qty.	Hardware Included	Qty.	Hardware Included
2	 Retention Belts	2	 Screws
2	 Brackets	2	 Anchors

Anti Tip Installation: Screw the Brackets in the Anti Tip Kits (F) into wall studs or use a 1/16" Drill Bit to drill a pilot hole to tap in the Anchors and screw in the Screws. The Screws should be 2 Inches below the D-Rings already attached to the Bookcase. Align the Brackets and D-Rings vertically and string in the Retention Belts. Confirm Straps are securely laced and locked.

NOTE: It is ideal that at least one screw goes into a stud.

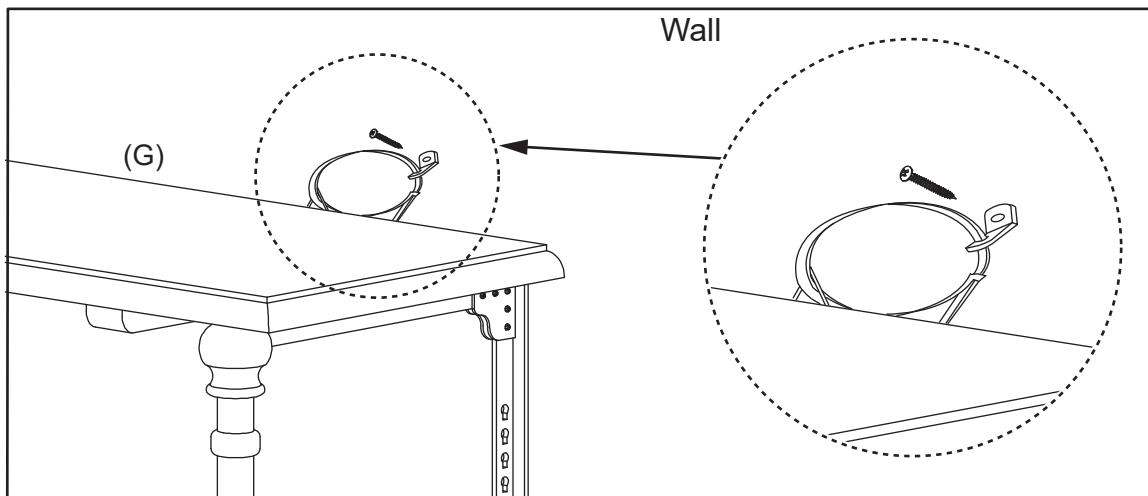

Cleaning & Care:

Apply a very thin coat of wax with a soft cloth and keep away from direct sunlight.