


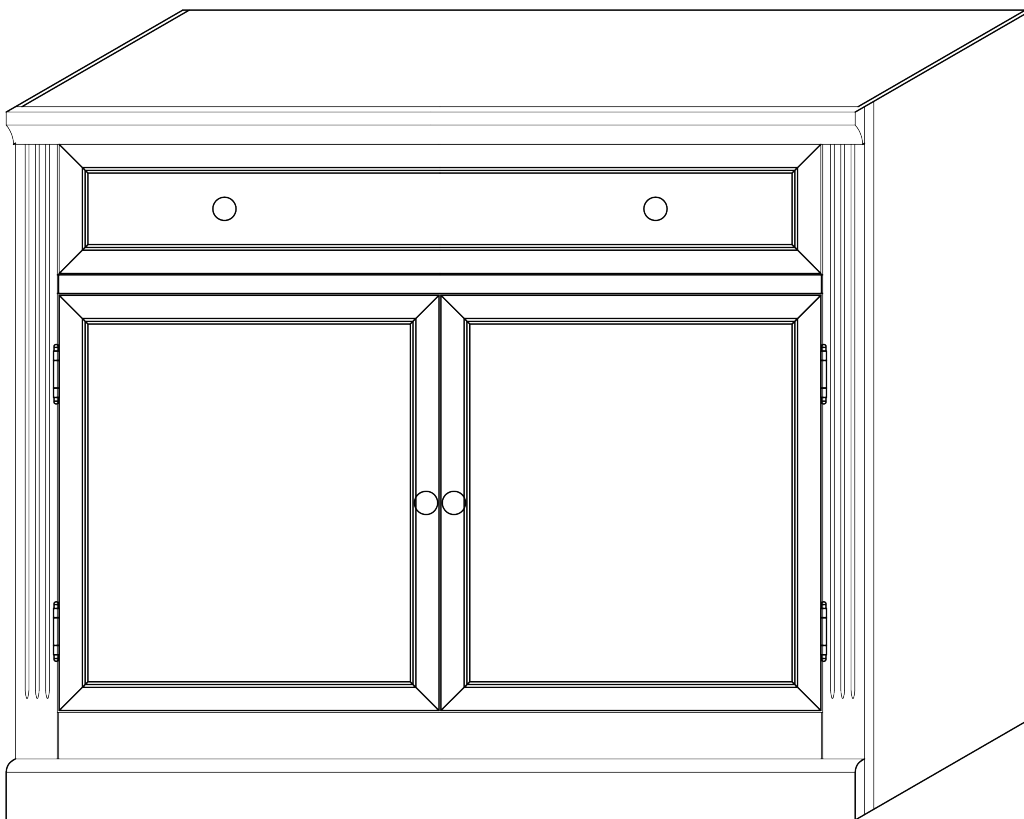

PRODUCT NAME: Tuscan Cabinet

ITEM NUMBER: MV442

ASSEMBLED DIMENSIONS : 30"H x 36"W x 17 1/8"D



Prevent accidentally discarding small parts or hardware. Retain all carton contents until assembly and installation are complete.


PRODUCTS ARE NOT INTENDED
FOR COMMERCIAL USE.

UPDATED: 9-11-2020

IMPORTED

Page 1 of 4



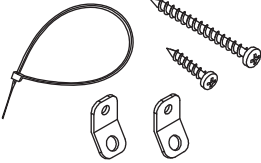
! Assemble in location for intended use.

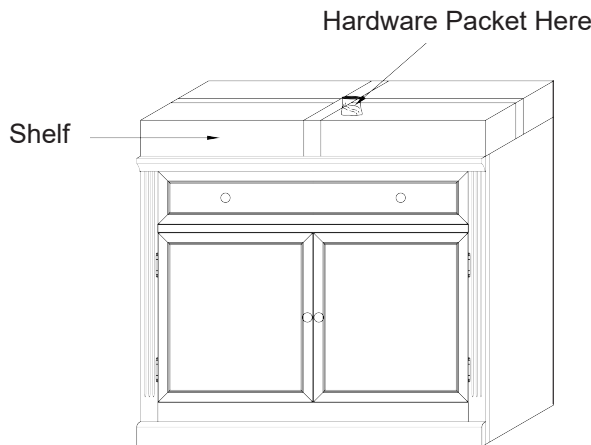



REQUIRED TOOLS:
Phillips Screwdriver


-Two person assembly suggested.

Remove all parts, hardware and protective packaging from carton and carefully arrange on a clean, level, padded surface.

| Ltr. | Qty. | Hardware Included |
|------|------|--|
| A | 4 |  Shelf Supports |
| B | 4 |  Wood Plugs |
| C | 2 |  Wall Anchoring Anti-Tip Kits See Page 4 |

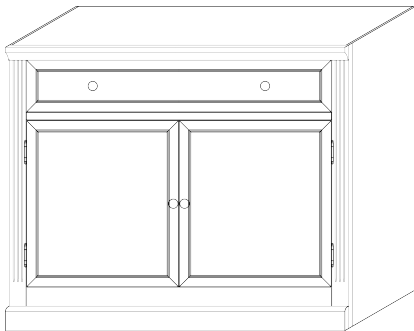

| Ltr. | Qty. | Components |
|------|------|--|
| D | 1 |  Shelf (D) |
| E | 1 |  Cabinet (E) |

| | |
|---|---|
|  | Cleaning and Care |
| | Periodically dust with a soft, dry cloth. Prevent finish damage: do not use alcohol based cleaners or polishers. |



Customer Service: 800-367-2810
Online: www.ballarddesigns.com

 Assemble in location for intended use.

SHELVES: Determine placement for Shelf (D) then insert Shelf Supports (A) into corresponding pre-drilled holes. Gently set Shelf level upon Supports. See Fig. 1

Fig. 1



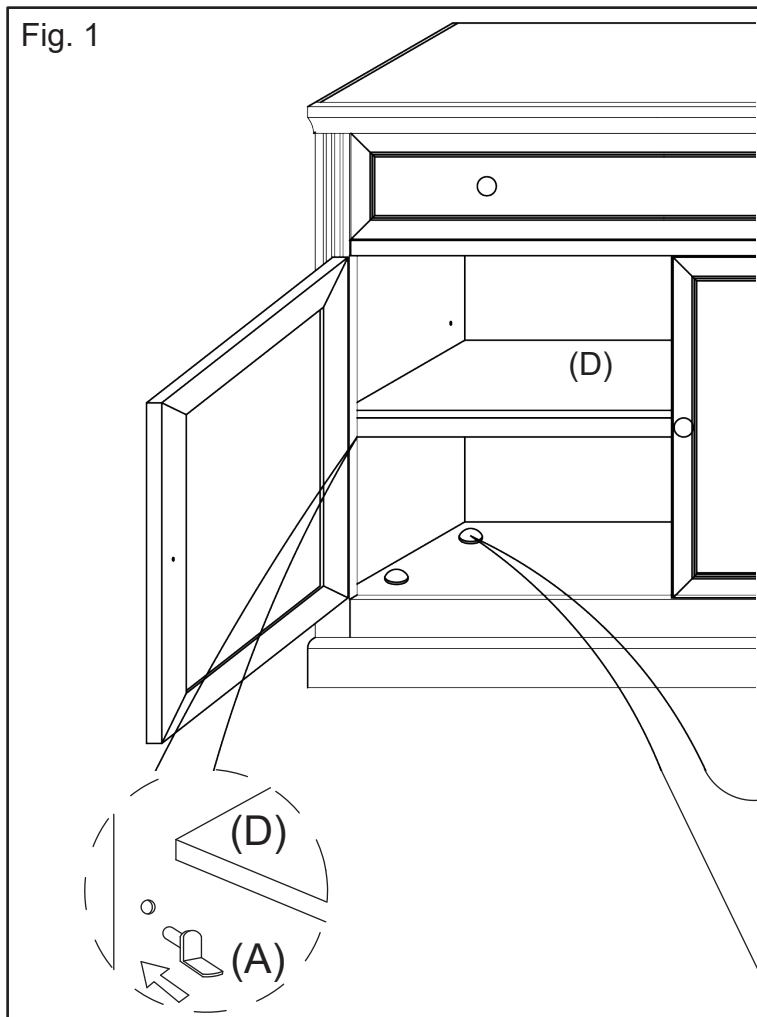






Fig. 2

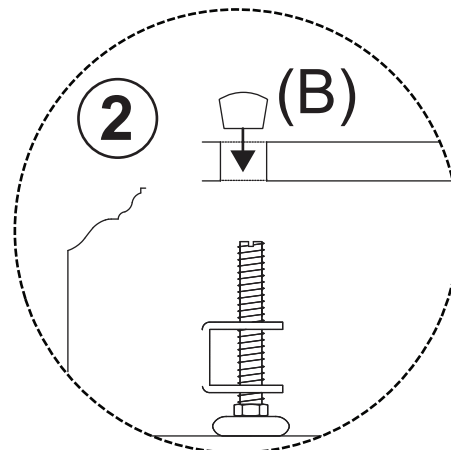

LEVELERS: If necessary, the Cabinet may be leveled by adjusting LEVELERS located on the bottom of each corner which are accessible INSIDE the Cabinet. Use a Flat Head Screwdriver to turn clockwise/counterclockwise to adjust. Cover holes with Wood Plugs (B) when complete. See Fig. 2

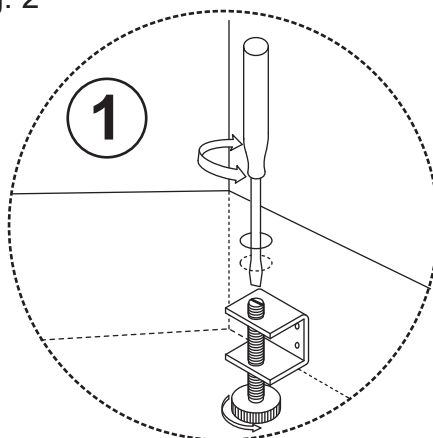

WALL ANCHORING HARDWARE (ANTI-TIP)

| Qty. | Hardware Included | |
|------|---|----------------|
| A |  | Small Screw |
| B |  | Large Screw |
| C |  | Bracket |
| D |  | Retention Belt |



Installation:

1. Place furniture against wall at desired location then locate and mark a Wall Stud behind unit.
2. Corresponding to Stud location, attach one Bracket (C) to back of unit using Small Screw (A).
3. To keep hardware out of view after installation, attach remaining Bracket (C) **INTO WALL STUD** with Large Screw (B) 2 inches below Bracket attached to back of unit.
4. Move unit into place, align Brackets then connect both using Retention Belt (D).
5. Confirm Belt is securely laced and locked.

