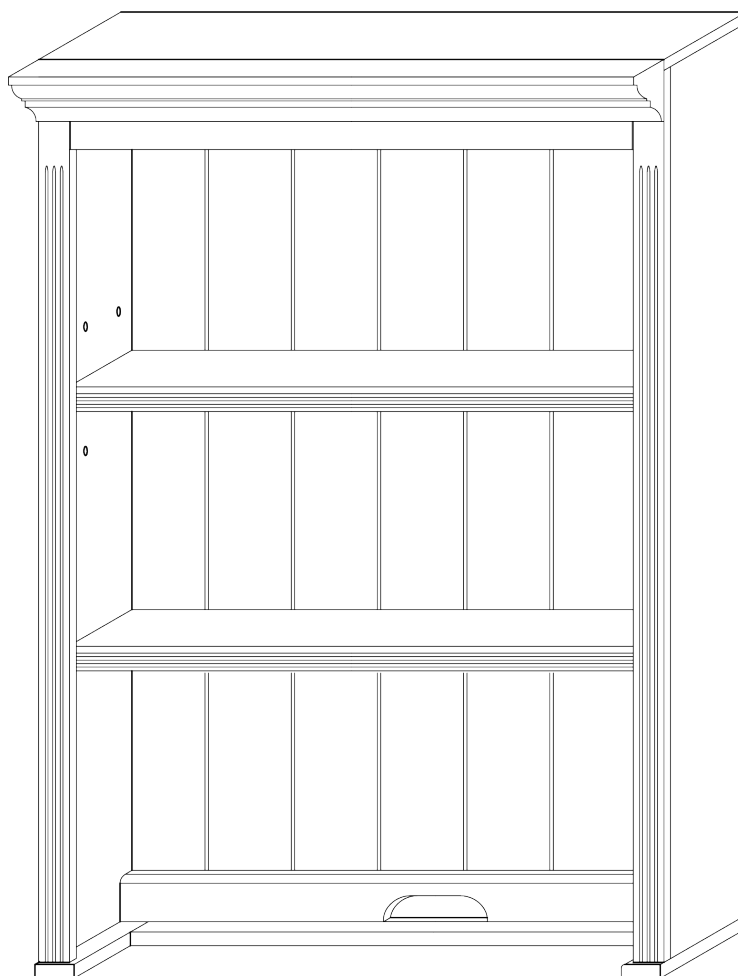




PRODUCT NAME: Tuscan Hutch with Shelves

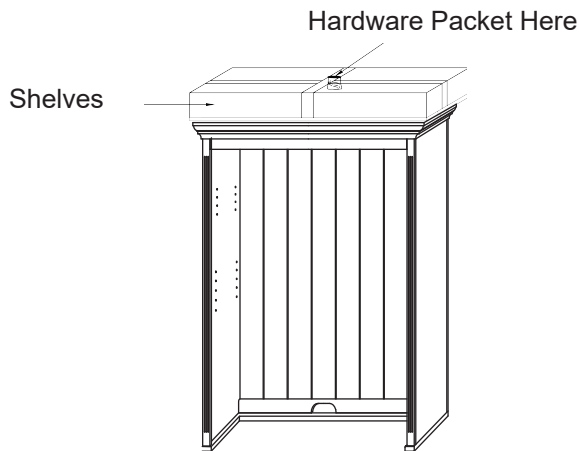
ITEM NUMBER: MV443

ASSEMBLED DIMENSIONS : 51 3/4"H x 36"W x 15"D



**Prevent accidentally discarding small parts or hardware. Retain all carton contents until assembly and installation are complete.**




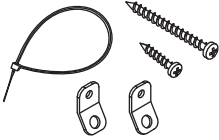
**!** Assemble in location for intended use.




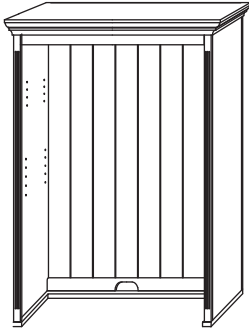
**REQUIRED TOOLS:**  
Phillips Screwdriver

-Two person assembly suggested.

Remove all parts, hardware and protective packaging from carton and carefully arrange on a clean, level, padded surface.


Ltr.	Qty.	Hardware Included	
A	8		Shelf Supports
B	2		Connector Plates
C	8		Connector Plate Screws
D	2		Wall Anchoring Anti-Tip Kits See Page 4



Ltr.	Qty.	Components	
E	2		
F	1		

Shelves (E)

Hutch (F)

	Cleaning and Care
	Periodically dust with a soft, dry cloth. Prevent finish damage: do not use alcohol based cleaners or polishers.



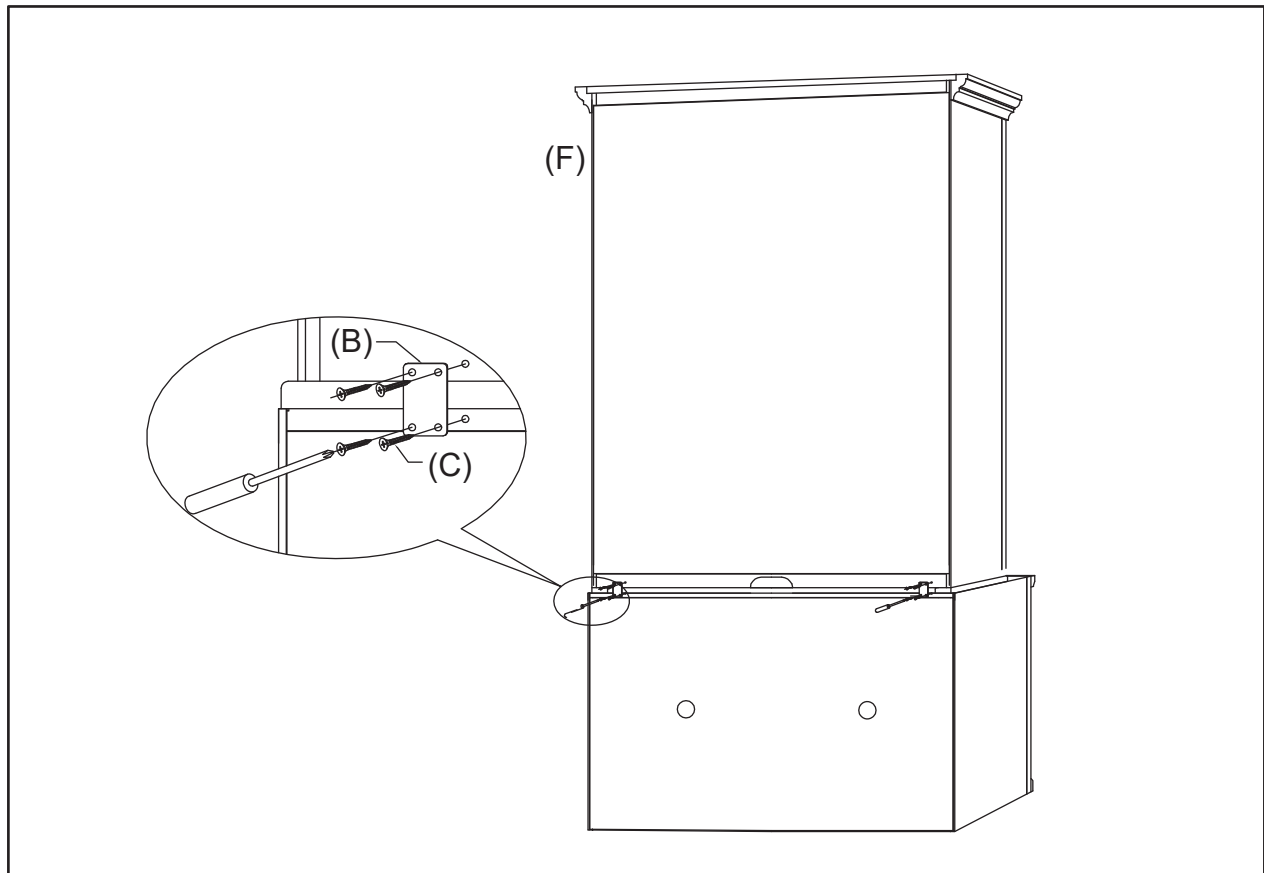
Customer Service: 800-367-2810  
Online: [www.ballarddesigns.com](http://www.ballarddesigns.com)

 Assemble in location for intended use.

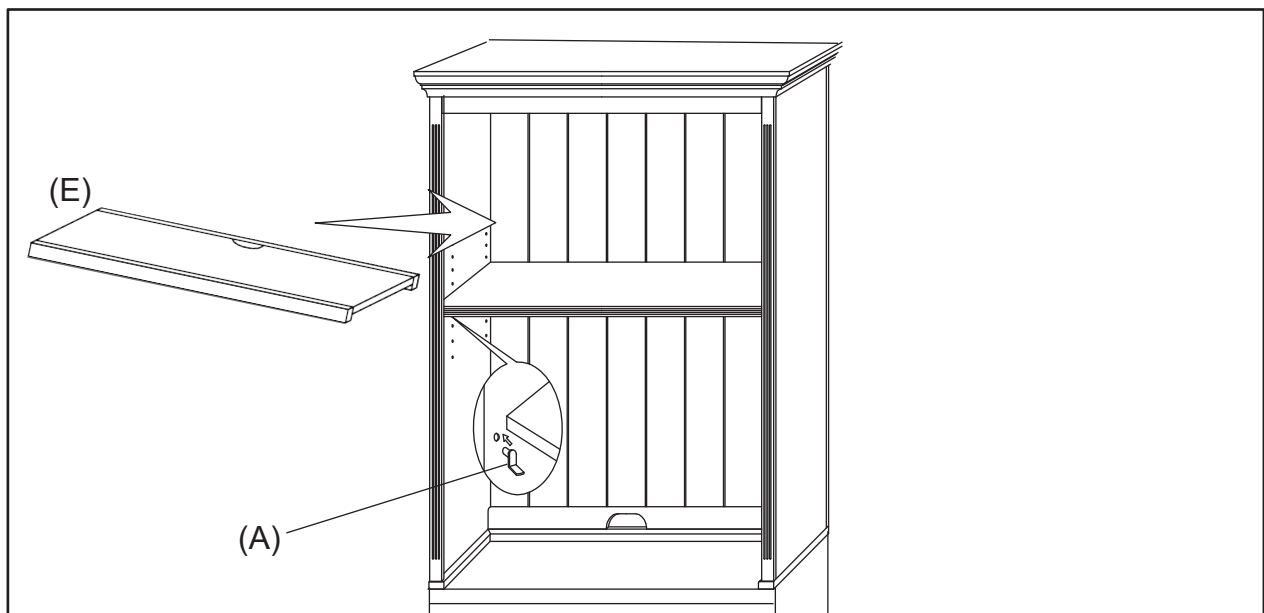
STEP 1: Carefully place Hutch onto top of Cabinet, align back edges then orient Connector Plates (B) over seam and secure both pieces together using Connector Plate Screws (C). Firmly tighten.







**WARNING:** To prevent a dangerous tip-over accident, Hutch must be secured to Cabinet using Brackets as illustrated in this step.



STEP 2: Determine placement for each Shelf (E) then insert Shelf Supports (A) into corresponding pre-drilled holes. Gently set each Shelf level upon Supports.



## WALL ANCHORING HARDWARE (ANTI-TIP)

Qty.	Hardware Included	
A		Small Screw
B		Large Screw
C		Bracket
D		Retention Belt



### Installation:

1. Place furniture against wall at desired location then locate and mark a Wall Stud behind unit.
2. Corresponding to Stud location, attach one Bracket (C) to back of unit using Small Screw (A).
3. To keep hardware out of view after installation, attach remaining Bracket (C) **INTO WALL STUD** with Large Screw (B) 2 inches below Bracket attached to back of unit.
4. Move unit into place, align Brackets then connect both using Retention Belt (D).
5. Confirm Belt is securely laced and locked.

