BALLARD DESIGNS


Customer Service: 800-367-2810
Online: www.ballarddesigns.com

PRODUCT NAME: Aman Bookcase
ITEM NUMBER: MV474
ASSEMBLED DIMENSIONS : 82”H x 32”W x 14 1/2”D



WARNING
Tip-Over Hazard
ANCHORING HARDWARE INCLUDED
Serious or fatal crushing injuries can occur from a furniture tip-over
Prevent tipping accidents. Anchor your furniture.


REQUIRED TOOLS:
Phillips Screwdriver
-Two person installation suggested.

Ltr.	Qty.	Hardware/Components Included
A	2	 Wall Anchoring (Anti-tip) L-Brackets See page 2
B	8	 Short Screws (6 x 14mm)
C	8	 Long Screws (6 x 38mm)

LEVELERS: Bookcase is equipped with Rotary Levelers installed under each corner. If necessary, adjustments may be made by carefully lifting applicable corner and turning Leveler clockwise/counter-clockwise.


NOTE

Set Bookshelf into place and level **BEFORE** anchoring Bookshelf to wall stud(s).

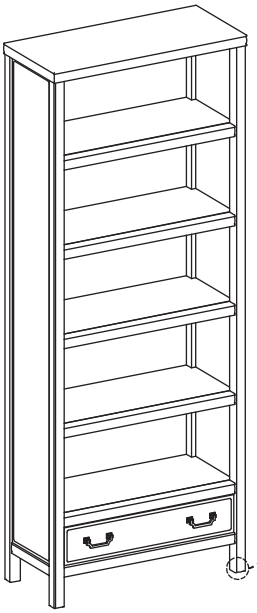

Bookcase (D)

LEVELER

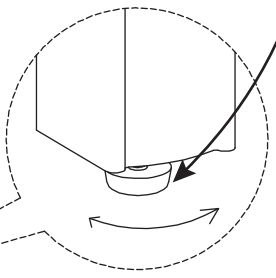

Cleaning and Care
Periodically dust with a soft, dry cloth. Prevent finish damage: do not use alchohol based cleaners or polishers. Promptly remove spills.


PRODUCTS ARE NOT INTENDED FOR COMMERCIAL USE.
UPDATED: 6-18-2021

MADE IN CHINA


WALL ANCHORING HARDWARE (ANTI-TIP)

STEP 1: Determine installation location, then identify two *wall studs behind Bookcase (D). Push Bookcase into place then slide each L-Bracket (A) over top of unit and center in front of each *wall stud. Use pencil to mark wall at top of each Bracket.

IMPORTANT: Orient Brackets as illustrated to ensure they are not visible after installation.

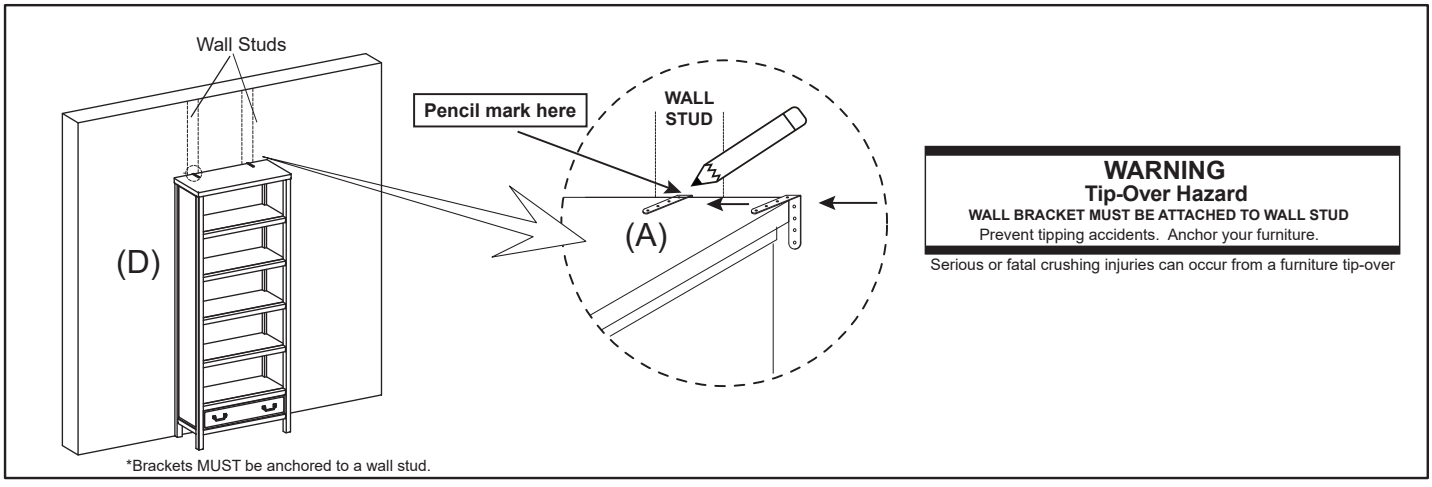

STEP 2: Pull Bookcase away from wall, align L-Brackets (A) with marks on wall then anchor L-Bracket directly into wall stud using four Long Screws (C).

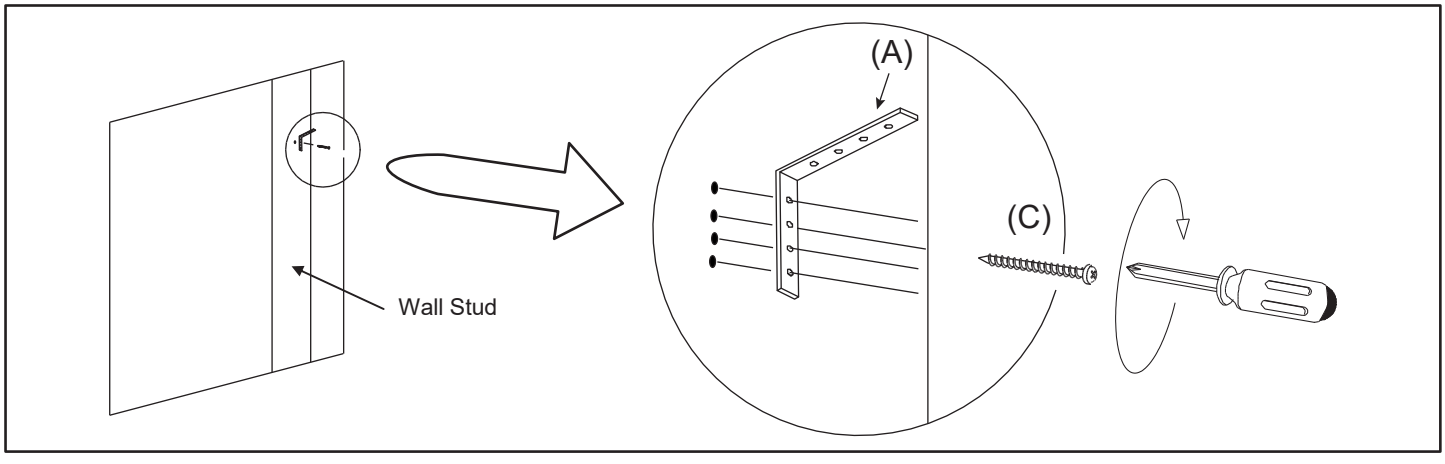

STEP 3: Move Bookcase back into place and slide under both L-Brackets (A). Attach using Short Screws (B) and a Phillips Screwdriver to firmly tighten. NOTE: Floor molding may prevent all holes from covering top, install Screws those holes which cover top.

