



PRODUCT NAME: Callista Bookcase

ITEM NUMBER: MV501


ASSEMBLED DIMENSIONS: 75"H X 34"W X 18"D









REQUIRED TOOLS: Phillips Screwdriver

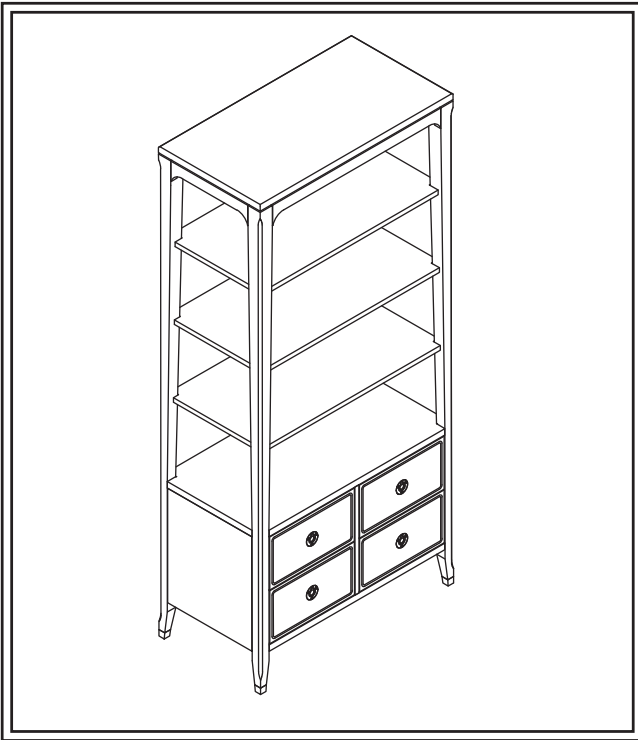FULLY ASSEMBLED

Assembled Weight: 160 lbs.

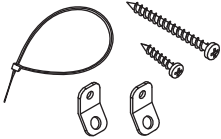


Ltr.	Qty.	Hardware/Components Included	
A	12		Shelf Supports
B	3	  	Shelves
C	1		Bookcase
D	2		Wall Anchoring (Anti-tip) Kit See page 3

LEVELERS: Equipped with Rotary Levelers installed under each corner/leg. If necessary, adjustments may be made by carefully lifting applicable corner and turning Leveler clockwise/counterclockwise.

IMPORTANT

Set furniture into place and level before anchoring to wall.

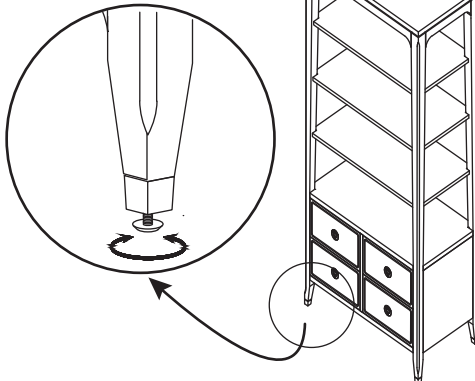


FULLY REMOVING DRAWERS

Drawers feature metal glides.

First, fully open/extend Drawer

TO REMOVE


Push Lever in side rails up on one side and down on the other while pulling drawer out

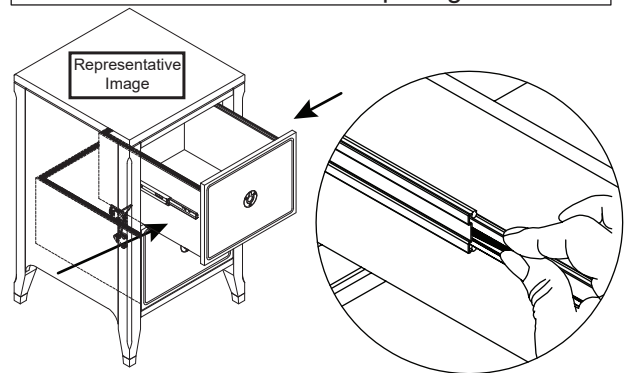


To replace, align glides and push drawer in.

 Assemble in location for intended use.

SHELVES: Determine placement for each Shelf (B) then insert Shelf Supports (A) into corresponding pre-drilled holes. Carefully place Shelf level upon supports.

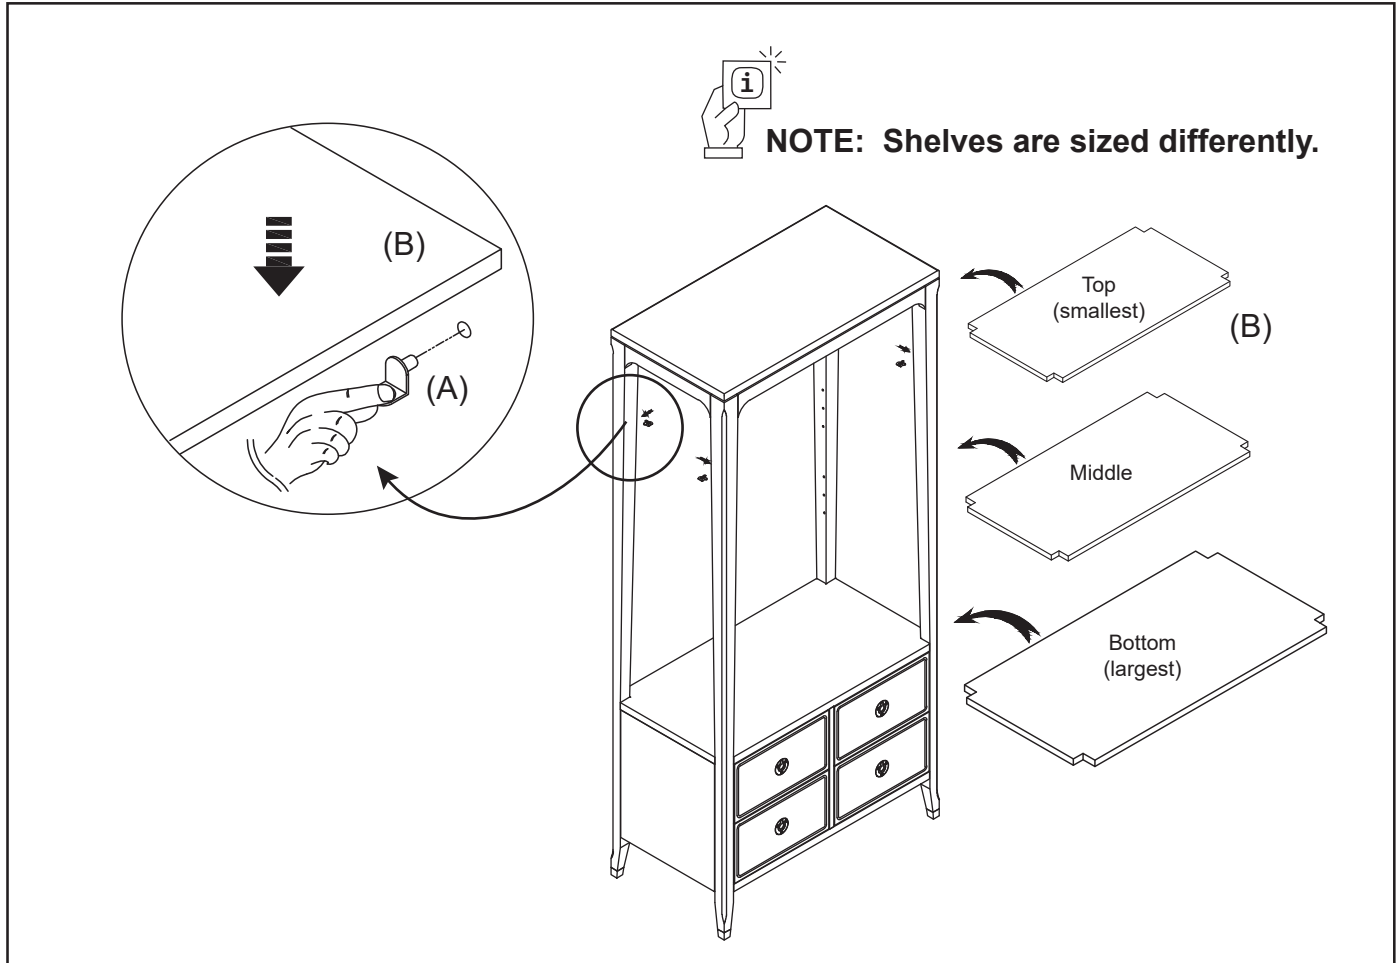





	<p>Cleaning and Care</p> <p>Periodically dust with a soft, dry cloth. Protect surfaces to prevent damage. Do not use alcohol based cleaners or polishers.</p>
---	--



Customer Service: 800-367-2810
Online: www.ballarddesigns.com

WALL ANCHORING HARDWARE (ANTI-TIP)

Ltr.	Qty.	Hardware Included	
A	2		Large Screw
B	2		Small Screw
C	4		Bracket
D	2		Retention Belt



Installation:

1. Place furniture against wall at desired location then locate and mark a Wall Stud behind unit.
2. Corresponding to Stud location, attach one Bracket (C) to back of unit using Small Screw (B).
3. To keep hardware out of view after installation, attach remaining Bracket (C) **INTO WALL STUD** with Large Screw (A) 2 inches below Bracket attached to back of unit.
4. Move unit into place, align Brackets then connect both using Retention Belt (D).
5. Confirm Belt is securely laced and locked.

