# BALLARD DESIGNS.



PRODUCT NAME: Dover Dresser

ITEM NUMBER: NR002


ASSEMBLED DIMENSIONS: 36"H x 64"W x 20"D





# REQUIRED TOOLS: Phillips Screwdriver (Anchoring) NO ASSEMBLY REQUIRED / 190 lbs.

Ltr.	Qty.	Hardware/Components Included	
А	2		Wall Anchoring (Anti-tip) Kit See page 2
В	1		Dresser

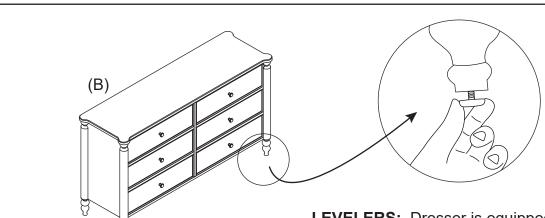

## NOTE

Set furniture into place and level before anchoring to wall.

**LEVELERS:** Dresser is equipped with Rotary Levelers installed under each leg. If necessary, adjustments may be made by carefully lifting applicable corner and turning Levelers clockwise/counterclockwise.



#### **Cleaning and Care**

Periodically dust with a soft, dry cloth.

Prevent finish damage: do not use alcohol based cleaners or polishers. Promptly remove spills.

PRODUCTS ARE NOT INTENDED FOR COMMERCIAL USE. UPDATED: 5-20-2024

MADE IN VIETNAM
Page 1 of 2

# WALL ANCHORING HARDWARE (ANTI-TIP)

Ltr.	Qty.	Hardware Included	
А	2	<111111111111111(%)	Large Screw
В	2	<ul><li>10000(%)</li></ul>	Small Screw
С	4		Bracket
D	2		Retention Belt



## Installation:

- 1. Place furniture against wall at desired location then locate and mark a Wall Stud behind unit.
- 2. Corresponding to Stud location, attach one Bracket (C) to back of unit using Small Screw (B).
- 3. To keep hardware out of view after installation, attach remaining Bracket (C) **INTO WALL STUD** with Large Screw (A) 2 inches below Bracket attached to back of unit.
- 4. Move unit into place, align Brackets then connect both using Retention Belt (D).
- 5. Confirm Belt is securely laced and locked.

