



PRODUCT NAME: Newberry Tall 5 Drawer Dresser  
ITEM NUMBER: NR005  
ASSEMBLED DIMENSIONS: 55"H X 28.75"W X 20.75"D





## REQUIRED TOOLS:

Phillips Screwdriver

## FULLY ASSEMBLED

Assembled Weight: 162 lbs.

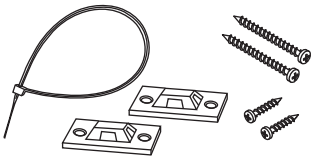


Ltr.	Qty.	Hardware/Components Included
A	2	 <p>Wall Anchoring (Anti-tip) Kit See page 2</p>
B	1	 <p>Dresser (Fully Assembled)</p>

**LEVELERS:** Equipped with Rotary Levelers installed under each corner/leg. If necessary, adjustments may be made by carefully lifting applicable corner and turning Leveler clockwise/counterclockwise.


### IMPORTANT

Set furniture into place and level before anchoring to wall.

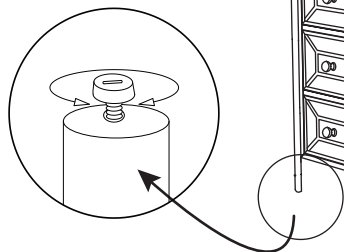





## FULLY REMOVING DRAWERS

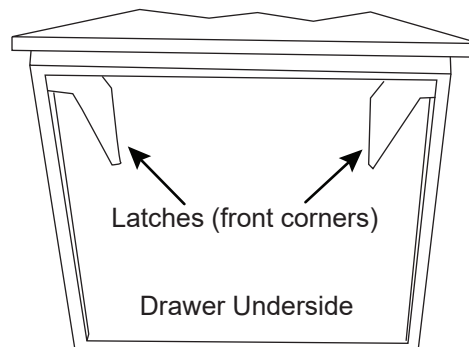**Drawers feature undermount metal glides.**  
**First, fully open/extend drawer then reach under each front corner and pull latches to release drawer from glides.**  
**Lift drawer up and out.**



**To replace, align glides and push drawer in.**

## WALL ANCHORING HARDWARE (ANTI-TIP)

Ltr.	Qty.	Hardware Included	
A	4		Small Screw
B	4		Large Screw
C	4		Bracket
D	2		Retention Belt



1. Place furniture against wall at desired location then locate and mark a Wall Stud behind unit.
2. Corresponding to Stud location, attach one Bracket (C) to back of unit using Small Screws (A).
3. To keep hardware out of view after installation, attach remaining Bracket (C) **INTO WALL STUD** with Large Screws (B) 2 inches below Bracket attached to back of unit.
4. Move unit into place, align Brackets then connect both using Retention Belt (D).
5. Confirm Belt is securely laced and locked.

