
BALLARD DESIGNS.

Customer Service: 800-367-2810 Online: www.ballarddesigns.com

PRODUCT NAME: Kerra Sideboard

ITEM NUMBER: SF035

DIMENSIONS OF ITEM ASSEMBLED: 37"H x 74"W x 17 1/4"D

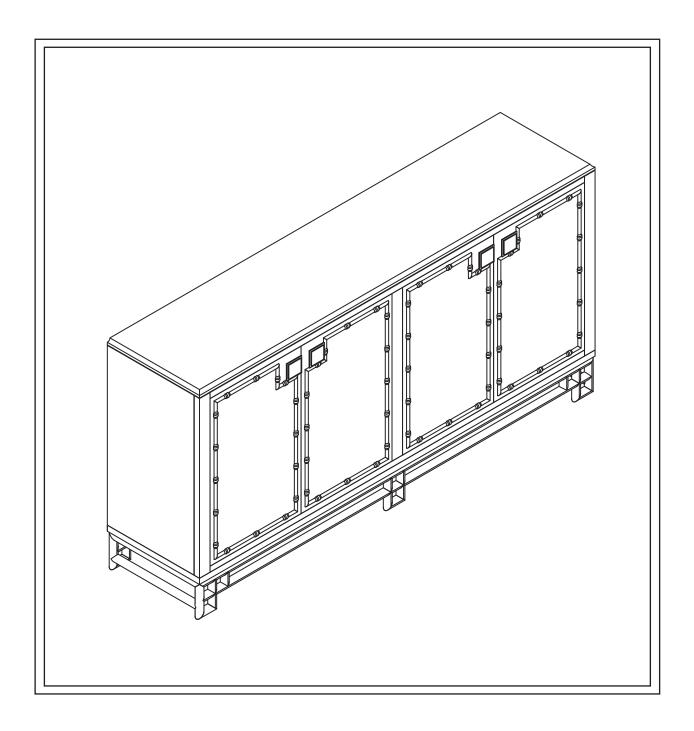

PRODUCTS ARE NOT INTENDED FOR COMMERCIAL USE. UPDATED: 3-4-2020

Assemble in location for intended use.

Ltr.	Qty.	Included Hardware		
А	16	Shelf Supports		
В	2	Shims		
С	2	Wall Anchoring (Anti-tip) Kits See page 4		

REQUIRED TOOLS: Phillips Screwdriver -Two person assembly suggested.

Remove all parts, hardware and protective packaging from carton and carefully arrange on a clean, level, padded surface.

NOTE: To avoid accidentally discarding small parts or hardware, retain all carton contents until assembly and installation are complete.

WARNING


Tip-Over Hazard
Prevent tipping accidents. Anchor your furniture.
ANCHORING HARDWARE INCLUDED

Ltr.	Qty.	Components
D	4	Shelf (D)
Е	1	Sideboard (E)


Customer Service: 800-367-2810 Online: www.ballarddesigns.com

Assemble in location for intended use.

STEP 1: Determine Shelf (D) placement then insert Shelf Supports (A) into pre-drilled holes inside Sideboard (E). Place each Shelf onto Shelf Supports.

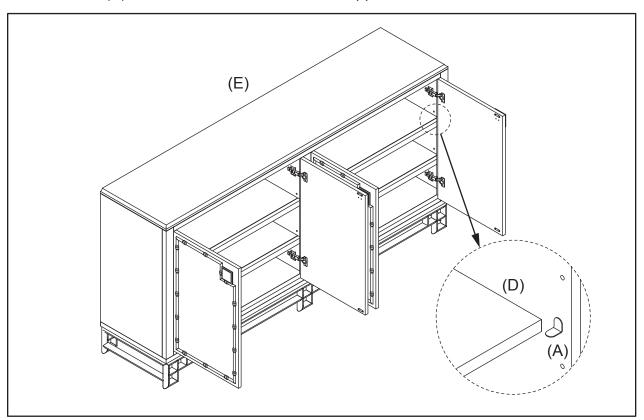

STEP 2: Should doors appear misaligned, Sideboard may need to be leveled. Shims (B) may be placed under corners to level Sideboard and help align doors.

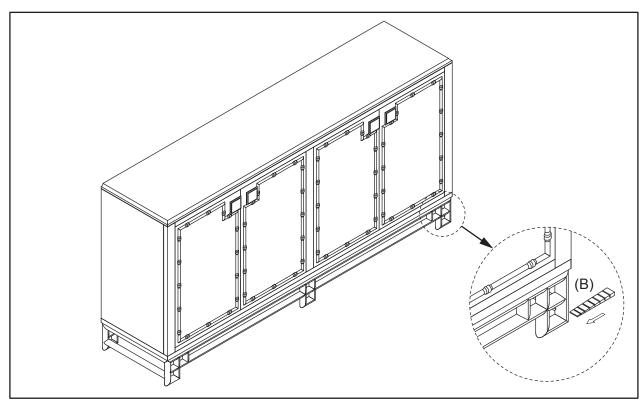

Customer Service: 800-367-2810 Online: www.ballarddesigns.com


WALL ANCHORING HARDWARE (ANTI-TIP)

Ltr.	Qty.	Hardware Included		
A	2	<======================================	Large Screw	
В	2	<111111(%)	Small Screw	
С	4		Bracket	
D	2		Retention Belt	



Installation:

- 1. Place furniture against wall at desired location then locate and mark a Wall Stud behind unit.
- 2. Corresponding to Stud location, attach one Bracket (C) to back of unit using Small Screw (B).
- 3. To keep hardware out of view after installation, attach remaining Bracket (C) **INTO WALL STUD** with Large Screw (A) 2 inches below Bracket attached to back of unit.
- 4. Move unit into place, align Brackets then connect both using Retention Belt (D).
- 5. Confirm Belt is securely laced and locked.

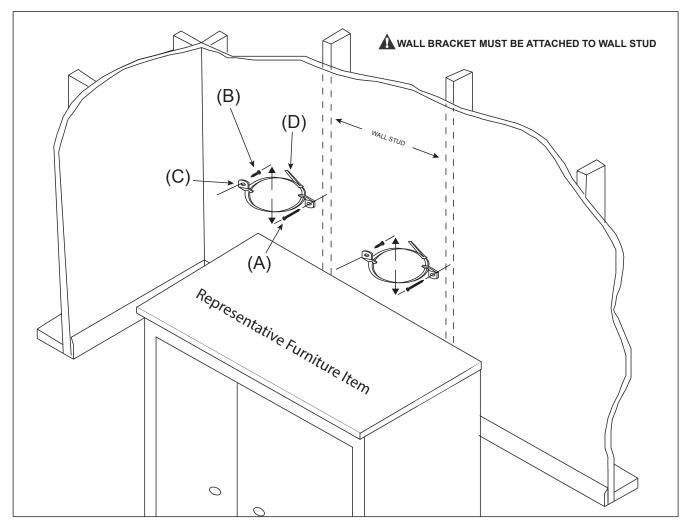

Cleaning & Care:

DO NOT use alcohol based products or spray polisher as they can damage the finish. Dust with soft cloth.