




PRODUCT NAME: Tilde Sideboard Soft Blue  
ITEM NUMBER: SF085 SBL  
ASSEMBLED DIMENSIONS : 34.5"H x 65"W x 19"D


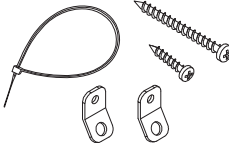
## REQUIRED TOOLS:

- Phillips Screwdriver
- Two person assembly required.





**ASSEMBLY TIME:** 5 -10 minutes

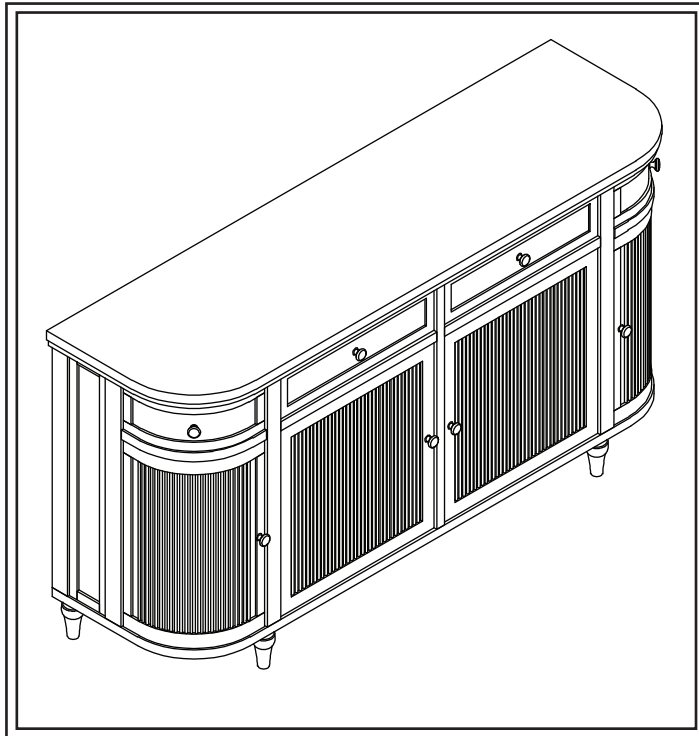**ASSEMBLED WEIGHT:** 237 lbs.



Ltr.	Qty.	Hardware Included	
A	8		<b>Shelf Supports</b> (30mm x 13mm x 16mm)
B	2		<b>Wall Anchoring (Anti-tip) Kits</b> See Page 4

Hardware packet attached to Sideboard underside.

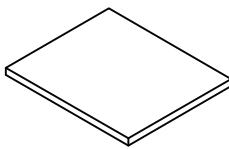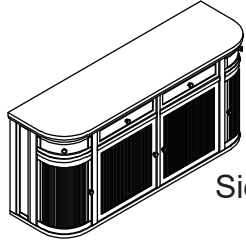Ltr.	Qty.	Components	
C	4		<b>Legs (C)</b>
D	1		<b>Center Leg (D)</b>
E	2		<b>Shelves (E)</b>
F	1		<b>Sideboard (F)</b>



Doors are factory leveled and aligned.  
However, if adjustments are required refer to PAGE 3  
for detailed instructions regarding door hinges.

## TO REMOVE DRAWERS

Fully extend drawer. Metal glides on bottom.  
Push in white tabs. Pull drawer out.




## Cleaning and Care

Periodically dust surface once or twice a week with a soft cloth.  
Gently wash surface with mild soap, microfiber cloth or soft towel.  
Do not use harsh chemicals, abrasives or polishers.


 Assemble in location for intended use.

**ASSEMBLY:** Place Sideboard (F) upside down onto a padded, level surface.  
Complete STEP 1. Turn upright and complete STEP 2.

- 1** Insert, turn and tighten each Leg (C) into place as illustrated. Insert, turn and tighten Center Leg (D) as illustrated.

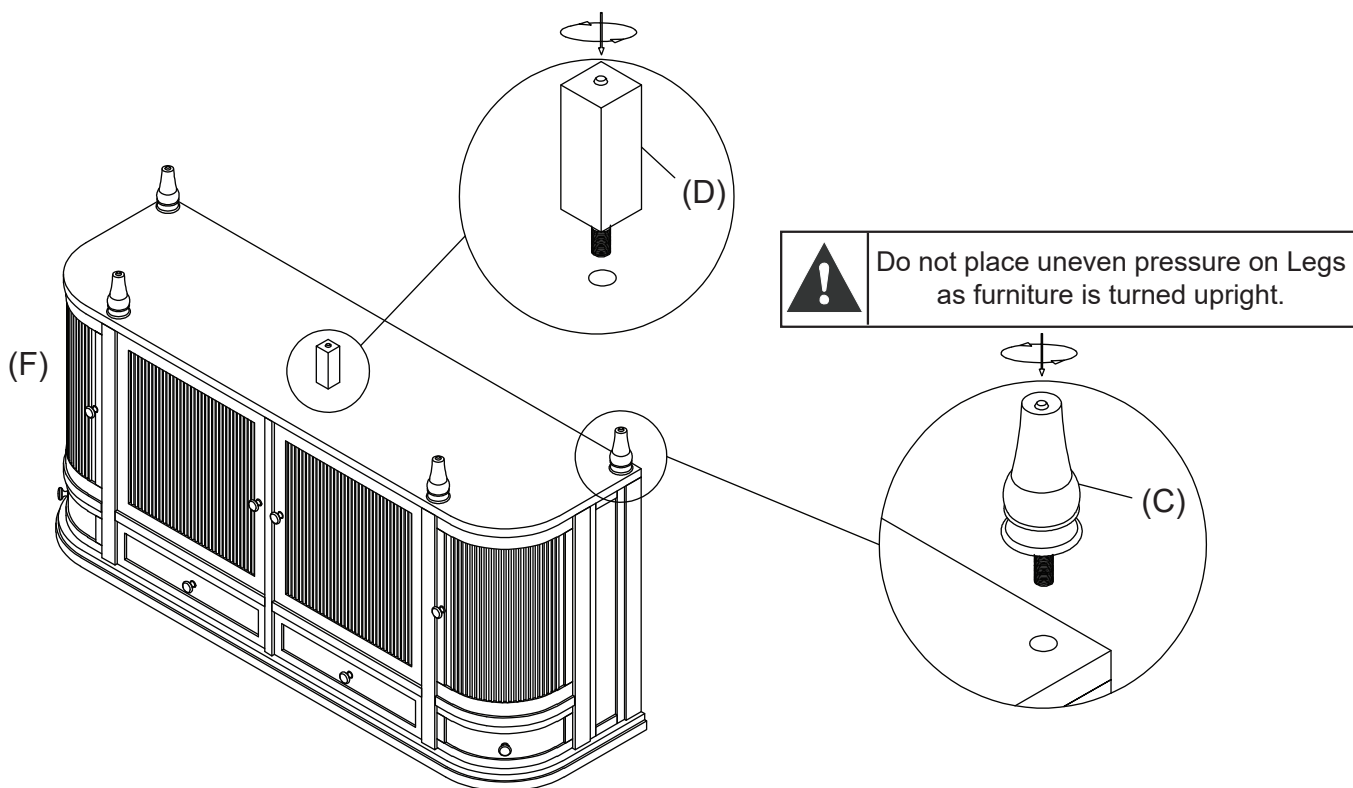

- 2** **SHELVES:** Insert Shelf Supports (A) into pre-drilled holes. Set Shelf (E) level upon Supports. **LEVELERS:** See inset below. **NOTE:** Level before anchoring Sideboard to wall.

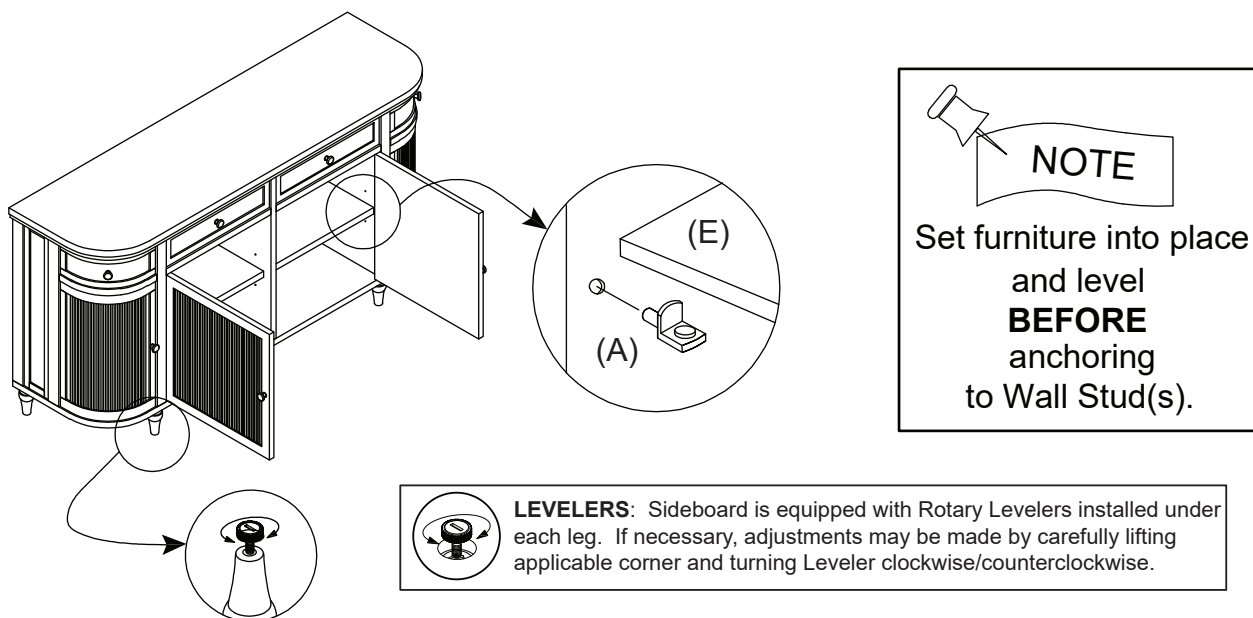



Customer Service: 800-367-2810  
Online: [www.ballarddesigns.com](http://www.ballarddesigns.com)



Retain this page for future reference.



# Adjusting Door Alignment

Doors should arrive level and aligned, however, if adjustment is necessary follow these instructions to correct any issues.

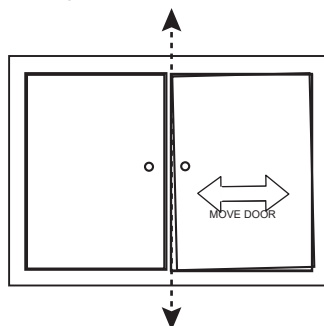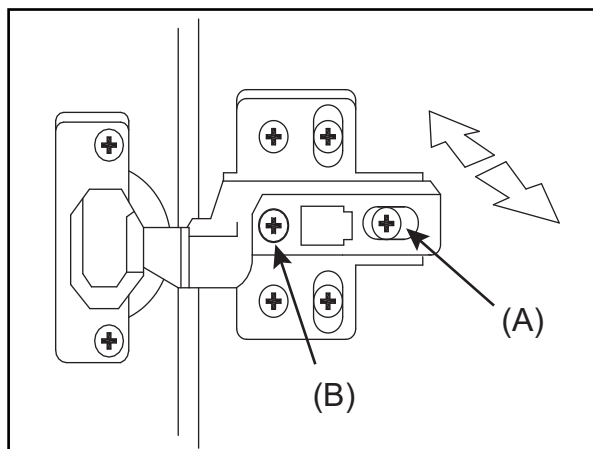



## To Correct Vertical Alignment:

Loosen Screw (A) then turn Screw (B) clockwise/counterclockwise to adjust door. When alignment is achieved, retighten Screw (A).

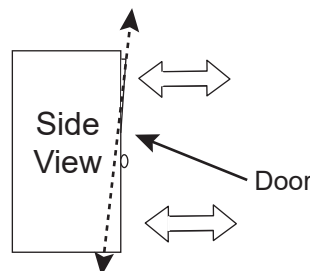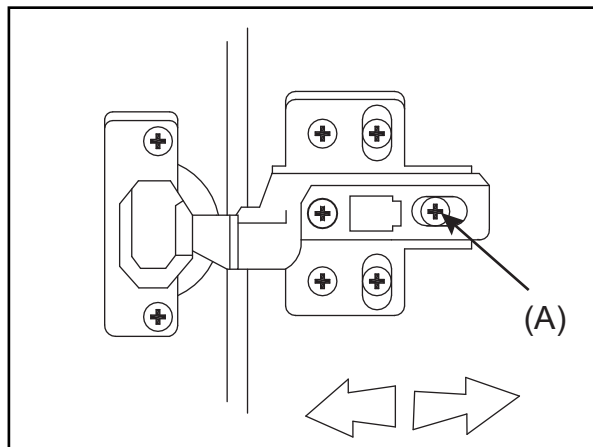

## To Correct Flush Alignment:

Loosen Screw (A) adjust door front to back as needed. When alignment is achieved, retighten Screw (A).

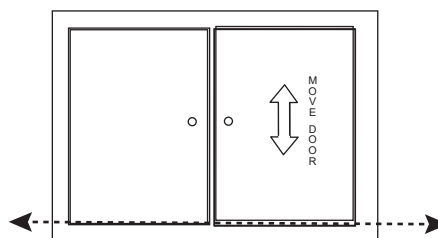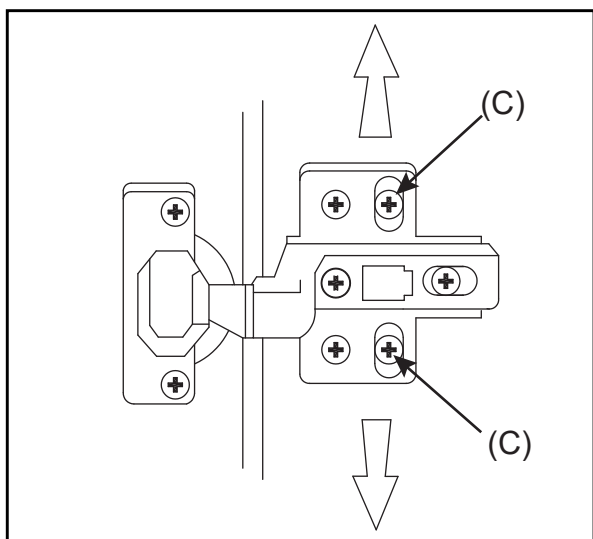

## To Correct Horizontal Alignment:

Loosen both Screws (C) adjust door up or down as needed. When alignment is achieved, retighten both Screws (C).







Customer Service: 800-367-2810  
Online: [www.ballarddesigns.com](http://www.ballarddesigns.com)



Retain this page for future reference.

## WALL ANCHORING HARDWARE (ANTI-TIP)

Ltr.	Qty.	Hardware Included	
A	2		Large Screw
B	2		Small Screw
C	4		Bracket
D	2		Retention Belt



### Installation:

1. Place furniture against wall at desired location then locate and mark a Wall Stud behind unit.
2. Corresponding to Stud location, attach one Bracket (C) to back of unit using Small Screw (B).
3. To keep hardware out of view after installation, attach remaining Bracket (C) **INTO WALL STUD** with Large Screw (A) 2 inches below Bracket attached to back of unit.
4. Move unit into place, align Brackets then connect both using Retention Belt (D).
5. Confirm Belt is securely laced and locked.

