



PRODUCT NAME: Burton Sideboard

ITEM NUMBER: SF108

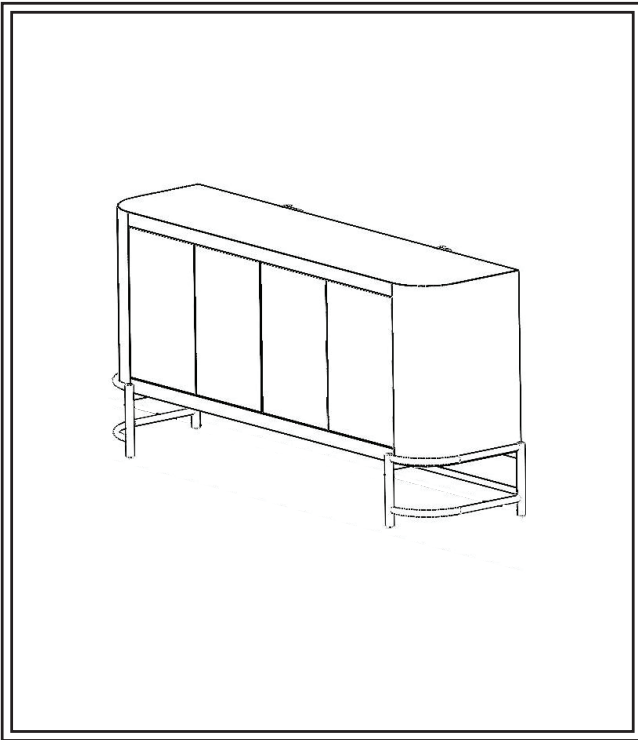
ASSEMBLED DIMENSIONS: 34"H X 70 1/8"W X 18 1/4"D



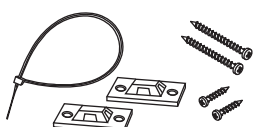


REQUIRED TOOLS:

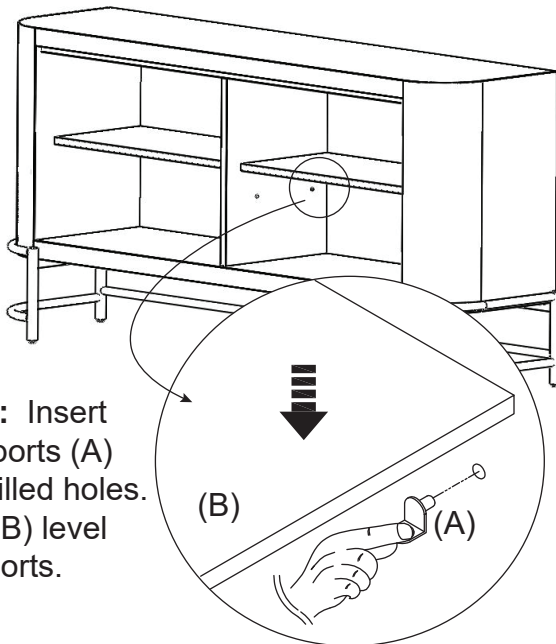
Phillips Screwdriver

ASSEMBLY TIME: 5 - 10 minutes



Ltr.	Qty.	Hardware/Components Included	
A	8		Shelf Supports
B	2		Shelves 3/4"H x 27 1/2"W x 13"D
C	2		Wall Anchoring (Anti-tip) Kit See page 2

1



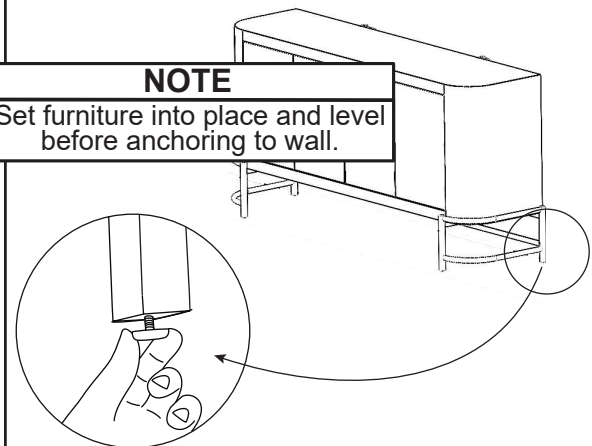
SHELVES: Insert Shelf Supports (A) into pre-drilled holes. Set Shelf (B) level upon supports.

2





LEVELERS: Equipped with Rotary Levelers installed under each corner/leg. If necessary, adjustments may be made by carefully lifting applicable corner and turning Leveler clockwise/counterclockwise.

NOTE

Set furniture into place and level before anchoring to wall.



WALL ANCHORING HARDWARE (ANTI-TIP)

Ltr.	Qty.	Hardware Included	
A	4		Small Screw
B	4		Large Screw
C	4		Bracket
D	2		Retention Belt



WARNING

Tip-Over Hazard

Serious or fatal crushing injuries can occur from a furniture tip-over
Prevent tipping accidents. Anchor your furniture.

1. Place furniture against wall at desired location then locate and mark a Wall Stud behind unit.
2. Corresponding to Stud location, attach one Bracket (C) to back of unit using Small Screws (A).
3. To keep hardware out of view after installation, attach remaining Bracket (C) **INTO WALL STUD** with Large Screws (B) 2 inches below Bracket attached to back of unit.
4. Move unit into place, align Brackets then connect both using Retention Belt (D).
5. Confirm Belt is securely laced and locked.

