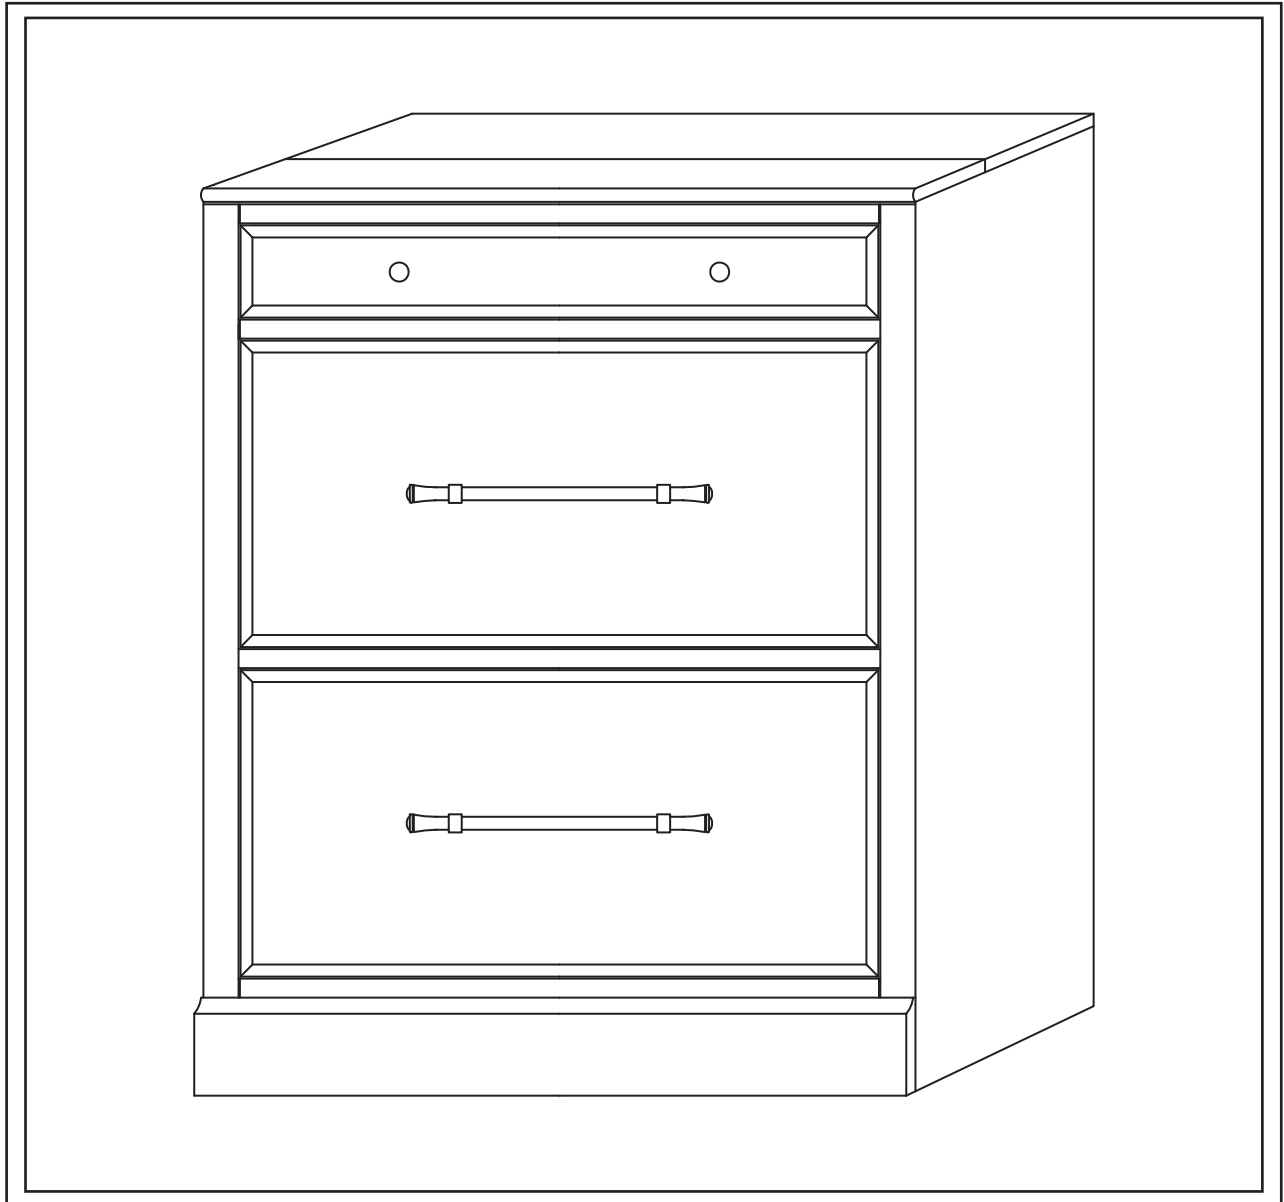


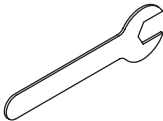

PRODUCT NAME: Paulette Console

ITEM NUMBER: SK015

DIMENSIONS OF ITEM ASSEMBLED: 35 3/4"H X 28"W X 18"D



⚠ Assemble in location for intended use.

| Ltr. | Qty. | Hardware Included |
|------|------|---|
| A | 1 |  Wrench |
| B | 2 |  Wall Anchoring (Anti-tip) Kits See page 3 |

REQUIRED TOOLS:

Wrench (included), Phillips Screwdriver
-Two person assembly suggested.

Remove all parts, hardware and protective packaging from carton and carefully arrange on a clean, level, padded surface.

NOTE: To avoid accidentally discarding small parts or hardware, retain all carton contents until assembly and installation are complete.

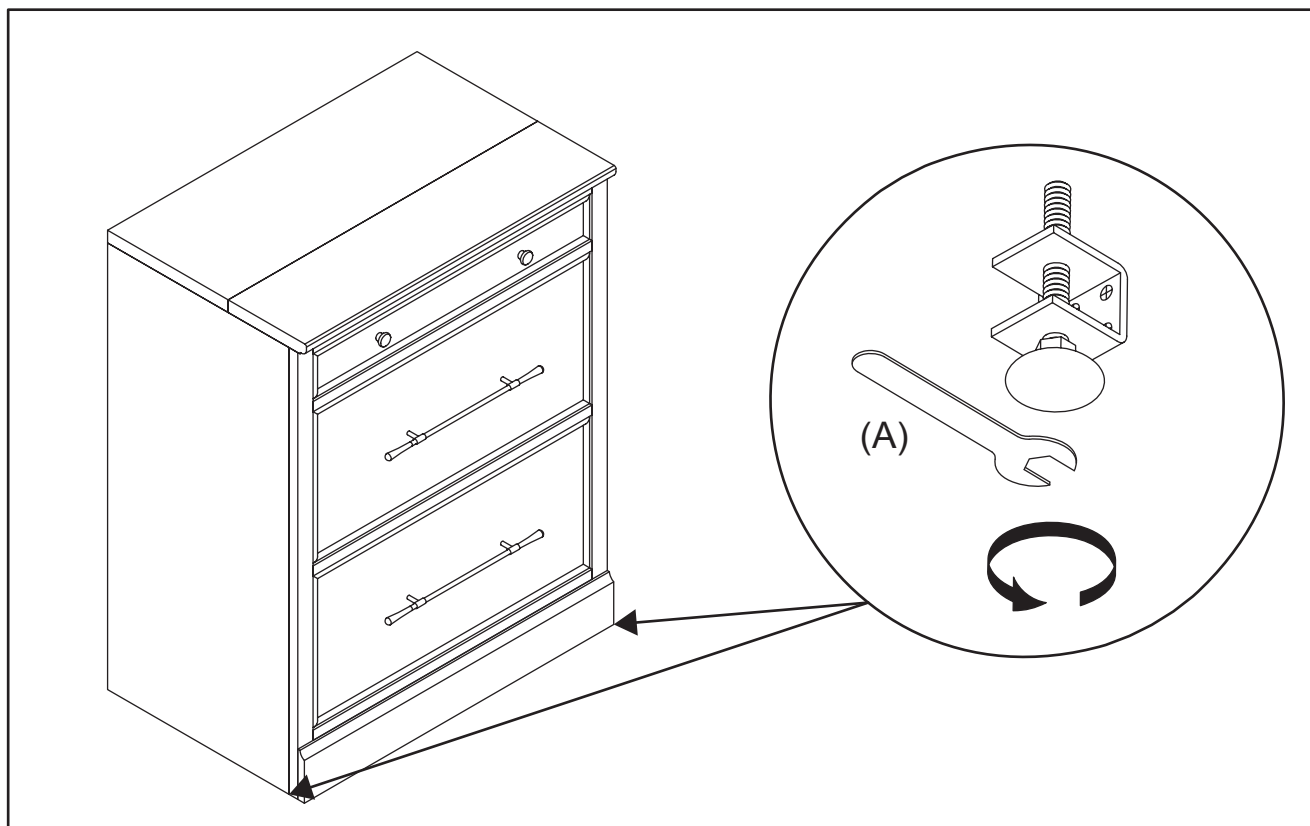
WARNING

Tip-Over Hazard





Prevent tipping accidents. Anchor your furniture.

ANCHORING HARDWARE INCLUDED

STEP 1: Console is equipped with Rotary Levelers under each corner. If drawers are misaligned or Console uneven, carefully tip up corner and use Wrench (A) to turn Leveler clockwise/ counterclockwise to adjust.



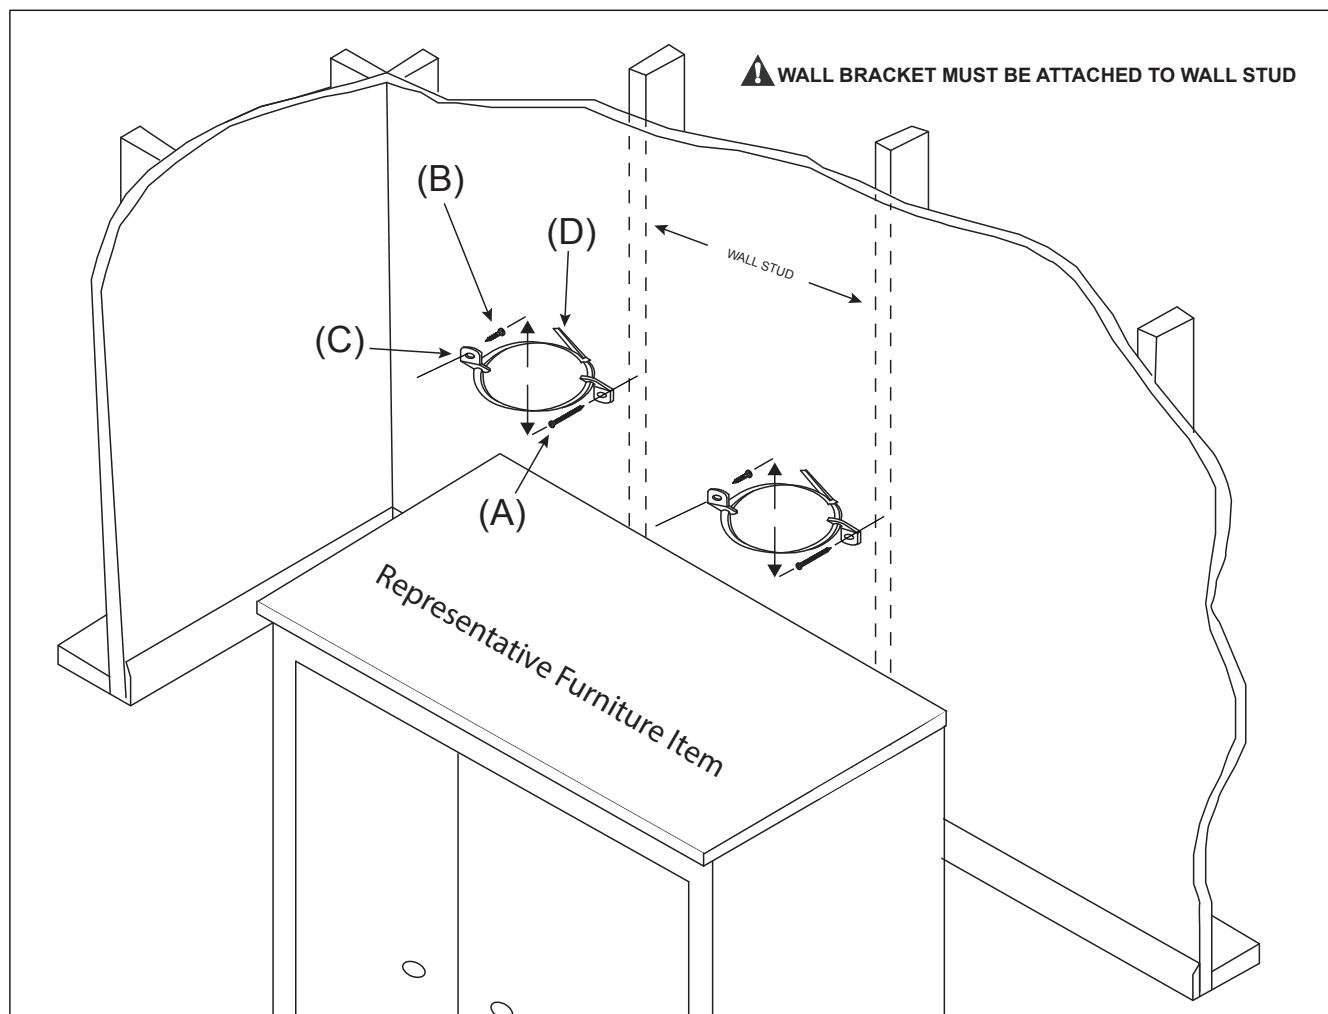
WALL ANCHORING HARDWARE (ANTI-TIP)

| Ltr. | Qty. | Hardware Included | |
|------|------|---|----------------|
| A | 2 |  | Large Screw |
| B | 2 |  | Small Screw |
| C | 4 |  | Bracket |
| D | 2 |  | Retention Belt |



Installation:

1. Place furniture against wall at desired location then locate and mark a Wall Stud behind unit.
2. Corresponding to Stud location, attach one Bracket (C) to back of unit using Small Screw (B).
3. To keep hardware out of view after installation, attach remaining Bracket (C) **INTO WALL STUD** with Large Screw (A) 2 inches below Bracket attached to back of unit.
4. Move unit into place, align Brackets then connect both using Retention Belt (D).
5. Confirm Belt is securely laced and locked.



Cleaning & Care:

DO NOT use alcohol based products or spray polisher as they can damage the finish. Dust with soft cloth.