
BALLARD DESIGNS.

Customer Service: 800-367-2810 Online: www.ballarddesigns.com

PRODUCT NAME: Paulette Cabinet Base

ITEM NUMBER: SK032

DIMENSIONS OF ITEM ASSEMBLED: 35 3/4"H X 28"W X 18"D

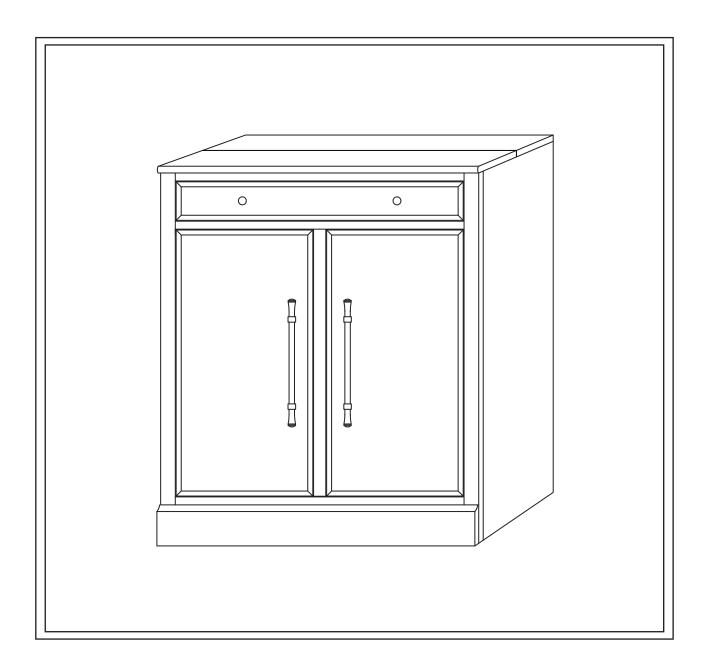

PRODUCTS ARE NOT INTENDED FOR COMMERCIAL USE. UPDATED: 3-3-2020

Assemble in location for intended use.

Ltr.	Qty.	Hardware Included		
А	8	Shelf Supports		
В	4	Wood Plugs		
С	2	Wall Anchoring (Anti-tip) Kits See page 4		

REQUIRED TOOLS:

- Phillips Screwdriver -Two person assembly suggested.

Remove all parts, hardware and protective packaging from carton and carefully arrange on a clean, level, padded surface.


NOTE: To avoid accidentally discarding small parts or hardware, retain all carton contents until assembly and installation are complete.

Ltr.	Qty.	Components		
D	2	Shelves (D)		

WARNING


Tip-Over Hazard
Prevent tipping accidents. Anchor your furniture.
ANCHORING HARDWARE INCLUDED

STEP 1: Determine location for each Shelf (D), insert Shelf Supports (A) into pre-drilled holes then carefully place Shelf upon Supports.

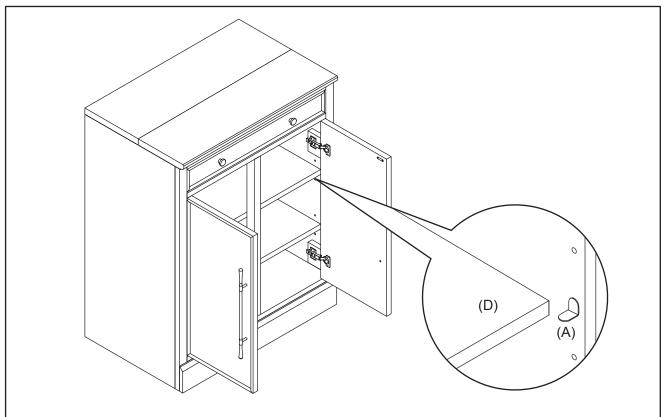

Customer Service: 800-367-2810 Online: www.ballarddesigns.com

STEP 2: Cabinet is equipped with Rotary Levelers under each corner. If Doors/Drawer are misaligned or Cabinet is uneven, open doors and insert a Flathead Screwdriver into access hole and turn Levelers clockwise/counterclockwise to adjust. Cover access holes with Wood Plugs (B).

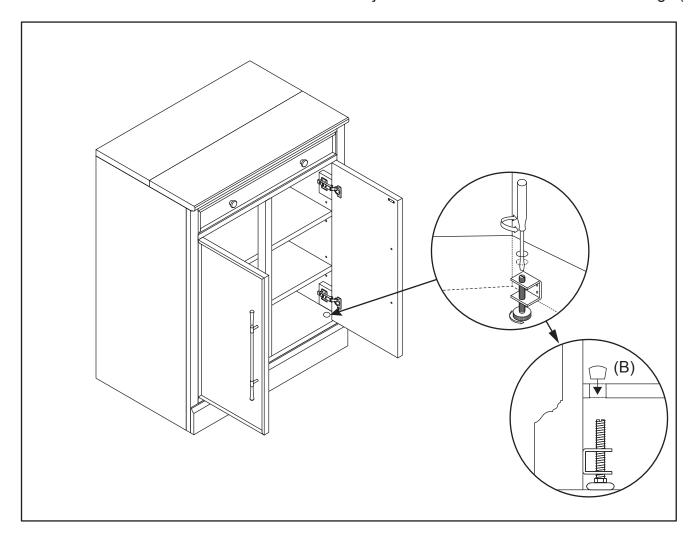

Customer Service: 800-367-2810 Online: www.ballarddesigns.com


WALL ANCHORING HARDWARE (ANTI-TIP)

Ltr.	Qty.	Hardware Included		
А	2	<11111111111111(%)	Large Screw	
В	2	<uut(%)< td=""><td>Small Screw</td></uut(%)<>	Small Screw	
С	4		Bracket	
D	2		Retention Belt	



Installation:

- 1. Place furniture against wall at desired location then locate and mark a Wall Stud behind unit.
- 2. Corresponding to Stud location, attach one Bracket (C) to back of unit using Small Screw (B).
- 3. To keep hardware out of view after installation, attach remaining Bracket (C) **INTO WALL STUD** with Large Screw (A) 2 inches below Bracket attached to back of unit.
- 4. Move unit into place, align Brackets then connect both using Retention Belt (D).
- 5. Confirm Belt is securely laced and locked.

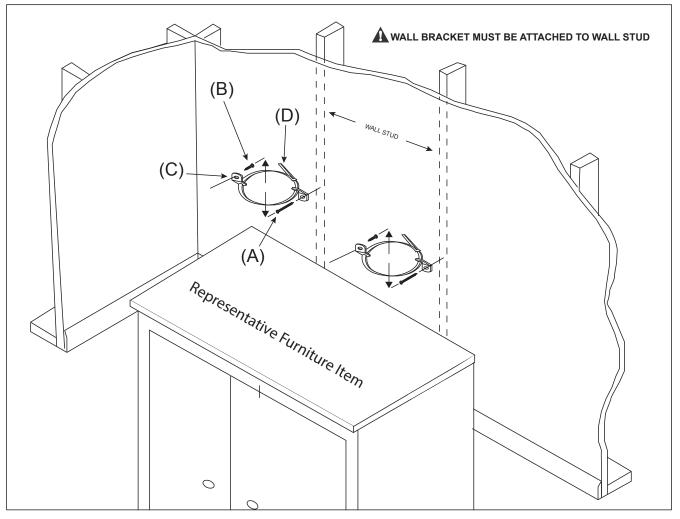

Cleaning & Care:

DO NOT use alcohol based products or spray polisher as they can damage the finish. Dust with soft cloth.