BALLARD DESIGNS.

Customer Service: 800-367-2810 Online: www.ballarddesigns.com

PRODUCT NAME: Ceylon Sofa

ITEM NUMBER: SO623

DIMENSIONS OF ITEM ASSEMBLED: 34 1/4"H x 79 1/5"W X 30"D




Ltr.	Qty.	Hardware Included	
А	4		50mm Allen Screws
В	6		60mm Allen Screws
С	6		90mm Allen Screws
D	6		70mm Allen Screws
Е	12		Screw Plugs
F	1		Allen Wrench

TOOLS NEEDED: 2 Person assembly Required.


Ltr.	Qty.	Components
G	1	Seat
Н	2	Legs (Control of the control of the
I	2	Wood Bolts
J	1	Right Leg Left Leg
K	1	Left Leg
L	1	Seat Back
M	3	Back Cushions
N	3	Seat Cushions

Customer Service: 800-367-2810 Online: www.ballarddesigns.com


STEP 1: Attach the Legs (H) to the Seat (G) using the Allen Wrench (F) and 4 50mm Allen Screws (A).

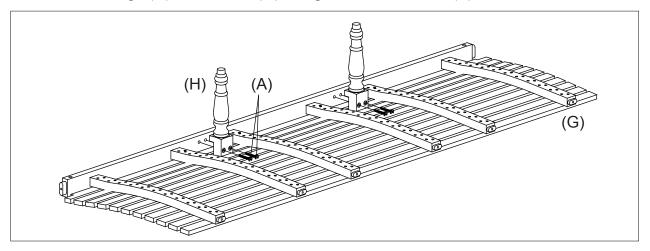

STEP 2: Attach the Wood Bolts (I) to the Legs (H) and Seat (G) using the Allen Wrench and 6 60mm Allen Screws (B).

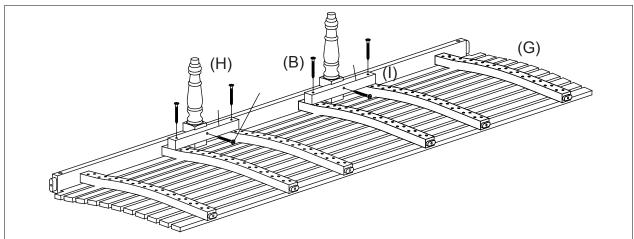


STEP 3: Attach the Left Leg (J) and Right Leg (K) to the Seat (G) using the Allen Wrench (F) and 2 90mm Allen Screws (C).

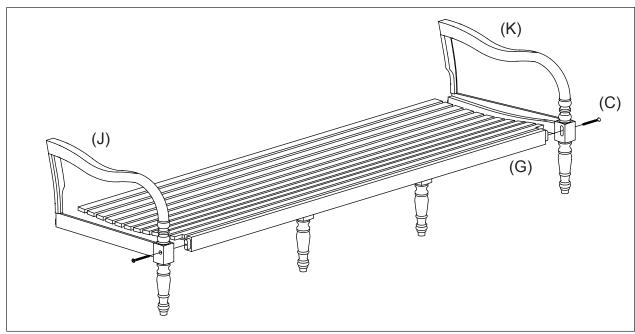


Customer Service: 800-367-2810 Online: www.ballarddesigns.com

STEP 4: Use 4 90mm Allen Screws (C) and the Allen Wrench (F) to attach the Seat Back (L) to the Left (J) and Right (K) Leg. Then use 6 70mm Allen Screws (D) and the Allen Wrench (F) to attach the Seat Back (L) and Seat (G).

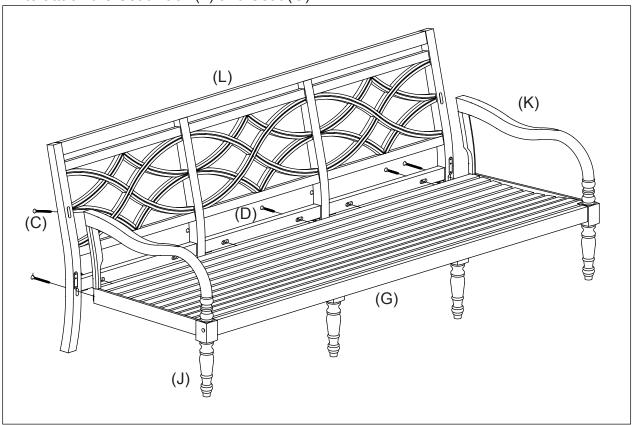


STEP 5: Insert the Screw Plugs (E) in the Screw Holes.

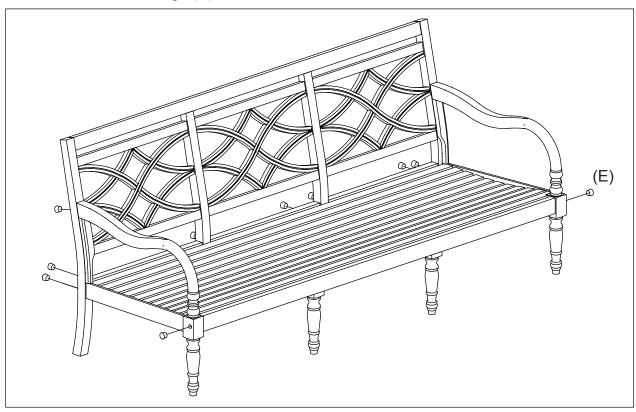

Customer Service: 800-367-2810 Online: www.ballarddesigns.com

STEP 6: Put the Seat Cushions (N) on the Seat (G) and then put the Back Cushions (M) on.

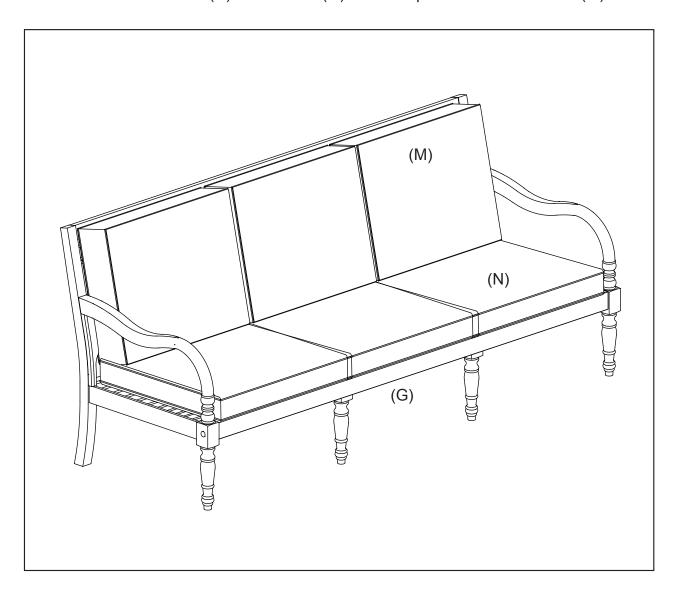

Clean & Care
Please refer to the care instructions on the hang tag.

Customer Service: 800-367-2810 Online: www.ballarddesigns.com