



PRODUCT NAME: Camden Daybed with & without Trundle

ITEM NUMBER: UM013; UM014



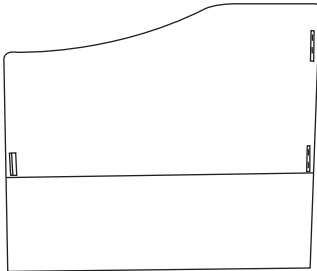
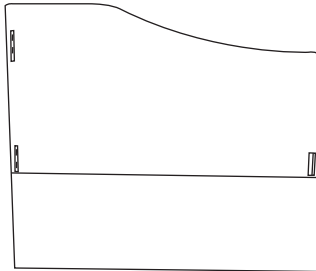
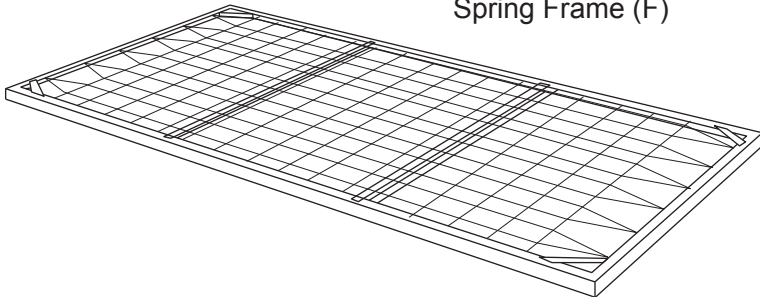
DIMENSIONS OF ITEM ASSEMBLED: 47 1/2"H x 79 1/4"W X 41 3/4"D

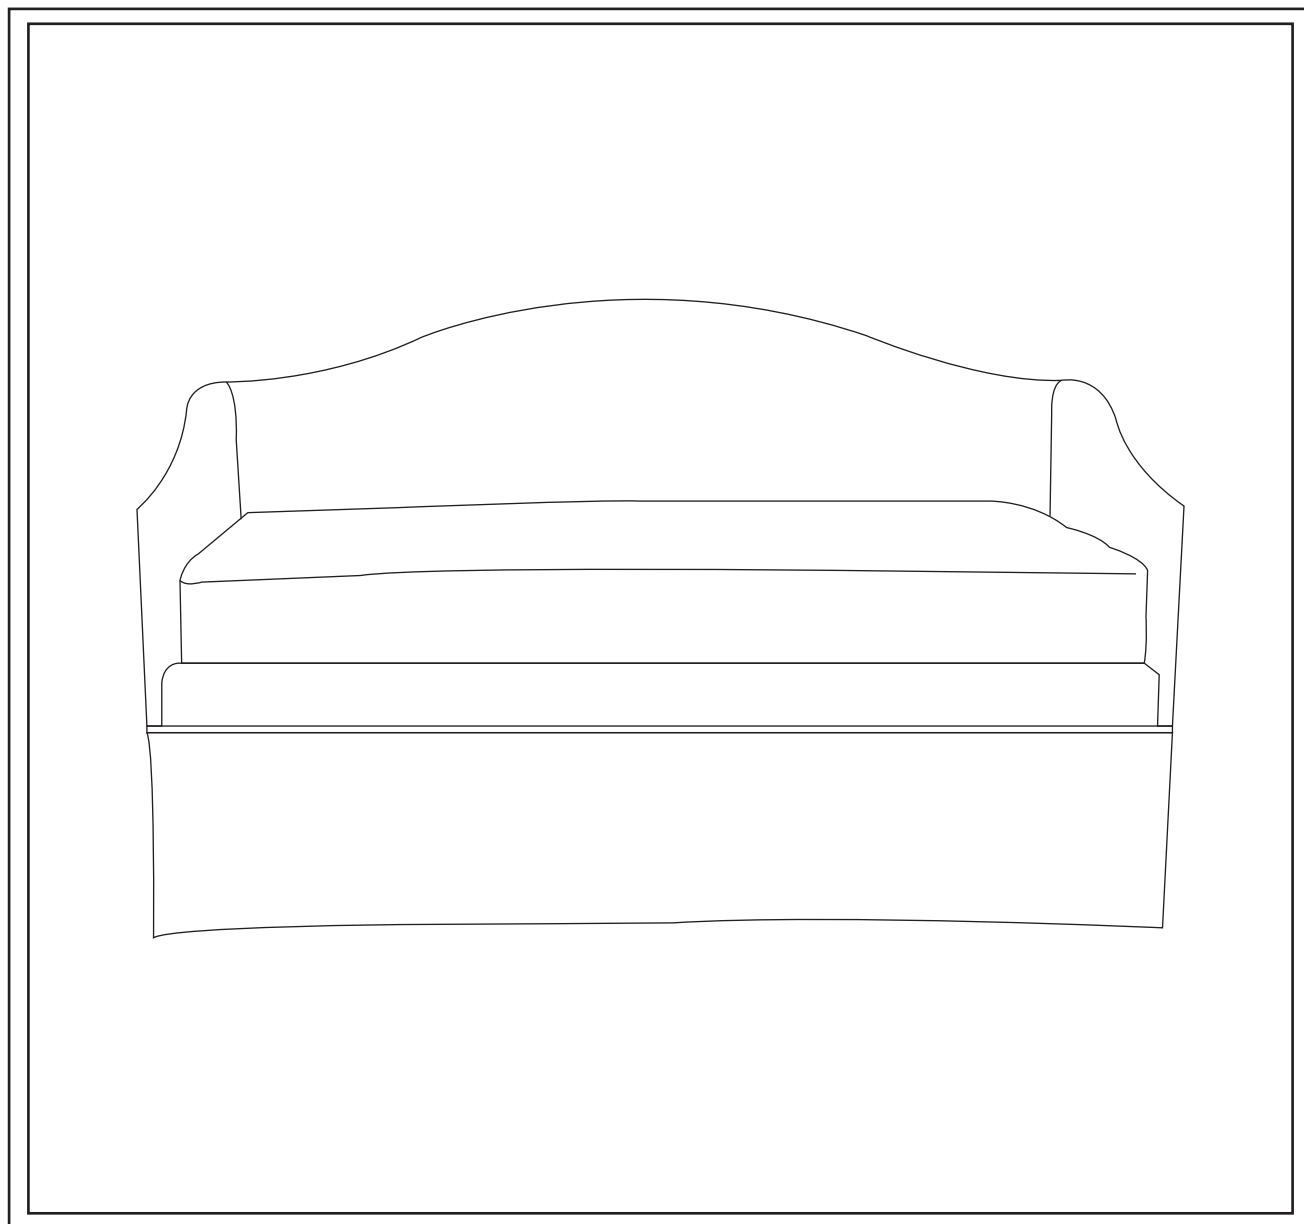

NOTE: It is best to put this bed together in the space where you will use it.



Ltr.	Qty.	Hardware Included	
A	4		Screws

TOOLS NEEDED:
-2 Person assembly.
-Screwdriver required.


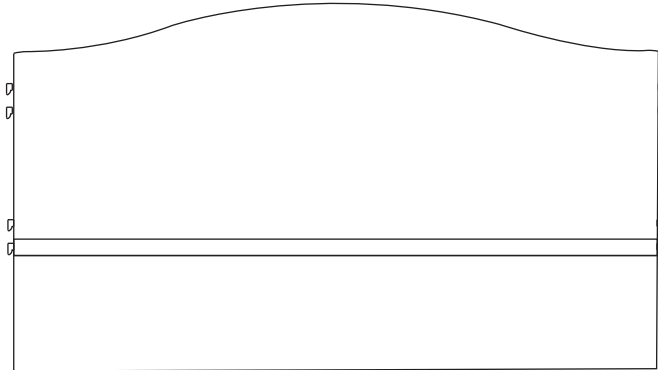
Ltr.	Qty.	Components	
B	1		
C	1		
D/E	2		
F	1		

NOTE: It is best to put this bed together in the space where you will use it.

STEP 1: Attach the Left Arm (D) and then the Right Arm (E) to the Back (B). Be sure the hook is fully engaged before continuing with the assembly.

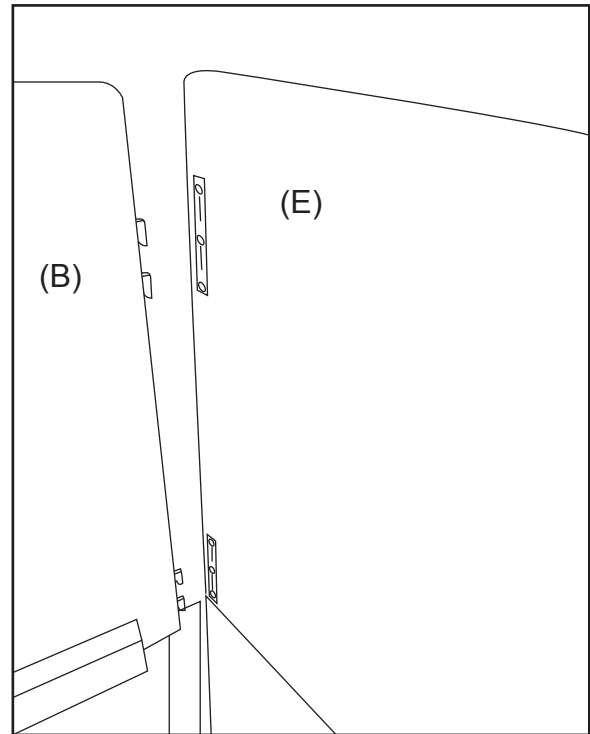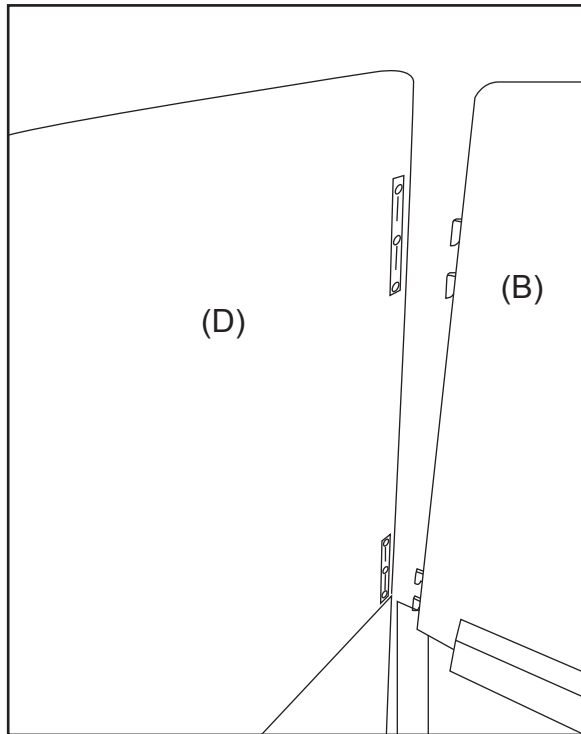


STEP 2: Attach the Front Rail (C) to the Left (D) and Right Arm (E). Push down on the Front Rail (C) to fully lock it into place. Then Velcro the front apron to the side arms.

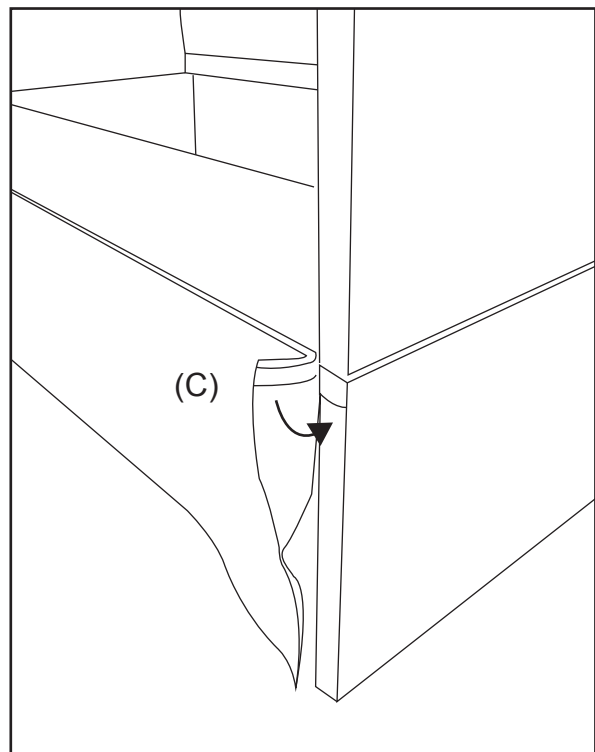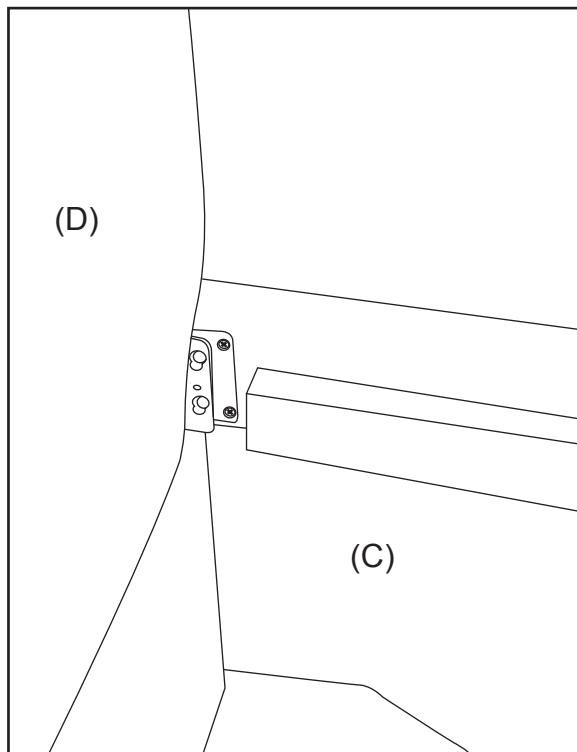

NOTE: It is best to put this bed together in the space where you will use it.

STEP 3: Place the Spring Frame (F) onto the ledges on inside of the Back (B) and Front Rail (C). Then using a screwdriver and the Screws (A), attach the Spring Frame (F) to the Back (B) and Front Rail (C) in all 4 corners.

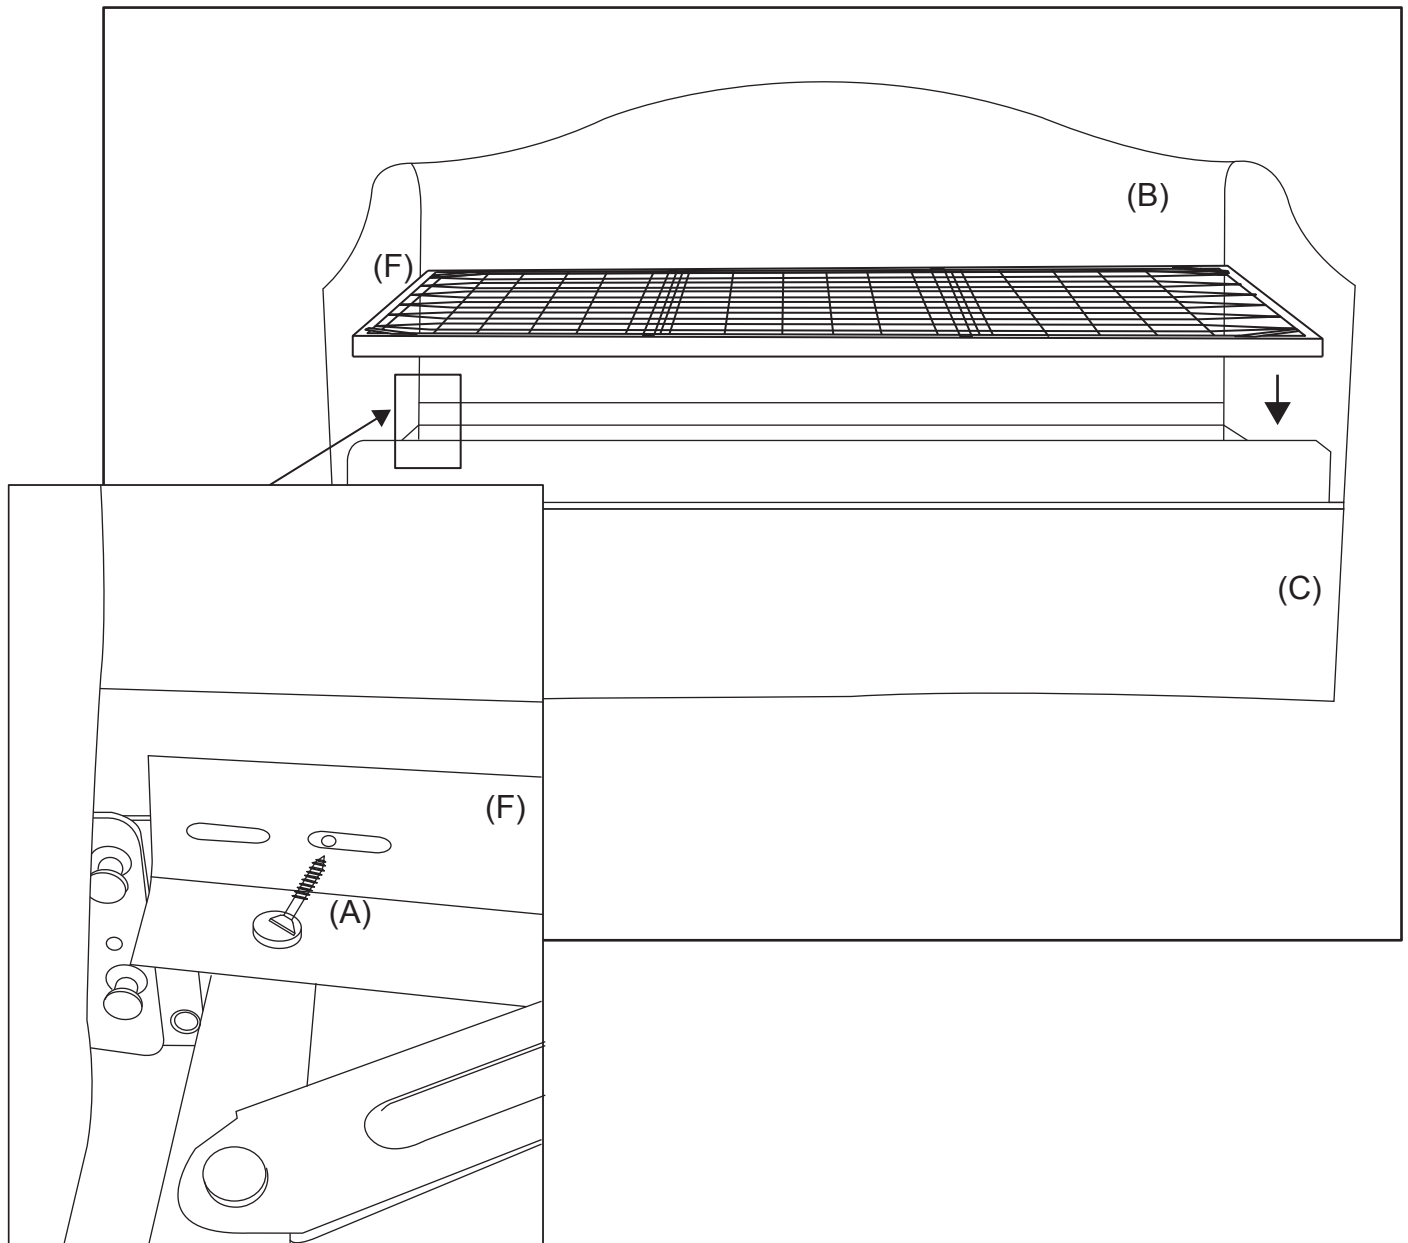

NOTE: The Trundle requires no assembly and simply slides underneath the bed.

CLEAN & CARE:

Spot cleaning is suggested. The method of cleaning is different based on what upholstery fabric is used.