


PRODUCT NAME: Gracie Mirror

ITEM NUMBER: WN202

ASSEMBLED DIMENSIONS : 60.7"H x 25.75"W x 1.42"D

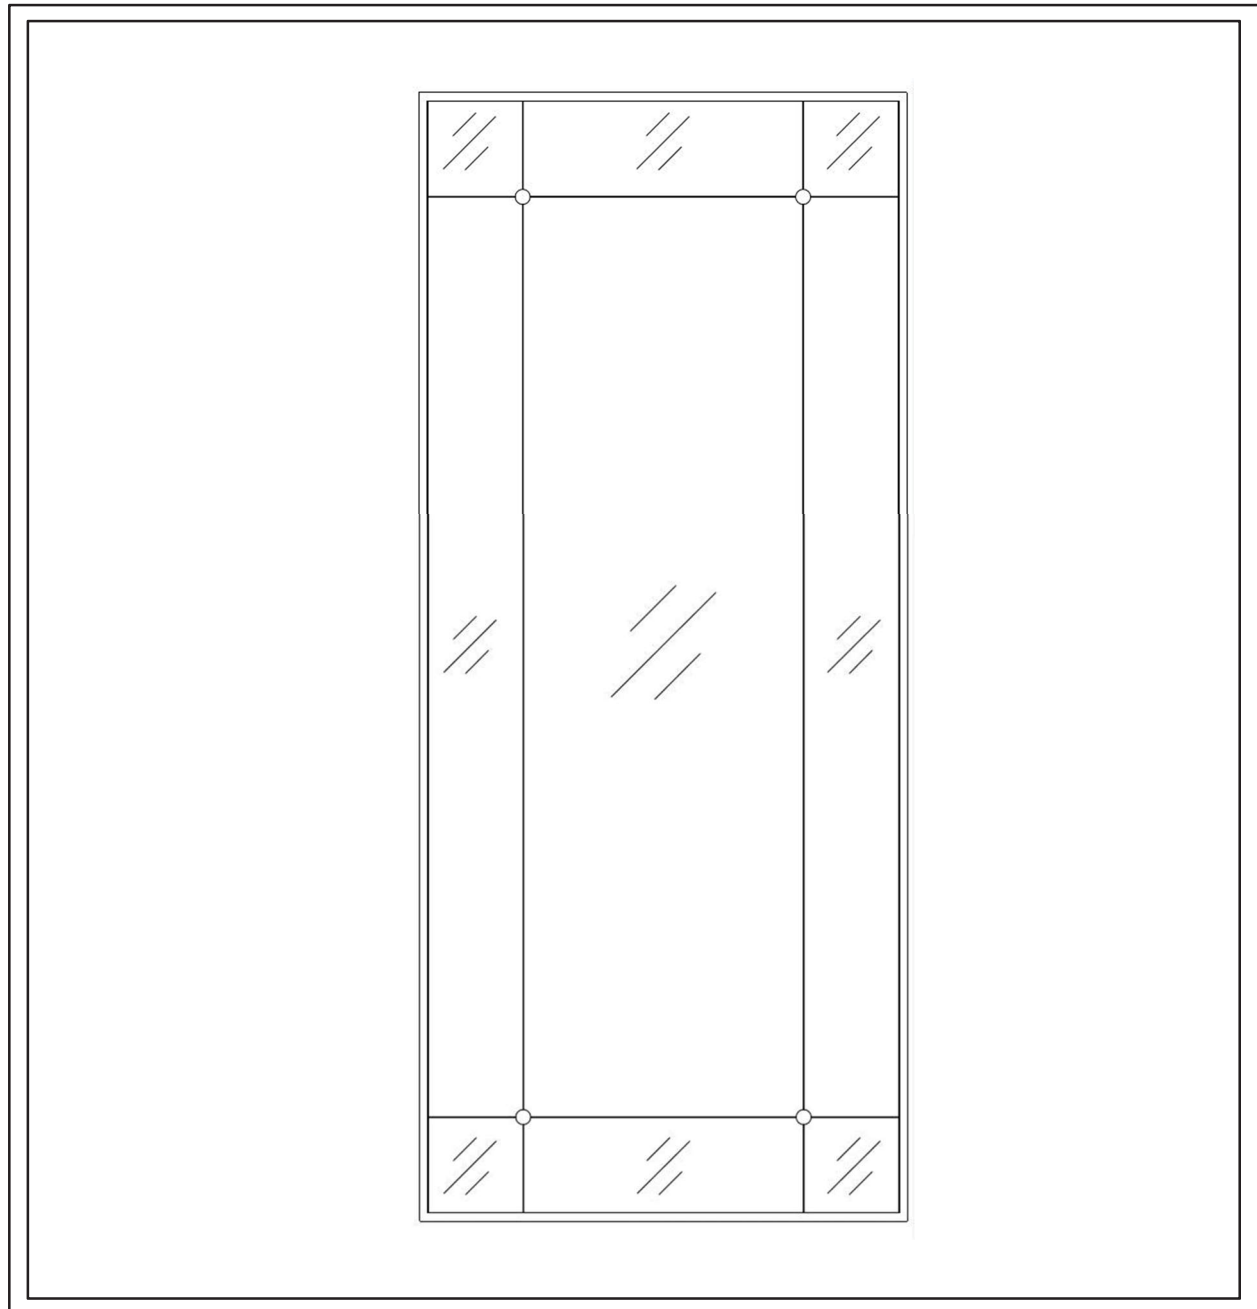


PRODUCTS ARE NOT INTENDED  
FOR COMMERCIAL USE.

UPDATED: 10/04/2019

MADE IN CHINA


Page 1 of 5
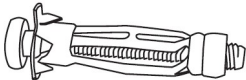
| Ltr. | Qty. | Hardware Included                                                                 |                                            |
|------|------|-----------------------------------------------------------------------------------|--------------------------------------------|
| A    | 2    |  | Wood Screws                                |
| B    | 2    |  | Expansion Bolt                             |
| C    | 2    |  | Wall Anchoring<br>Anti-Tip Kit<br>(PAGE 5) |

**TOOLS NEEDED:**  
 Phillips Screwdriver, Pencil, Hammer,  
 Drill with 3/8" bit  
 -Two person assembly suggested.

Remove all parts, hardware and  
 protective packaging from carton  
 and carefully arrange on a clean,  
 level, padded surface.

**NOTE:** To avoid accidentally  
 discarding small parts or hardware,  
 retain all carton contents until  
 assembly and installation are complete.

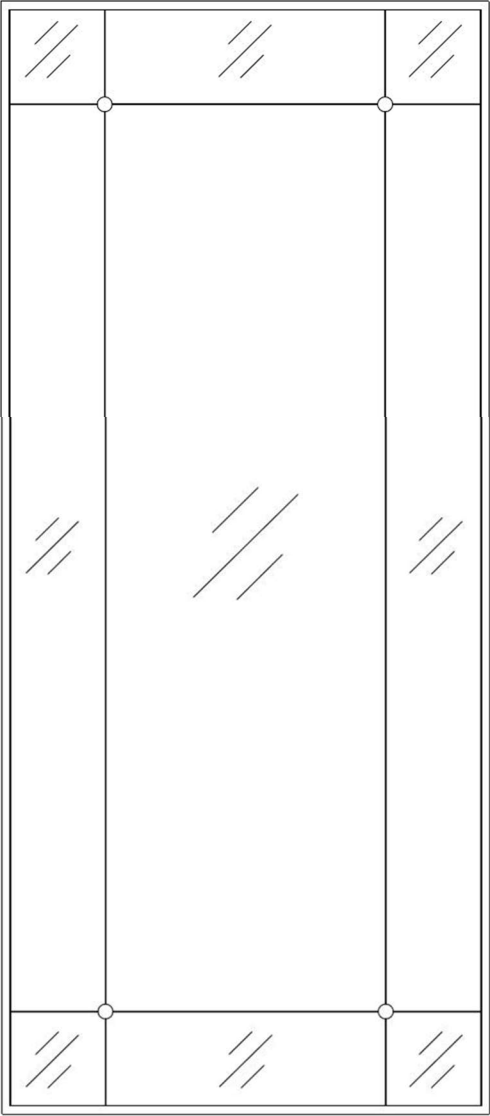
| Ltr. | Qty. | Components                                                                          |        |
|------|------|-------------------------------------------------------------------------------------|--------|
| D    | 1    |  | Mirror |

NOTE: This Mirror is designed for either hanging on or leaning against a wall.

## WALL HANGING INSTALLATION


STEP 1: When determining location for Mirror (D) **AT LEAST ONE KEYHOLE BRACKET MUST BE POSTIONED OVER A WALL STUD**. Use pencil to mark location of Keyhole Brackets on back of Mirror.

NOTE: For location **not** over a wall stud, use Expansion Bolt (B) installation covered in Steps 2 and 3.

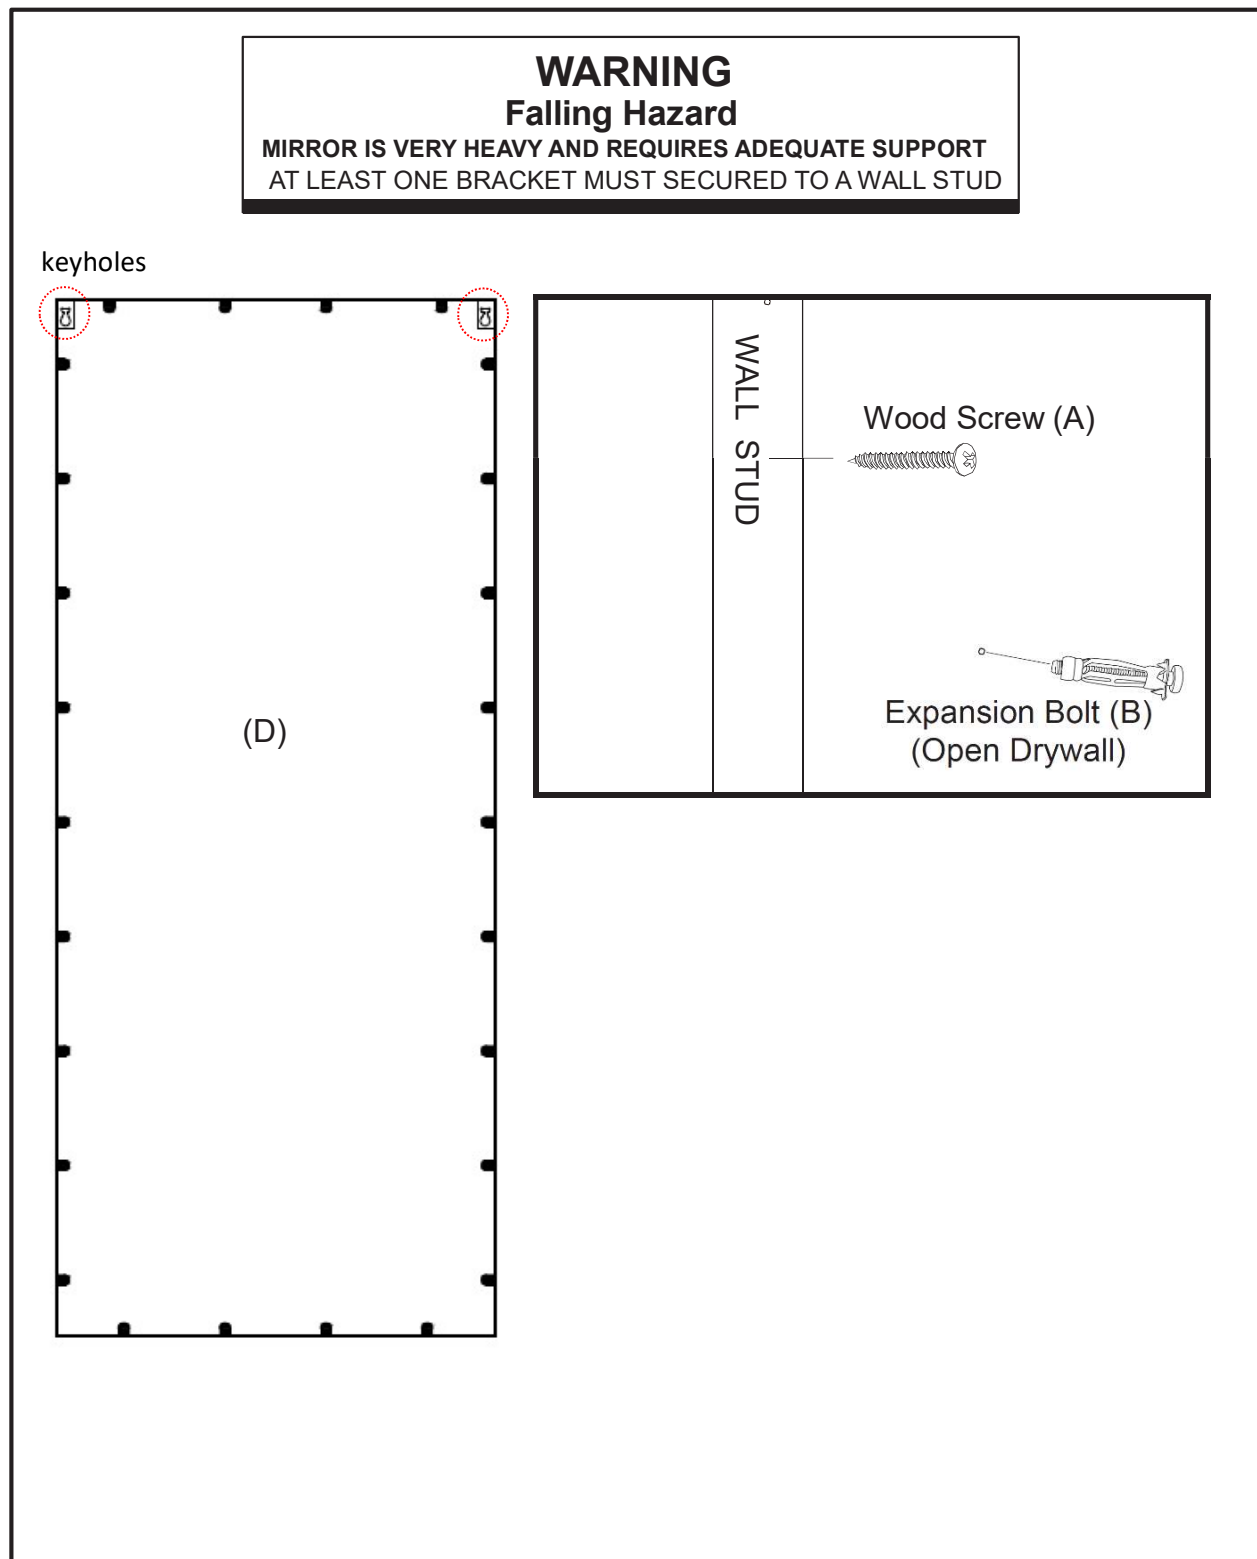


EXPANSION BOLT (For use in open drywall where no wall stud is present)

STEP 2: If mark falls in area in with no wall stud, use Drill with 3/8" bit to create a hole through drywall. Use hammer to lightly tap Expansion Bolt (B) into hole until teeth sink into wall surface.


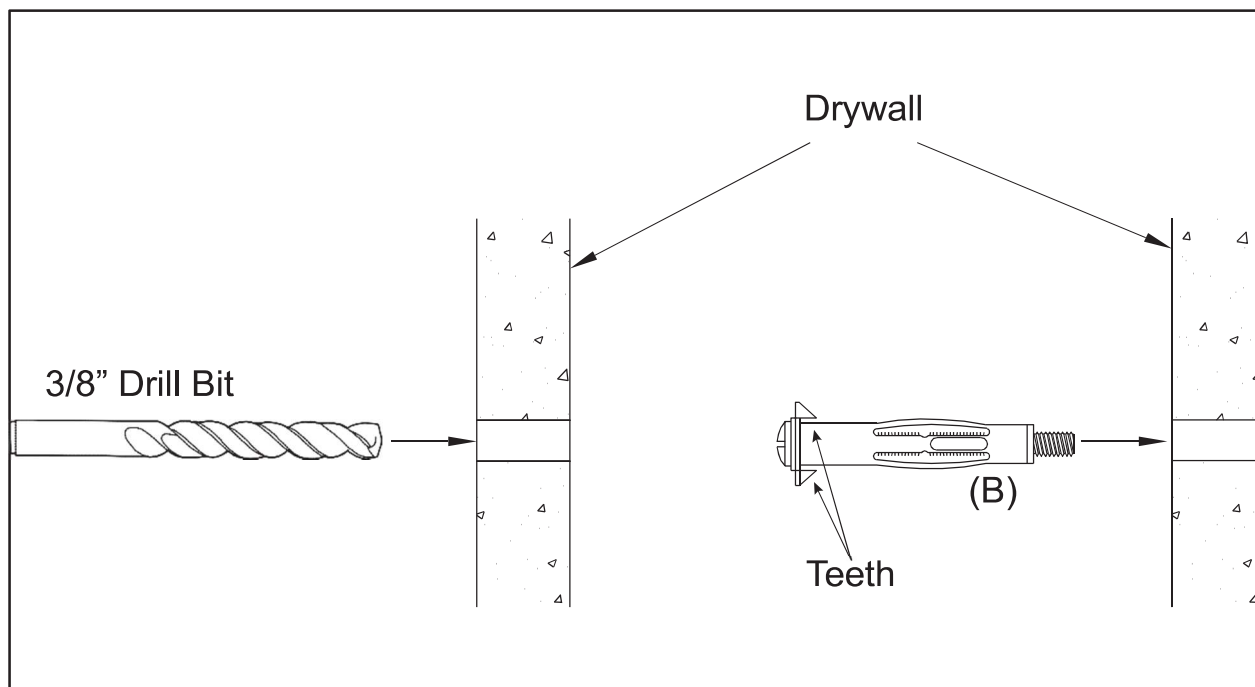


STEP 2: Using a screwdriver, firmly press down and turn Bolt clockwise until it starts to slip which indicates barrel has crimped against inside of wall. Back Bolt out just enough to permit Keyhole bracket to slip over and mirror to be hung.

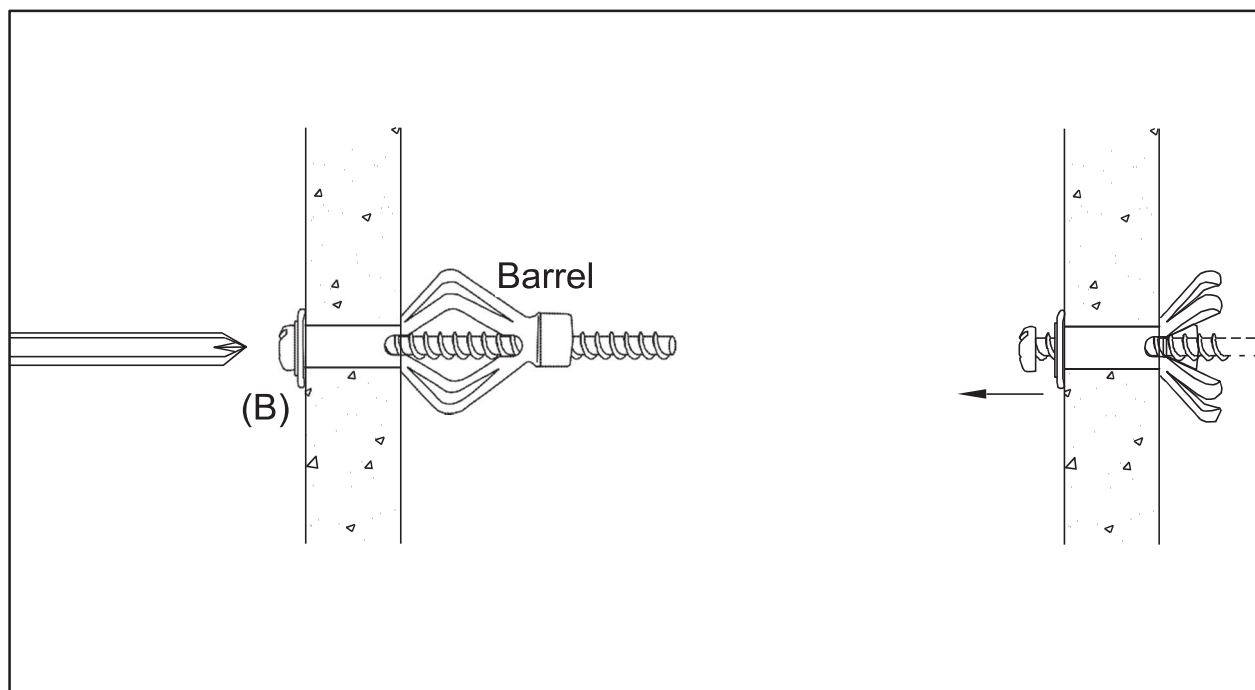

NOTE: WHEN LEANING MIRROR AGAINST WALL IT MUST BE ACHORED  
TO A WALL STUD AND IN NO WAY SUSPENDED.

ANTI-TIP / WALL ANCHORING HARDWARE INSTALLATION:
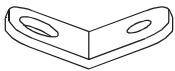
| Ltr. | Qty. | Hardware Included                                                                 |                |
|------|------|-----------------------------------------------------------------------------------|----------------|
| A    | 2    |  | Screw          |
| B    | 2    |  | Bracket        |
| C    | 2    |  | Retention Belt |


1. Locate and mark a Wall Stud behind mirror at location for installation.
2. Wall Stud must line up with at least one Keyhole Bracket on back of mirror.
3. Using screwdriver, attach Bracket (B) by driving Screw (A) through hole an into WALL STUD.
4. Move mirror into place, align Brackets then connect both using Retention Belt (C).
5. Confirm Belt is securely laced and locked.

**WARNING**

**Tip-Over Hazard**

**WALL BRACKET MUST BE ATTACHED TO WALL STUD**

Prevent tipping accidents. Anchor your mirror.

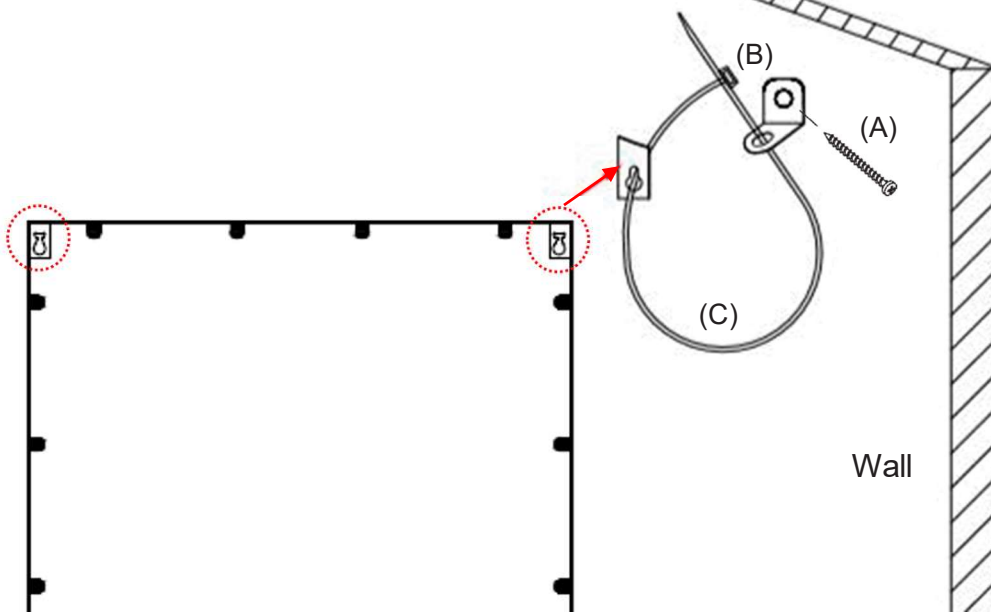

**Cleaning & Care:**

DO NOT use alcohol based products or spray polisher as finish damage may result.  
Dust with a soft cloth.