



PRODUCT NAME: Vigneto Shelf
ITEM NUMBER: WS870
ASSEMBLED DIMENSIONS: 9 1/2"H x 30"W x 11"D

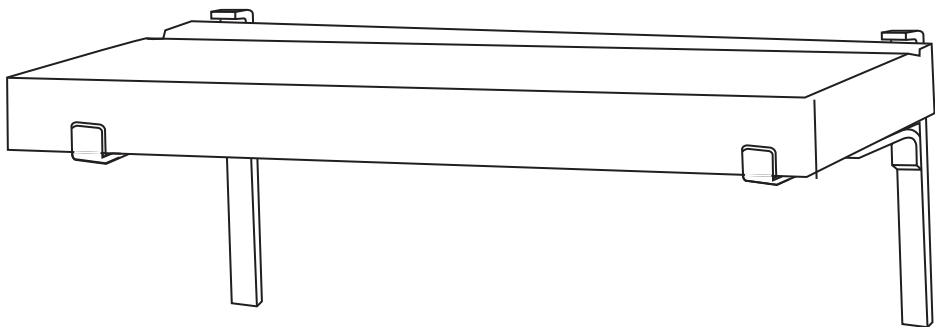






Plate Shelf Illustrated
Assembly and Installation identical for all Vigneto versions (Plate, Wine Glass, Wine Bottle)





Prevent accidentally discarding small parts or hardware. Retain all carton contents until assembly and installation are complete.

Ltr.	Qty.	Hardware Included	
A	4		Anchors
B	4		2" Wall Screws
C	2		1" Bracket Screws
D	2		3/4" Bracket Screws

REQUIRED TOOLS:
Philips Screwdriver, Small Hammer,
Level, Hole Punch/Drill

ASSEMBLY TIME:
10-15 minutes

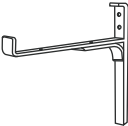
Ltr.	Qty.	Components	
E	2		Bracket (E)
F	1	 Plate Shelf Illustrated Assembly same for Wine Glass and Wine Bottle	Shelf (F)

WOOD SCREWS

Wood Screws provide optimal support when driven directly into a Wall Stud. If installation point is over a Wall Stud, drive Wood Screw directly into Stud.



DO NOT USE WOOD SCREWS IN OPEN DRYWALL. SCREWS WILL PULL OUT OF WALL.

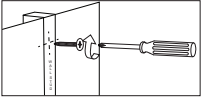

Cleaning and Care

Periodically dust with a soft, dry cloth.
Protect surfaces to prevent damage.
Do not use alcohol based cleaners or polishers.


Plate Shelf Illustrated

Assembly and Installation identical for all Vigneto versions (Plate, Wine Glass, Wine Bottle)


STEP 1: Position and level the Shelf (F) in desired location. Position the Brackets (E) to the Wall with the Shelf and mark the Bracket holes.

NOTE: We suggest the Brackets are screwed into Studs. You may move the Brackets to position them in front of Studs.


STEP 2: If Brackets (E) are in front of Studs, use the 2" Wall Screws (B) to screw into the Brackets and Studs. If the desired Bracket location is not in front of Studs, screw a pilot hole into Wall at marks, lightly tap Anchors (A) into the Wall and align the Bracket in front. Screw the 2" Wall Screws through Bracket and into Anchors.

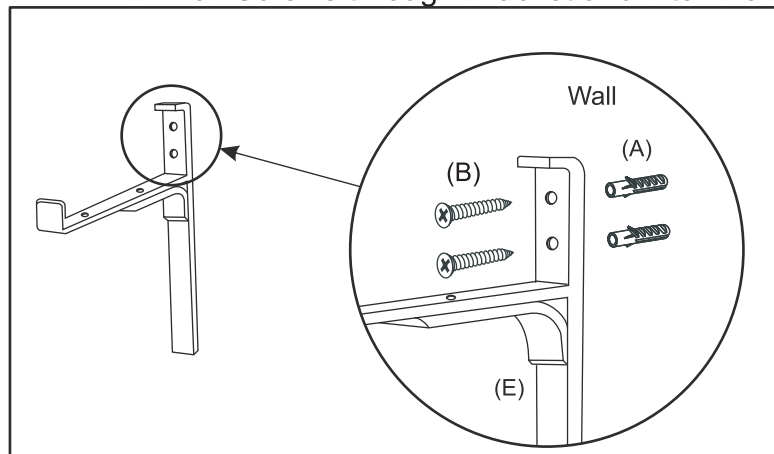


INSTALLING WALL ANCHORS

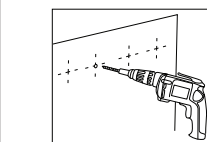

- 1 Mark location. Drill a **VERY SMALL** pilot hole. Pilot hole diameter **MUST** be smaller than Anchor. Note: Punch Tool may be used instead of Drill.

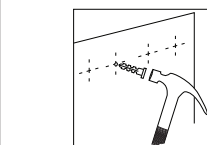


- 2 Gently tap Anchor into pilot hole.

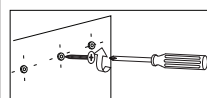

- 3 Add item/Align holes. Add/tighten screw.

STEP 3: Slide the Shelf (F) under the back lip of the Bracket (E) and lay the Shelf down on the Bracket.

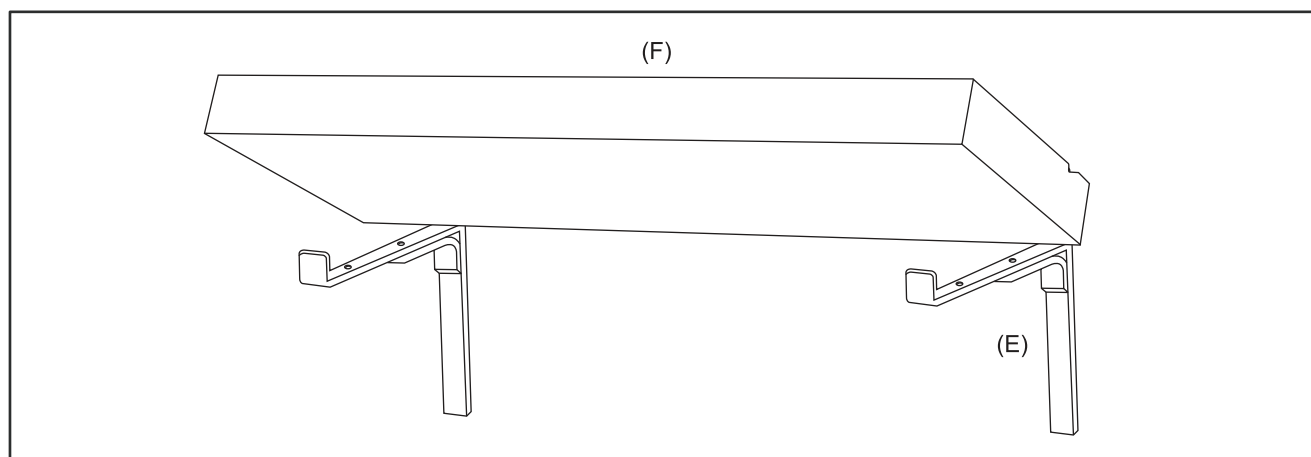

STEP 4: Center the Shelf on front of the Brackets (E). Attach the Shelf (F) and Bracket using the 3/4" Screw (D) in the Bracket front and the 1" Screw © at the back.

