
BALLARD DESIGNS.

Customer Service: 800-367-2810 Online: www.ballarddesigns.com

PRODUCT NAME: Storage Shelf w/Drawer 30"

ITEM NUMBER: WS959 WHT 30

ASSEMBLED DIMENSIONS: 3"H x 30"W x 7"D

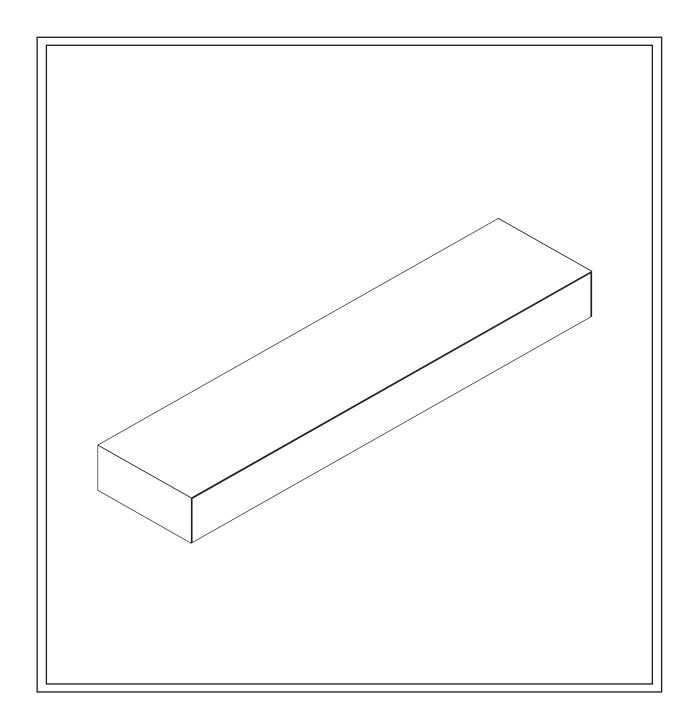

PRODUCTS ARE NOT INTENDED FOR COMMERCIAL USE. UPDATED: 1/29/2019


NOTE: To avoid accidentally discarding small parts or hardware, retain all carton contents until assembly and installation are complete.

Assemble Shelf near installation location.

Two Person Assembly Suggested

REQUIRED TOOLS:

Screwdriver, Pencil, Level and Power Drill

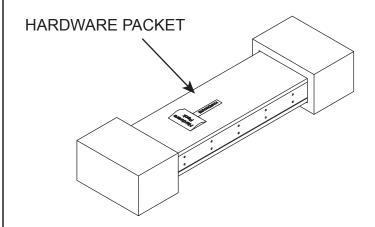


Ltr.	Qty.	Hardware Included		Ltr.	Qty.	Hardware Included	
Α	4	© AMMANANA O	Wood Screw	С	4	Anna (S)	Short Screw
В	2	100	Expansion Bolt				

Ltr.	Qty.	Components		
D	1	Shelf		
E	1	Bracket		


Customer Service: 800-367-2810 Online: www.ballarddesigns.com

STEP 1: Determine location for installation then use level to position Bracket (E) on wall. Mark screw hole locations with pencil. NOTE: For maximum support, it is preferred to center two sets of screws over wall studs. If this is not possible, at least one set must be over a stud. For screws NOT positioned over a wall stud, drill pilot holes and install Expansion Bolts (B).

The Bracket must be secured to the wall in at least two locations with two sets of screws.

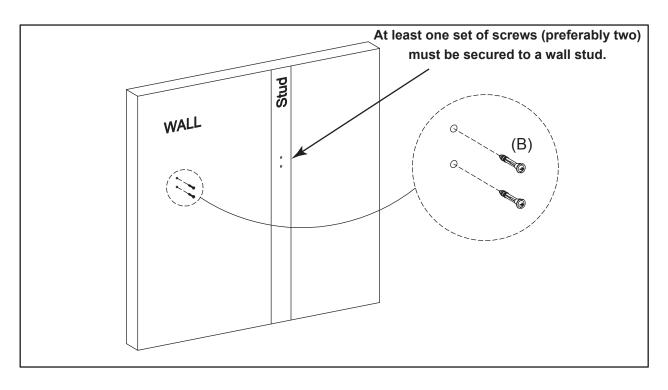


STEP 2: Use screwdriver to mount Bracket over marked locations on wall. Use Wood Screws (A) through Bracket into a stud and Expansion Bolts (B) into drywall. NOTE: At least two sets of screws must be mounted into a wall stud.

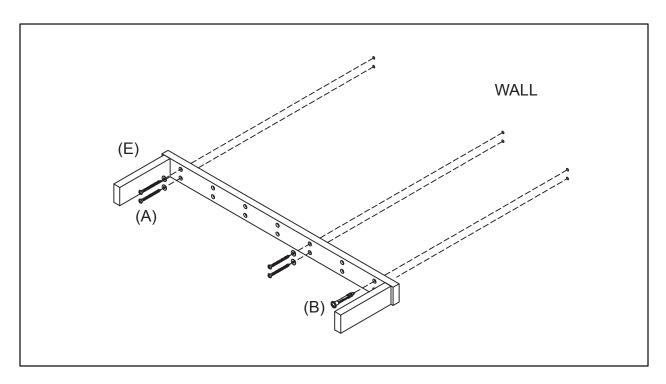


Customer Service: 800-367-2810 Online: www.ballarddesigns.com

STEP 3: Slide Shelf (D) onto Wall Bracket (E).

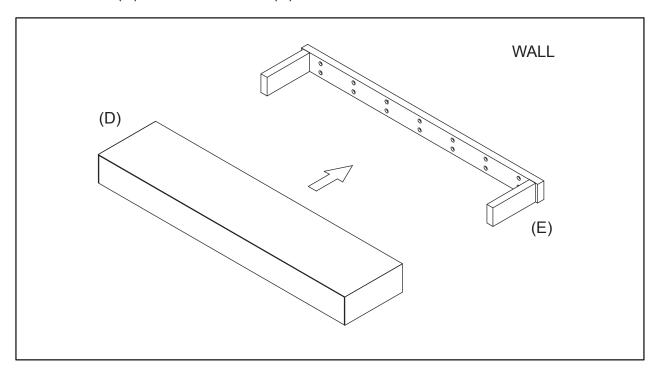

STEP 4: Using screwdriver, secure Shelf (D) to Bracket using Small Screws (C) through holes on underside of Shelf. Firmly secure.

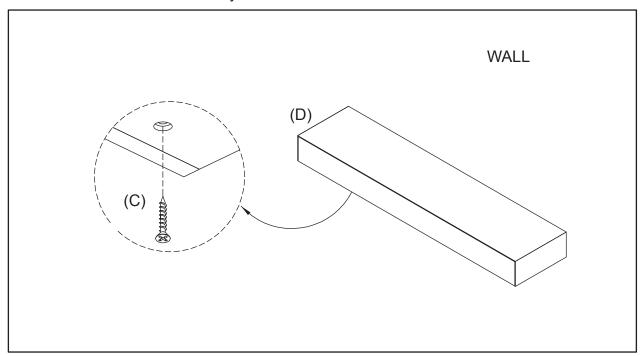

Cleaning & Care:


DO NOT use alcohol based products or spray polisher as they can damage the finish.

Dust with a soft cloth.

Customer Service: 800-367-2810 Online: www.ballarddesigns.com


EXPANSION BOLT INSTALLATION:

Note: Expansion Bolts are required when there is not a wall stud to screw the wood screws into.




TOOLS NEEDED:
-Hammer, Screwdriver,
Level, Pencil, Drill
and 1/4 Drill Bit.

Determine the desired height and location for your item. Use a level to ensure the item is perfectly horizontal. Use a pencil to lightly mark the screw holes onto the wall. Determine if the pencil marks are located on a stud. If there is no stud, drill a hole through the pencil marks with a 1/4 drill bit. Lightly tap the Expansion Bolts (A) into the holes and sink the teeth into the wall surface.

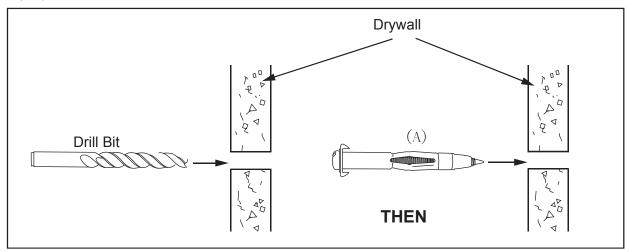

With a screwdriver, press down firmly and turn the bolt clockwise until the barrel crimps against the inside of the wall and the bolt starts to slip. Unscrew the bolt just enough to allow you to hang your item.

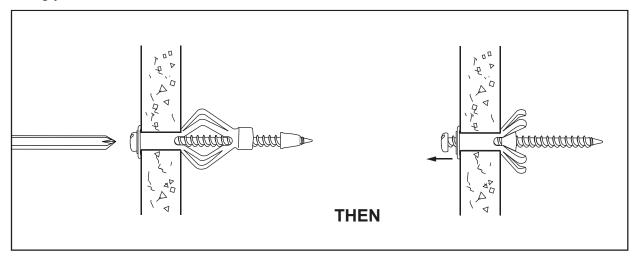

Customer Service: 800-367-2810 Online: www.ballarddesigns.com