




PRODUCT NAME: Apothicaire Cabinet

ITEM NUMBER: WS973

ASSEMBLED DIMENSIONS : 30 7/8"H x 21"W x 6 1/2"D

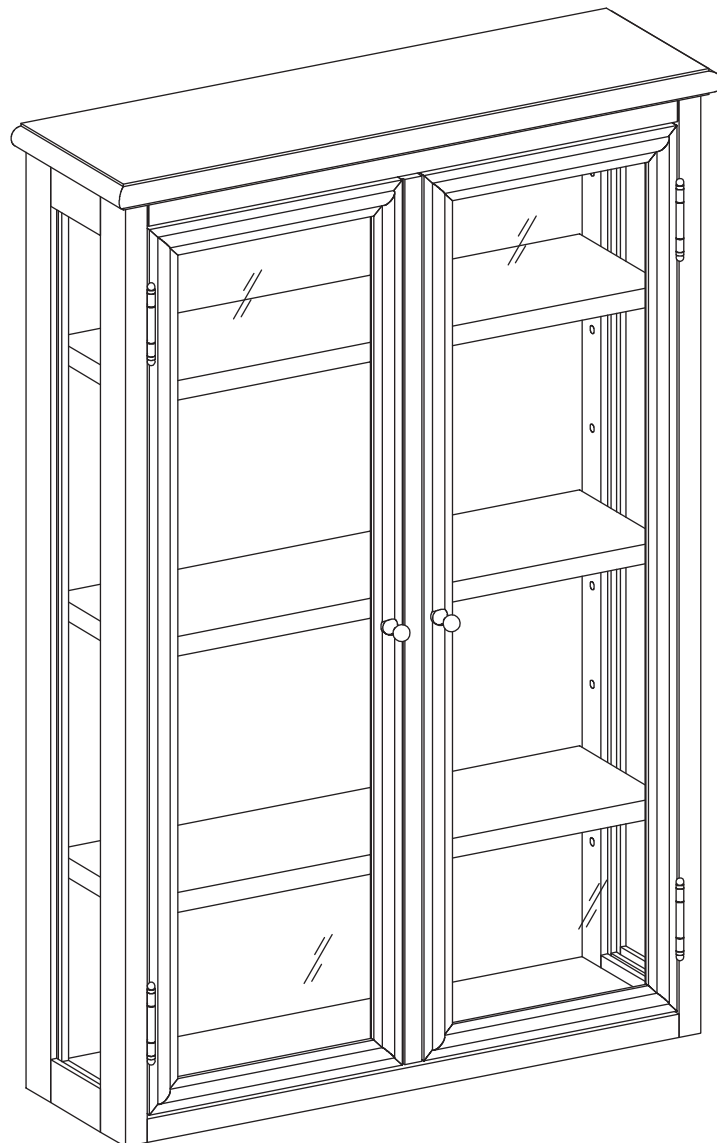


TOOLS NEEDED:

Phillips Screwdriver, Drill, 3/8" Bit,
Level, Pencil


-Two person assembly suggested.


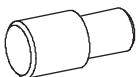
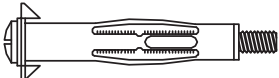
Remove all parts, hardware and
protective packaging from carton
and carefully arrange on a clean,
level, padded surface.




NOTE: To avoid accidentally
discarding small parts or hardware,
retain all carton contents until
assembly and installation are complete.

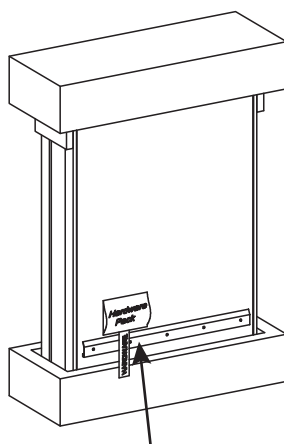

Hardware Packet

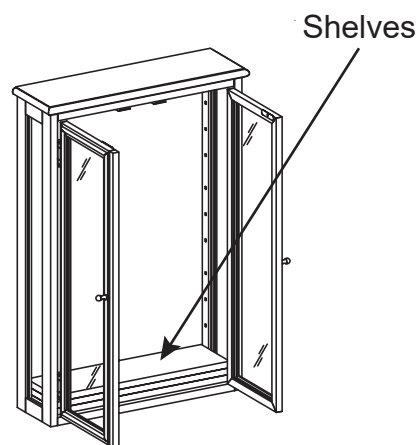


Ltr.	Qty.	Hardware Included	
A	2		Screws
B	12		Shelf Supports
C	1		Expansion Bolt

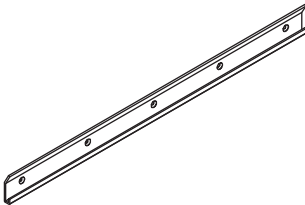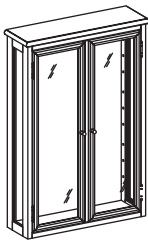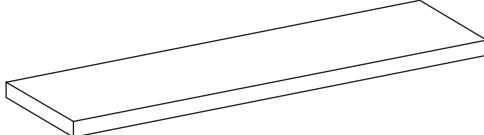Ltr.	Qty.	Components	
D	1		Wall Bracket
E	1		Cabinet
F	3		Shelves




STEP 1: Determine location for cabinet then use a Level and Pencil to position and mark location for Wall Bracket (D). Use Screws (A) in Wall Stud and Expansion Bolt (C) in open drywall.


NOTE: See Steps 2 and 3 for Expansion Bolt installation.

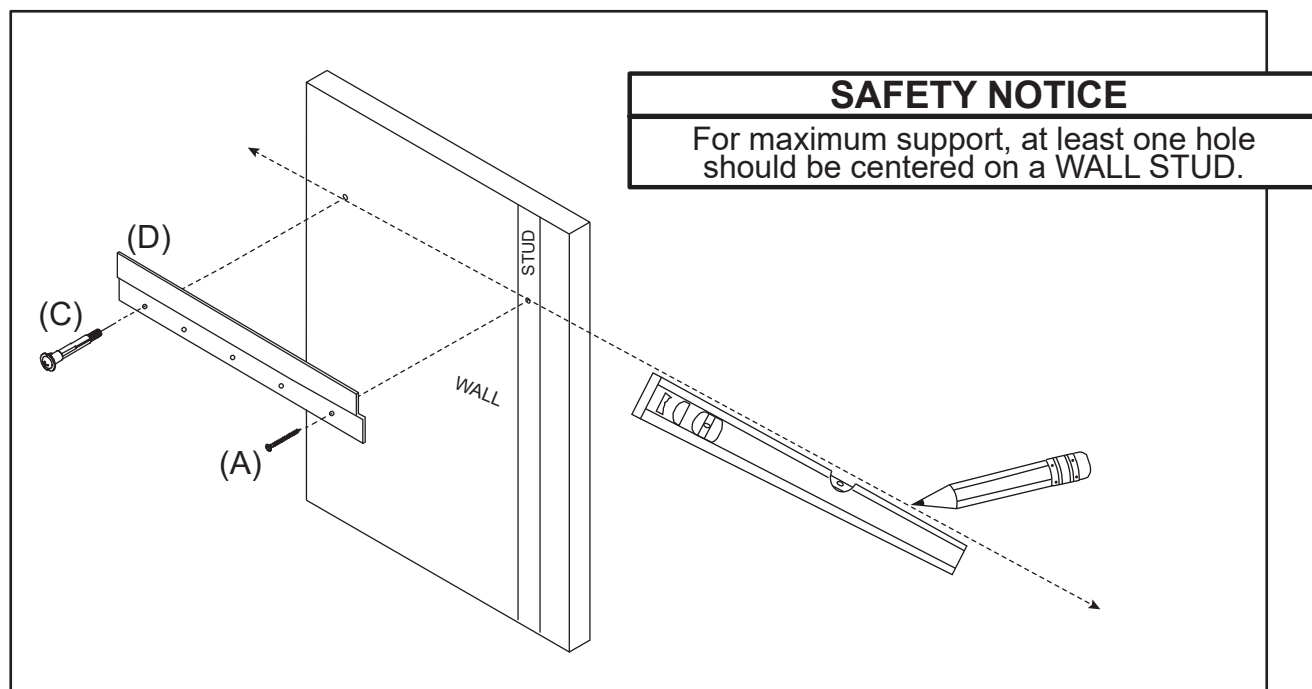


STEP 2: EXPANSION BOLT For holes located in open drywall (no Wall Stud) pencil mark location and use a drill and 3/8" bit to make a small pilot hole. Gently tap Expansion Bolt (C) into hole until teeth sink into wall surface.

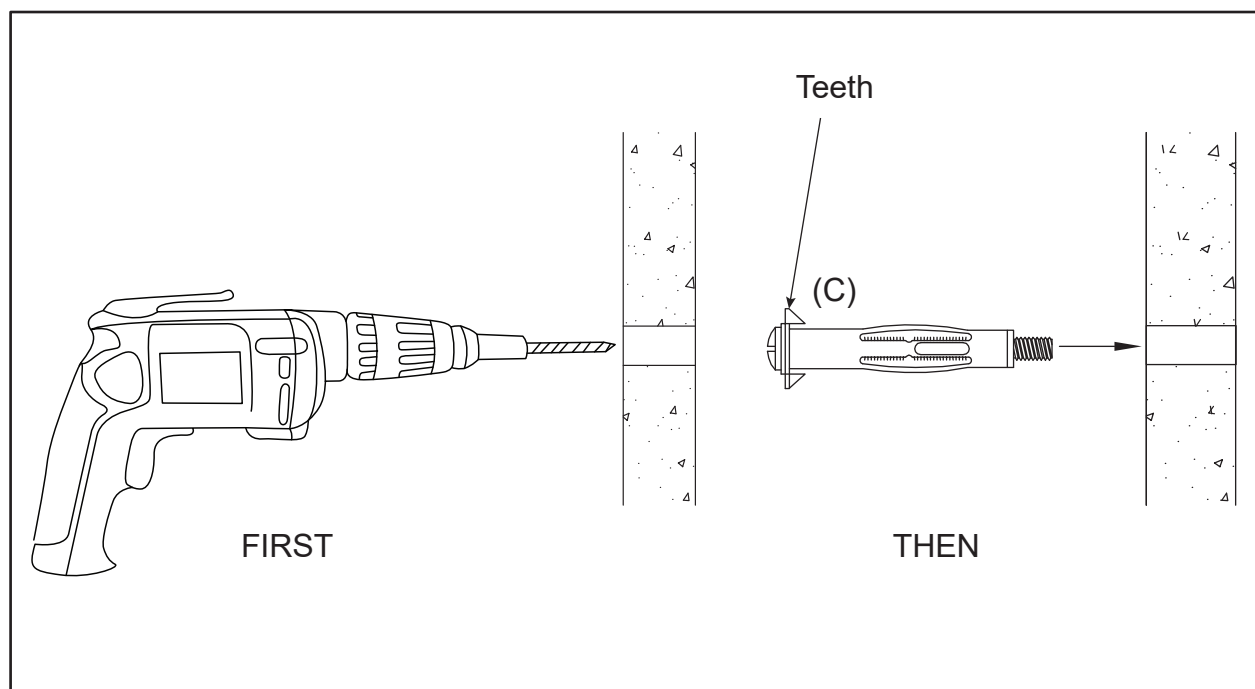


STEP 3: Using a Screwdriver, apply firm pressure while turning Bolt CLOCKWISE until Bolt begins to slip indicating the barrel has crimped against inside of drywall. Completely back out and remove Bolt from Wall. Place bracket on wall, align hole and replace Bolt. Firmly tighten to secure bracket.

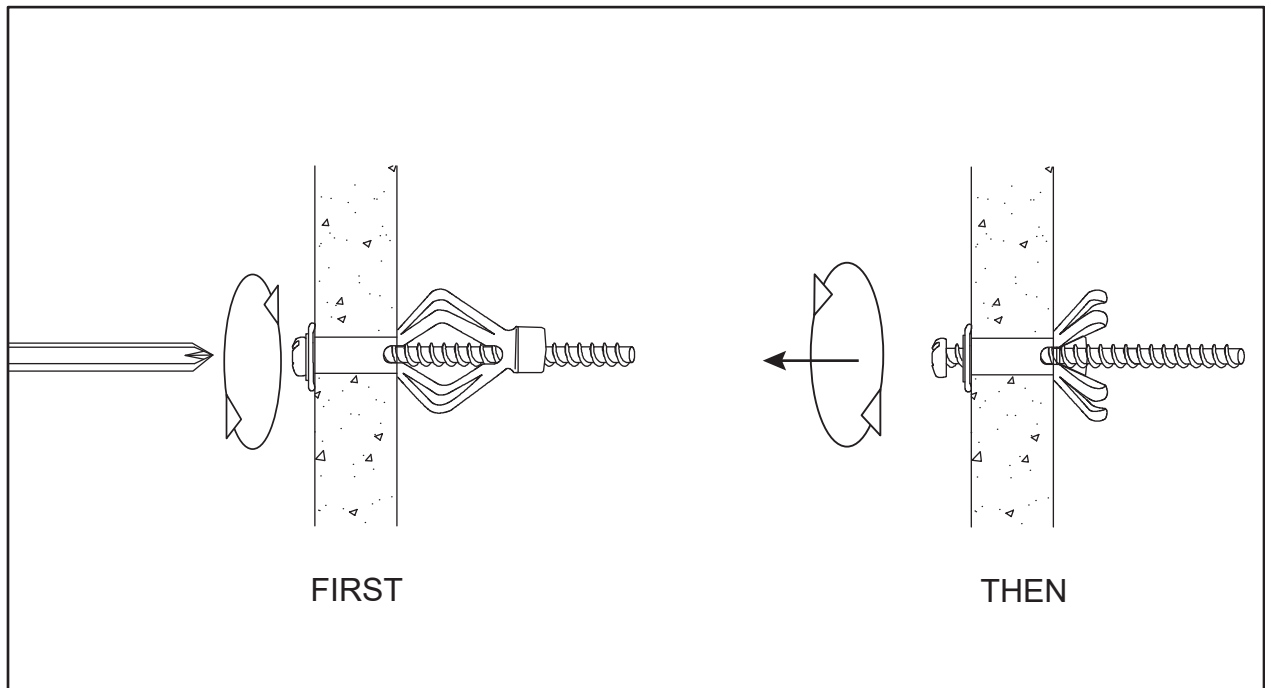


STEP 4: Once Bracket (D) is secured to wall, align and engage Bracket on back of Cabinet (E) with Bracket on wall. First, lift Cabinet Bracket over Wall bracket then gently slide Cabinet down to engage bracket.

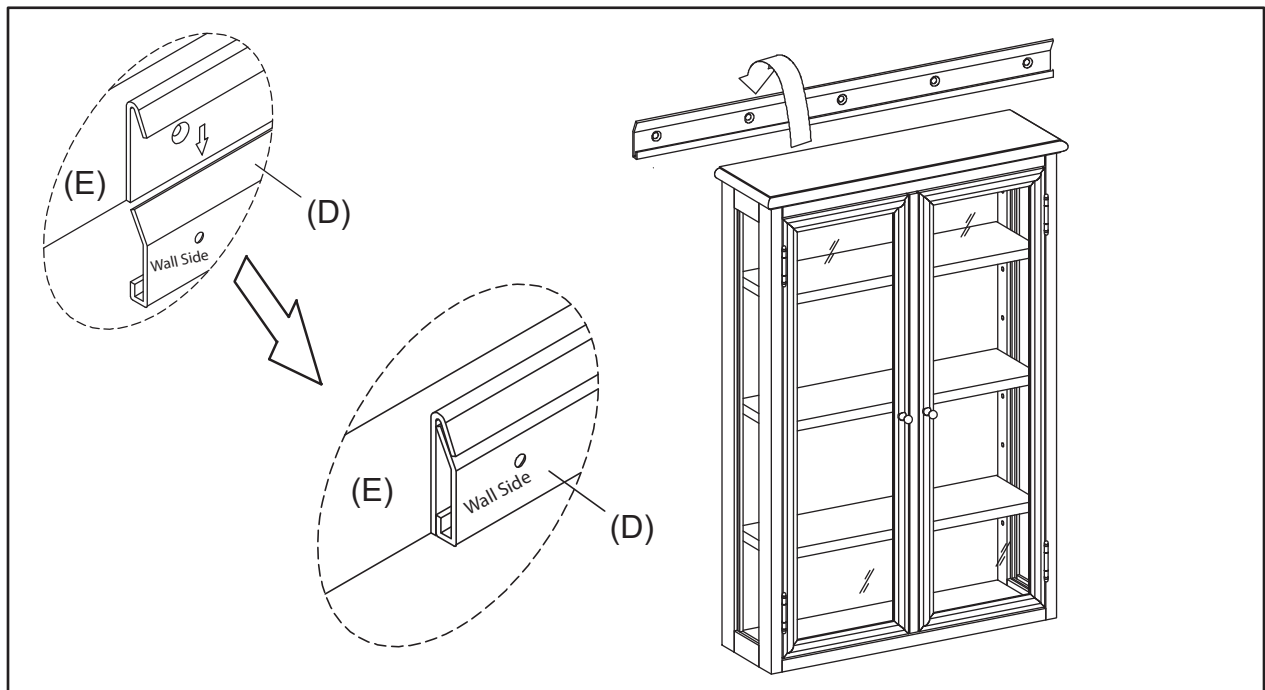

STEP 5: Determine placement for each Shelf (F) then insert Shelf Supports (B) in corresponding pre-drilled holes. Gently place Shelf upon Supports.

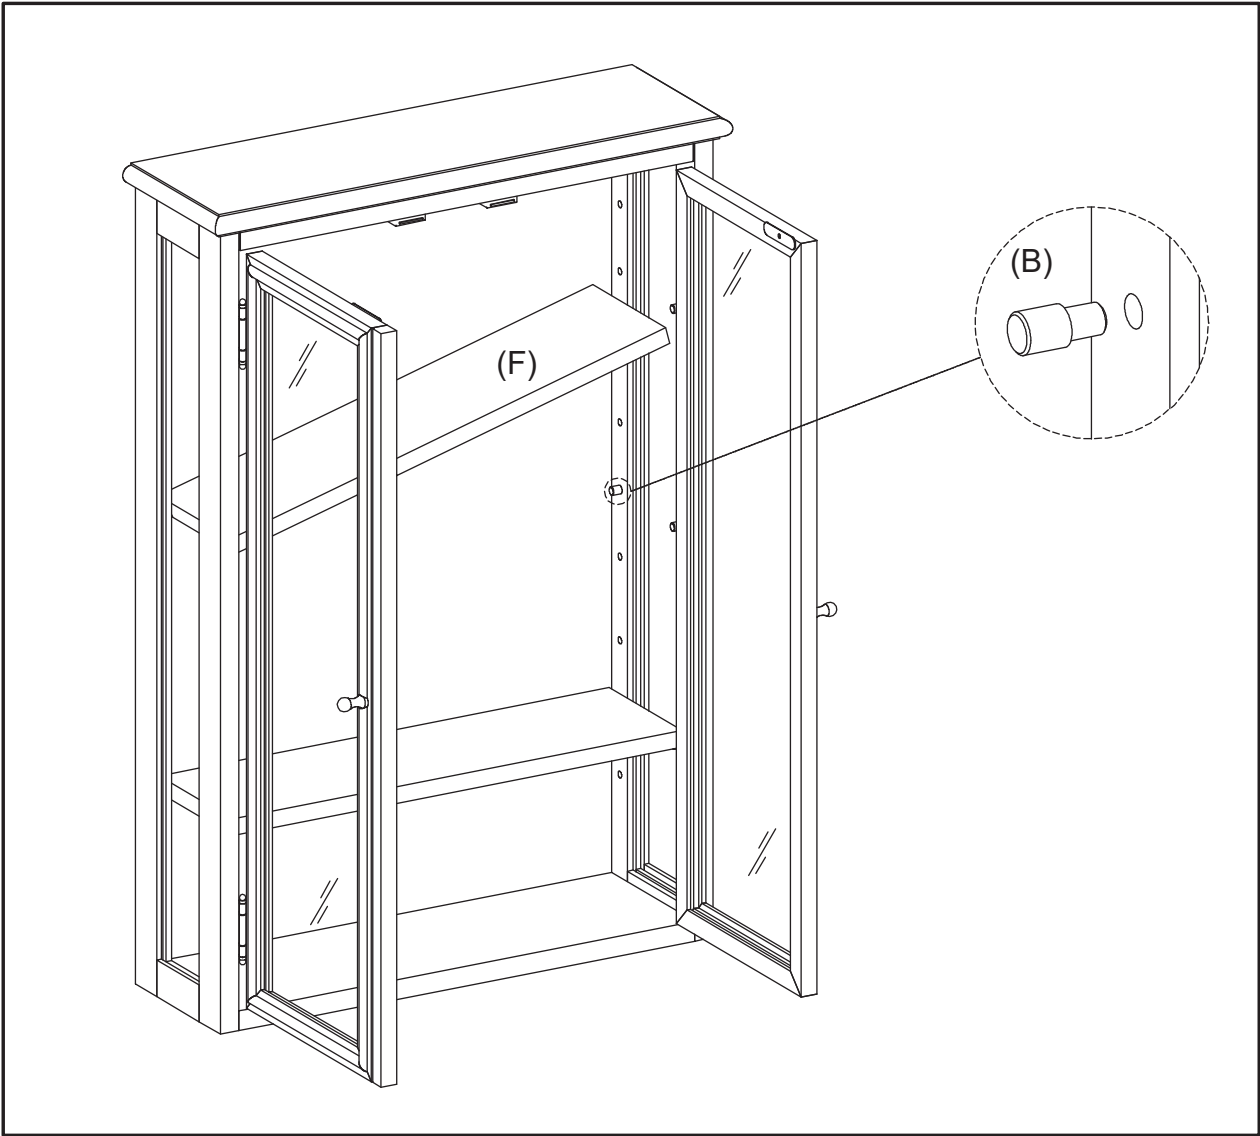

	Cleaning and Care	
	Periodically dust with a soft, dry cloth. Protect surfaces to prevent damage. Do not use alcohol based cleaners or polishes.	

