

PRODUCT NAME: Ballard Custom Drapery Hardware Collection - Hudson Collection

ITEM NUMBER: WY021

DIMENSIONS OF ITEM ASSEMBLED: 28-48 IN x 1" Square Rod.  
48-88 IN x 1" Square Rod.  
60-108 IN x 1" Square Rod.

## TOOLS NEEDED

- Assembly requires a Phillips head screwdriver.
- Suggested to have a level, tape measure, and a pencil.
- Suggested to have a power drill with 3/16" drill bit if mounting anchors into drywall.
- If mounting directly into wall studs, no drill bit is needed.
- Be sure to locate all hardware before throwing away any packaging.

## COMPONENTS

- Closed Brackets (Each Bracket Includes: 2 Screws, 2 Anchors, 2 Flat Screws, and 1 Set Screw)
- Open Bracket(s) (Each Bracket Includes: 2 Screws, 2 Anchors, 2 Flat Screws)
- Rod
- End Caps (Optional)
- Rings (Optional)


## PIECES REQUIRED FOR ASSEMBLY:

28-48 IN: 2 Closed Brackets, End Caps, Rings (Optional).


48-88 IN: 2 Closed Brackets, 1 Open Bracket, End Caps, Rings (Optional).

60-108 IN: 2 Closed Brackets, 1 Open Bracket, End Caps, Rings (Optional).

Closed Bracket

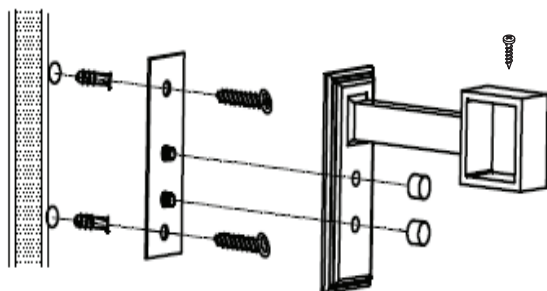

Open Bracket

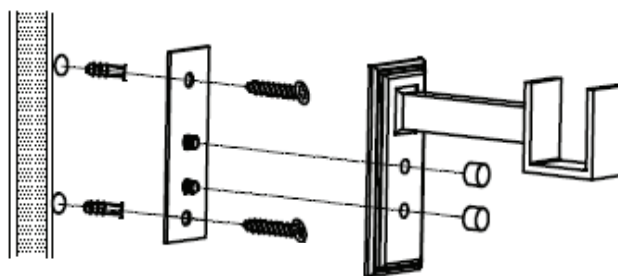


## ASSEMBLY INSTRUCTIONS

- STEP 1. Position Brackets on Wall at desired position above window. All rods sizes require a Closed Bracket at each end. 48-88" Rods and 60"-108" Rods require 1 Open Bracket for additional center support.
- STEP 2. To mount the Bracket, first remove the Flat Screws on the front of the Bracket to remove the Backplate. Then align the Backplate against the wall. Mark the Backplate screw locations with a pencil.
- STEP 3. Pre-drill marked screw locations with a 3/16" drill bit if using supplied anchors in drywall. If mounting directly into wall studs, no pre-drilling or anchors are required.

## ASSEMBLY INSTRUCTIONS (CONTINUED)

STEP 4. Insert anchors into the drilled holes (unless using wall studs). Mount Backplates to the Wall with the screws provided using a screwdriver or power drill. Do not overtighten the Screws. Then secure the Brackets to the Backplate by tightening the Flat Screws.

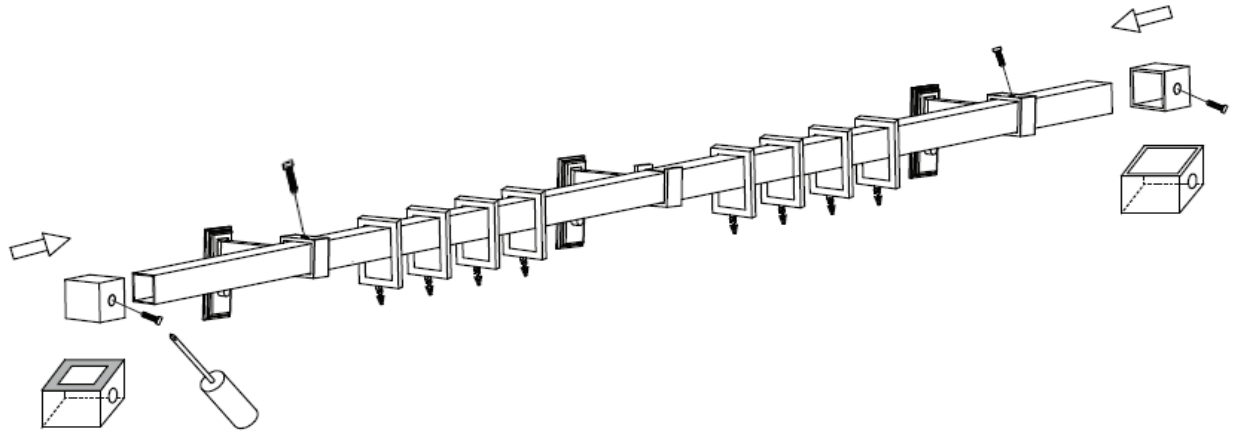

STEP 5. If hanging drapery without rings, feed the curtain through the rod. If using rings, slide the rings onto the rod, and attach the curtain once the rod is installed.

STEP 6. Place the rod into the Brackets. Secure the End Caps on each end of the rod using a screwdriver.  
NOTE: The thickness on the interior of each End Caps is different. Secure the End Cap with a thinner edge onto the larger rod, and the End Cap with the thicker edge onto the smaller rod. (See above).

STEP 7: Tighten the Set Screws on each Closed Bracket to hold the rod firmly in place using a screwdriver.  
NOTE: The Set Screws are two different lengths so that they will sit flush with the Bracket.  
Use the longer set screw on the Bracket holding the smaller Rod, and the shorter set screw on the Bracket holding the larger rod.

STEP 8: Once the rod is installed, attach the curtain to the rings (if applicable).